

SMITHCO

Wayne, Pennsylvania 19087

OPERATOR'S MANUAL

SPRAY STAR 1600P

Model 1607P

November, 1999

Revised 2-8-02

SMITHCO PRODUCT SUPPORT

1-800-891-9435

Hwy SS and Poplar Avenue, Cameron WI 54822

E-mail: productsupport@smithco.

CONTENTS

Introduction

Operation

Maintenance

Spraying Procedure

Nozzle Charts

Reference

Introduction	1-10
Introduction	1
Symbols	2-3
General Safe Practices	4
Safe Spraying Practices	5
Specifications	6
Optional Spray Equipment	6
Set Up	7-8
Controls & Instruments	9-10
Operation	11-29
Operating Instructions	11-13
Console Features	14
Programming Guidelines	15
Programming of Console Computer	15-24
Operating Instructions	25-26
Features	26-27
Spray Operation	28-29
Schematics	30-31
Hydraulic Schematic	30
Wiring Schematic	31
Spraying Procedure	32-38
Spraying Introduction	32
Turf Management	32
Hose & Handgun Spraying	33
Nozzles	33-34
Calibration Introduction	35
The Nozzle Chart Method of Calibration	36-37
The "128" Method of Boom Sprayer Calibration ...	37-38
Nozzle Charts	40-47
Nozzle Performance Chart #1	40
Nozzle Performance Chart #2	41
Nozzle Performance Chart #3	42
Nozzle Performance Chart #4	43
Nozzle Performance Chart #5	44
Nozzle Performance Chart #6	45
Nozzle Performance Chart #7	46
Nozzle Performance Chart #8	47
Reference	48-49
Abbreviations and Conversions	48
Declaration of Conformity	49
Limited Warranty	Inside Back Cover

Thank you for purchasing a **SMITHCO** product.

Read this manual and all other manuals pertaining to the Spray Star carefully as they have safety, operating, assembly and maintenance instructions. Failure to do so could result in personal injury or equipment damage. Keep manuals in a safe place after operator and maintenance personnel have read them. Right and left sides are from the operator's seat, facing forward.

All **SMITHCO** machines have a Serial Number and Model Number. Both numbers are needed when ordering parts. The serial number plate on the Spray Star is located on the front left side of the main frame. Refer to engine manual for placement of engine serial number.

For easy access record your Serial and Model numbers here.


SMITHCO			
WAYNE, PENNSYLVANIA 19087 USA 610-688-4009 Fax 610-688-6069			
○	YEAR OF MFG.	○	
SERIAL NO.	<input type="text"/>	<input type="text"/>	kW/hp
MODEL NO.	<input type="text"/>	<input type="text"/>	kg/lb



Information needed when ordering replacement parts:

1. Model number of machine.
2. Serial number of machine.
3. Name and part number of part.
4. Quantity of parts.

SYMBOLS

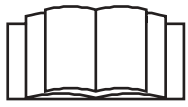

Read Operator's Manual



Electrical Power



No Electrical Power




Engine - Stop



Engine - Start




Engine - Run

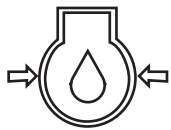


Engine Oil




Temperature Light

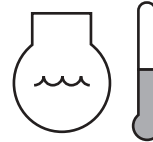

Water Temperature

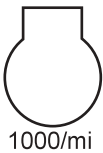

RPM

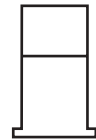

Gasoline



Diesel



Glow Plug - On




Glow Plug - Off




Glow Plug



Hour Meter

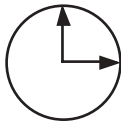

Hour Meter

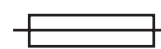

Fuse



Hand Throttle



Choke - Closed




Choke - Open



Park Brake




Park Brake Release

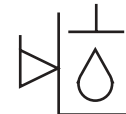

Hydraulic Oil Level



Up/Down Arrow

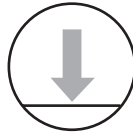


Down/Lower




Up/Raise



No Smoking

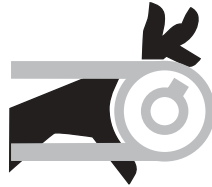

Moving Parts

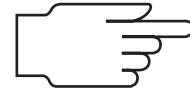

Manual Operation




Pinch Point




Step




Hot Surface

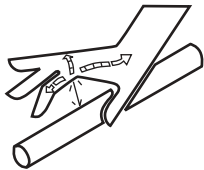

Hydraulic Fluid Penetration

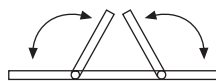

Lift Arm

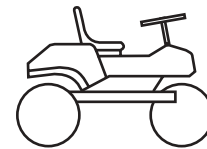

Tractor




Engage



Disengage



PTO

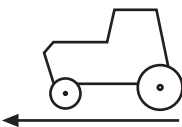

Ground Speed



Fast



Slow



High



Low



Forward



Reverse



Neutral




Warning
Danger
Caution

GENERAL SAFE PRACTICES

1. It is your responsibility to read this manual and all publications associated with this machine.
2. Never allow anyone to operate or service the machine or its optional equipment without proper training and instructions. Never allow minors to operate any equipment.
3. Learn the proper use of the machine, the location and purpose of all the controls and gauges before you operate the equipment. Working with unfamiliar equipment can lead to accidents.
4. Wear all the necessary protective clothing and personal safety devices to protect your head, eyes, ears, hands and feet. Operate the machine only in daylight or in good artificial light.
5. Inspect the area where the equipment will be used. Pick up all debris you can find before operating. Beware of overhead obstructions and underground obstacles. Stay alert for hidden hazards.
6. Never operate equipment that is not in perfect working order or without decals, guards, shields, or other protective devices in place.
7. Never disconnect or bypass any switch.
8. Carbon monoxide in the exhaust fumes can be fatal when inhaled, never operate a machine without proper ventilation.
9. Fuel is highly flammable, handle with care.
10. Keep engine clean. Allow the engine to cool before storing and always remove the ignition key.
11. Disengage all drives and set park brake before starting the engine.
12. Never use your hands to search for oil leaks. Hydraulic fluid under pressure can penetrate the skin and cause serious injury.
13. This machine demands your attention. To prevent loss of control or tipping of the vehicle:
 - A. Use extra caution in backing up the vehicle. Ensure area is clear.
 - B. Do not stop or start suddenly on any slope.
 - C. Reduce speed on slopes and in sharp turns. Use caution when changing directions on slopes.
 - D. Stay alert for holes in the terrain and other hidden hazards.
14. Before leaving operator's position:
 - A. Disengage all drives.
 - B. Set park brake.
 - C. Shut engine off and remove the ignition key.
 - D. If engine has to run to perform any maintenance keep hands, feet, clothing and all other parts of body away from moving parts.
15. Keep hands, feet and clothing away from moving parts. Wait for all movement to stop before you clean, adjust or service the machine.
16. Keep the area of operation clear of all bystanders.
17. Never carry passengers.
18. Stop engine before making repairs/adjustments or checking/adding oil to the crankcase.
19. Use parts and materials supplied by **SMITHCO** only. Do not modify any function or part.
20. Use caution when booms are down as they extend out beyond the center line of the machine approximately 10 ft. (3 m).
21. The tank is a confined space, take precaution.

These machines are intended for professional maintenance on golf courses, sports turf, and any other area maintained turf and related trails, paths and lots. No guaranty as to the suitability for any task is expressed or implied.

Persons engaged in the handling, preparation or application of chemicals must follow accepted practices to insure the safety of themselves and others,

1. **WEAR** protective clothing including: gloves, hat, respirator, eye protection and skin covering suitable for protection from chemicals being used.
2. **BATHE** thoroughly after any exposure to chemicals, giving particular attention to eyes, nose, ears and mouth.
3. **CLEAN** equipment and materials in accordance with employer, municipal and state regulations. Use only approved areas and drains.
4. **DISPOSE** of chemicals and rinse solutions by approved and legal means.
5. **PROVIDE** methods and materials for operators to wash eyes and hands immediately during the spraying process.
6. **PROVIDE** methods and materials for control, safe dilution and neutralization of chemical spills during preparation, spraying, transporting and cleanup.
7. Always check and follow the directions and safety warnings of the chemicals to be used.
8. Secure the discharge lines before starting the pump. An unsecured discharge line may whip.
9. Periodically inspect the pump and the system components.
10. Check hoses for weak or worn condition before each use. Make certain that all connections are tight and secure.
11. Do not operate unit with leaks, frayed, kinked hoses or tubing. Repair or replace immediately.
12. Use only pipe, hose and fittings rated for maximum pressure or pressure at which pressure relief valve is set at. When replacing pipe, hose or fittings, use new product.
13. Do not operate a gasoline engine in an enclosed area. Be sure the area is well ventilated.
14. Do not use these pumps for pumping water or other liquids for human or animal consumption.
15.  **Do not pump flammable or explosive fluids such as gasoline, fuel oil, kerosene, etc. Do not use in explosive atmospheres. The pump should be used only with liquids compatible with the pump component materials.**
WARNING
16. Be sure all exposed moving parts are guarded and that all coupling devices are securely attached before applying power.
17. Before servicing, disconnect all power, make sure all pressure in the system is relieved, drain all liquids from the system and flush.
18. Protect pump from freezing conditions by draining liquid and pumping rust inhibiting antifreeze solution through the system, coating the pump interior.

SPECIFICATIONS

WEIGHTS AND DIMENSIONS

Length	112" (285 cm)	
Width	61" (155 cm)	Width With Booms Down 230" (584 cm)
Height	50" (127 cm)	Height With Booms Up 126" (320 cm)
Wheel Base	60" (152 cm)	
Weight Empty	1200 lb (544 kg)	Weight Loaded 2500 lb (1134 kg)

SOUND LEVEL AT 3400 RPM

At ear level	84 dba
At 3 ft. (0.914 m)	82 dba
At 30 ft (9.14 m)	68 dba
At 23 ft (7 m) pass by	70 dba

ENGINE

Make	Kohler
Model#	Command CH20S
Type / Spec#	64558
Horsepower	20 hp (15 kW)
Fuel	Unleaded 87 Octane Gasoline Minimum
Cooling System	Air cooled
Lubrication System	Full pressure
Alternator	25 Amp

WHEELS & TIRE

Front (2)	20 x 1000 x 10 Multi-rib 20 psi (1.4 bar)
Rear (2)	24 x 1300 x 12 Super Soft 18 psi (1.3 bar)
Ground Pressure: 8.2 psi with 160 gallons	

SPEED

Working Speed	1st gear 0-3 m.p.h. (0-5 kph) 2nd gear 2-6 m.p.h. (3-10 kph)
Transport Speed	3rd gear 4-10 m.p.h. (6-16 kph)
Reverse Speed	0-3 m.p.h. (0-5 kph)

BATTERY

	Automotive type 24F-12 volt
BCI Group	Size 24
Cold Cranking Amps	575 minimum
Ground Terminal Polarity	Negative (-)
Maximum Length	10.25" (26 cm)
Maximum Width	6.88" (17 cm)
Maximum Height	10" (25 cm)

FLUID CAPACITY

Crankcase Oil	2.1 quart (2 liters) with filter
Fuel	8 gallon (30.25 liters)
Hydraulic Fluid	1 gallon (3.785 liters)
Grade of Fluid	SAE 10W-40 API Service SJ or higher motor oil

OPTIONAL SPRAY EQUIPMENT

14-100	Super Boom 20' (6 meter) Long	10-300	18' Terrain Following Boom
15-363	Fresh Water Wash Tank	10-301	15' Terrain Following Boom
14-311	Hose Reel Mounting Frame	15-493	Auto-Boom 18' (5.5 m) Long
15-571	15' Tri-Section Electric Lift Star Shield Boom	15-577	18' Manual Lift Boom
15-572	15' Dual Section Electric Lift Star Shield Boom	14-301	440 Spray System (1602P)
15-573	15' Manual Lift Star Shield Boom	14-302	203 Spray System (1604P)
16-856	Tank Rinsing System	14-303	Manual Spray System (1610P)
16-129	Hose Reel 200' (61 m) capacity (to be used with 14-311)	14-304	844 Spray System (1607P)
16-906	Hose Reel 12 volt electric rewind 200' (61 m) capacity (to be used with 14-311)	15-501	Foam Marker System (Factory Installed)
		15-499	Foam Marker System (Dealer Installed)



The Model 1600P Prime Mover arrives from **SMITHCO** setup and ready for service. Depending on freight conditions the tires, wheels and steering wheel may need to be installed.


The spray system is normally shipped attached to the 1600P Prime Mover. If a spray system is to be retrofitted to a 1600P Prime Mover by a dealer or owner, assemble and attach the components in accordance with the parts drawings in the *Spray Star 1600P Parts/Service Manual*.

1. Remove the top and sides from the shipping crate then remove the banding from the Spray Star.



Banding is under tension.


2. Lift front end using a hydraulic jack, taking care that the jack is not placed in a location that would damage any steering system components, install front wheels and torque nuts to 64-74 ft/lb (87-100 Nm). Then raise rear axle using a hydraulic jack and install rear wheels and tires, torque lug nuts to 64-74 ft/lb (87-100 Nm). Torque again after the first 10 hours and every 200 hours thereafter.
3. Set park brake.
4. Check the tire pressure. The front tires are 20 psi (1.4 bar) and the rear tires are 18 psi (1.3 bar).
5. Remove the tape holding woodruff key (Ref B) to the shaft. Put steering wheel (Ref A) on the shaft of the steering mechanism (Ref C). Tighten nut to 30-40 ft/lb (41 - 54 Nm). **Do not over tighten.**

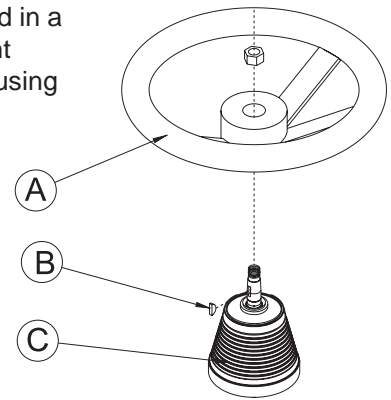

6. Install the seat with the stud going through the engine cover and the flat washers, lock washers and nuts. Use the front set of holes for shorter drivers and use the back set of holes for taller drivers.
7. Be sure battery (automotive type 24F-12 volt; 575 cold cranking AMPS minimum; 10.25" (260 mm) long x 6.88" (175 mm) wide x 10" (254 mm) high maximum case) is installed in proper position in the battery box, which is located on the left side of the engine compartment. Battery posts should be to the rear. This is a negative grounding system.



Connecting battery cables to the wrong post could result in personal injury and/or damage to the electrical system. Make sure battery and cables do not interfere or rub on any moving part. Connect red positive (+) cable (A) to battery first. When disconnecting remove black negative (-) cable (B) first.

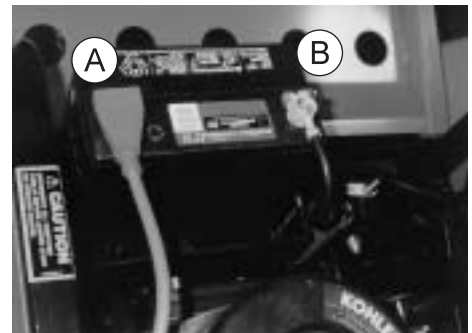

8. Check the engine oil and add as necessary. The dip stick is located in cutout hole behind the seat on the left side. Oil fill is located on top of valve cover, use SAE 10W-40 API Service SJ or higher motor oil. **DO NOT OVERFILL.**
9. Fill fuel tank, located on right side, with Unleaded 87 Octane gasoline (minimum).



Gasoline is flammable, caution must be used when storing or handling it. Do not fill fuel tank while engine is running or an enclosed area, fumes are explosive and dangerous to inhale. DO NOT SMOKE while filling the fuel tank. DO NOT OVERFILL.



SET UP (CONTINUED)

10. Check brake fluid in master cylinder by removing round plug on floorboard. Add brake fluid if necessary. DOT 3.
11. Check hydraulic fluid. The hydraulic power unit is located between the engine and the spray tank on the left hand side. Remove breather plug and add SAE 10W-40 API Service SJ or higher motor oil if necessary. Fluid level should be about 1.5" (38 mm) below top of tank when cold.
12. Check the transmission fill plug on the right hand side of the transmission and check the rear axle fill plug located on the back side. They should be filled with SAE 80W-90 Gear Lube API Service GL-5, GL-4 so that the level is even or a little below the bottom of the fill hole.
13. Machine should be greased before starting, refer to *Spray Star 1600P Parts/Service Manual* for location.
14. Attach the Spray Boom and any other Optional Equipment to the Prime Mover, in accordance with instructions in the *Spray Star 1600P Parts/Service Manual*. The nozzles must be the correct distance above the turf as described in *Spraying Procedure* of this manual. The spray boom must operate properly and the outer sections must break away safely if an object is struck by them, they must then return to normal operation position.
15. Be sure to double check boom heights, nozzle spacing and displacement before spraying.
16. Fill tank with water and retighten the four bolts used to hold the tank in place.
17. Read operating instructions before starting.

NOTE: Never allow pump to run dry! The valve on the suction side of the pump (between the pump and tank) must be fully open whenever the pump is operated.

DAILY CHECKLIST

1. Check park brake adjustment. Adjust as required.
2. Check engine oil level. Add as needed. DO NOT OVERFILL.
3. Tire pressure should be 20 psi (1.4 bar) front and 18 psi (1.3 bar) rear maximum.
4. Inspect electrical system for loose connections or frayed wiring, including battery cables. Replace any faulty equipment or tighten if loose.
5. Check hardware for loose or missing nuts, bolts, screws, etc., and tighten or replace as needed.
6. Inspect hydraulic lines for damage or leaks. Never use hands to inspect leaks.
7. Check brake fluid in master cylinder by removing round plug on floorboard. Add DOT 3 brake fluid if necessary.
8. Check hydraulic fluid. The hydraulic power unit is located between the engine and the spray tank on the left side. Remove breather plug and add SAE 10W-40 API Service SJ or higher motor oil if necessary. Fluid level should be about 1.5" (4 cm) below top of tank when cold.
9. Check the transmission fill plug on the right side of the transmission and check the rear axle fill plug located on the back side. They should be filled with SAE 80W-90 Gear Lube API Service GL-5, GL-4 so that the level is even or a little below the bottom of the fill hole.
10. Inspect steering, throttle and shift linkages for good hookups and clear travel.
11. Check anti-vibration mounts on engine frame.
12. Check controls for smooth, proper working operation. Lubricate as needed.



- A. Oil Light:** The Oil Light should come on when the ignition is on, without the engine running and should go out when the engine is running. The Oil Light will light when the oil pressure is low. If it does come on, shut off the engine and find the cause immediately.
- B. Circuit Breaker:** The circuit breaker is a resetable fuse. To reset push down.
- C. Ignition Switch:** The ignition switch has three positions: Off-Run-Start.
- D. Speedometer:** The speedometer indicates ground speed of vehicle in miles per hour and kilometer per hour.
- E. Hour/Volt Meter:** The hour meter indicates the hours of machine operation. The hour meter operates when the ignition switch is on. The volt meter indicates battery voltage. When starting, the battery voltage should not drop below 9 volts. With key on, engine running, the voltage should be 12 volts. With engine running at 3600 rpm the voltage should read about 14 volts.
- F. Buzzer:** The buzzer sounds if the pump is running dry.
- G. Pump On/Off Switch:** Turns pump on and off.
- H. Clutch Pedal:** Located to the left side on the floorboard. Must be pressed down to disengage the clutch and activate the interlock switch.
- I. Brake Pedal:** Located in the middle of the floorboard. Operates the hydraulic brakes on the rear axle.
- J. Accelerator Pedal:** Located on the right side of floor board. This pedal controls ground speed. Press pedal to increase engine RPM, varying the amount of movement of the pedal will vary the ground speed.



SEAT ADJUSTMENT

Adjustment lever is located under the front of the seat on the right side. It allows the seat to be adjusted forward or backwards for the operator's comfort. For further adjustment unbolt seat from seat panel, move to other set of holes and re-bolt.

STEERING

Hydraulic steering. Before operating acquaint yourself with the steering.




Avoid sharp turns at high speeds, on slopes or unsafe terrain.

CONTROLS & INSTRUMENTS (CONTINUED)

CONTROL PANEL


Located on right side of seat. The following are located on or near the control panel.

- A. **Choke:** Pull out choke when starting cold engine, push in when engine starts.
- B. **Ground Speed:** Ratchet lever with a scale of "1-10", 10 is the fastest, 0 is the slowest. The Ground speed control is a device that limits the accelerator movement at the engine. Its purpose is to provide the operator with the ability to maintain a constant ground speed (predetermined) by the full depression of the accelerator pedal.
- C. **Shift Lever:** Gear selection, with the shift pattern on the shift knob.
- D. **Hand Throttle:** This hand throttle is used for hose/handgun spraying, boom spraying and sprayer calibration. It controls engine RPM, forward for fast, opposite direction for slow. (Not to be used when in motion).
- E. **Right and Left Boom Switches:** These toggle switches are used to raise and lower the right and left electric actuated booms.

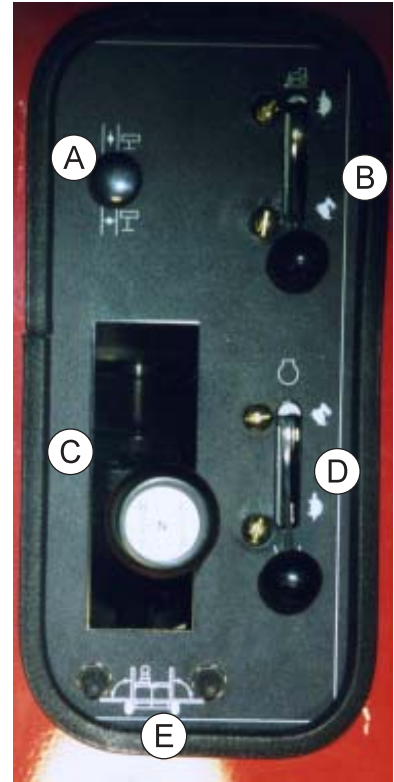

FOAM MARKER CONTROLS

- F. **Park Brake:** Push to the front and down to set park brake and pull back to release. Some adjustments can be made to park brake by turning knob on the of the lever. To tighten, turn knob clockwise. To loosen turn counter clockwise.
- G. **Foamer ON/OFF Switch:** Located to the right of the control panel. Used to turn on and off the foam marker. Also, used to designate which boom is to be used to dispense foam. With lever pointing toward the seat foam will dispense from right boom, and with lever pointing forward foam will dispense from the left boom.

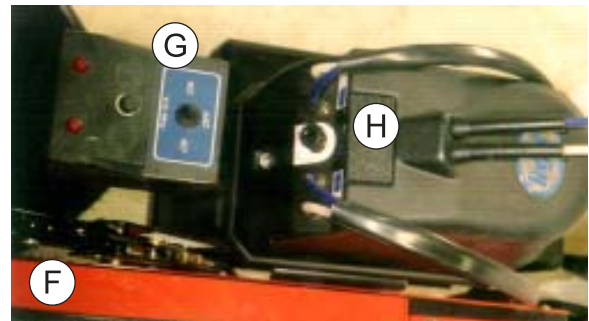

- H. **Foamer Adjustment Knob:** Located behind the seat on the right side on top of the foamer. Use this knob to adjust pressure of the foam that will be dispensed.

ELECTRONIC SPRAY CONTROL SYSTEM

Pressure must be set with sprayer in operation (booms on). Increase pressure by pushing the pressure adjustment handle upwards. Once the console reaches maximum pressure, the motorized control valve in the sprayer then begins to open and pressure begins to decrease. Push switch in either direction until desired pressure is reached. The system provides operation of one, two or three booms and it controls sprayer pressure indicated by a wet pressure gauge on the vehicle. The pressure gauge reads the pressure in psi. The control system is operated by the 12 volt electrical system of the vehicle. The master switch controls all boom switches. Boom switch #1 controls left boom, boom switch #2 controls center boom, and boom switch #3 controls right boom. Pressure switch increases or decreases spraying pressure through the motorized control valve.

Before operating the Spray Star 1600P, become familiar with all controls and functions. Also complete all maintenance requirements and read all safety warnings. Knowing the Spray Star 1600P thoroughly, how it operates, and by doing the prescribed maintenance steps, you can expect trouble free operation for years to come.


SAFETY

Safety needs to always be the concern of an operator of a moving vehicle or any machine with moving parts.

1. Keep all shields and guards in place.
2. Keep the parking brake engaged any time the operator is away from the vehicle or whenever service is performed.
3. Always wear the necessary protective clothing and equipment.
4. Turn engine off when refueling or performing maintenance not specifically requiring engine power.

STARTING THE ENGINE

1. Make sure the fuel flow valve is 'On'. It is located on the fuel tank.
2. Make sure the spray pump is disengaged.
3. Depress the clutch pedal to activate the interlock switch.
4. Place shift lever in neutral.
5. The ignition switch is located between the hour meter and ammeter on the dashboard. Insert the key (A) and turn clockwise until the engine starts (C). Release the key and it will return to the run position (B). Use the choke and hand throttle as necessary.
6. Allow engine to idle and warm up before selecting direction of travel.
7. Make sure the park brake is disengaged.

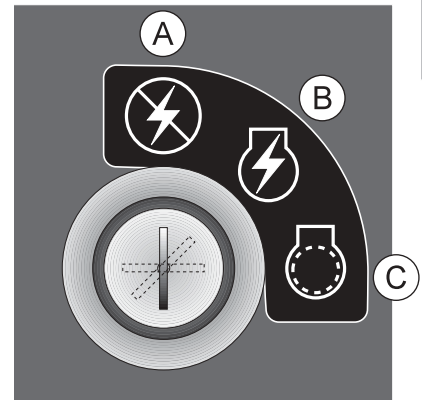

STOPPING THE ENGINE

NOTE: If the engine has been running under high power, let it run at slow idle speed a few minutes to cool the engine down, before turning the ignition switch to the OFF position.

1. Disengage spray pump.
2. Move the throttle lever to "slow" and turn ignition key to the "off" position.
3. Remove the ignition key and engage the park brake.



Never leave the vehicle unattended with the engine running. Always bring the vehicle to a complete stop, engage park brake, turn key off and remove key.

OPERATING INSTRUCTIONS (CONTINUED)

Before using the Spray Star, the operator or spray technician must familiarize themselves with all of the information on chemical spraying contained in *Spraying Procedure* of this manual.

NOTE: All testing and calibration of sprayers is to be done with water, not chemicals. This insures the safety to all involved in performing the calibration operation. Only after all calibration procedures are completed should chemical be added to the sprayer.

OPERATION OF THE 3-SPEED TRANSMISSION

The transmission provides 3 forward speeds and reverse. The operator selects the speed (gear) in which he or she wishes to operate depending on the ground speed desired. The Spray Star can be started and operated in any speed. It is not necessary to start in low gear.

GEAR	RATIO	USE	SPEED RANGE
1st	2.60:1	Spraying	0-3 m.p.h. (0-5 kph)
2nd	1.63:1	Spraying	2-6 m.p.h. (3-10 kph)
3rd	1.00:1	Transporting	4-10 m.p.h. (6-16 kph)
Reverse	3.54:1	Reverse	0-3 m.p.h. (0-5 kph)

Select the gear desired by moving the shift lever located at the operator's right side to the point indicated by the shift pattern found on the shift knob.

Spraying should be done in the lowest gear possible that will provide the desired ground speed. This will maximize pump performance and minimize ground speed variance due to uneven terrain.

GROUND SPEED CONTROL

1. Select the gear to be used.
2. Place the Ground Speed Control lever at "10".
3. Start the vehicle and engage the clutch to begin moving.
4. Push the foot accelerator fully to the floor.
5. While the foot accelerator is fully depressed, begin moving the Ground Speed Control lever towards "0" until the correct operating speed is attained.
6. The desired speed will be maintained as long as the foot accelerator is fully depressed.
7. Vehicle will return to the established ground speed whenever the foot accelerator is fully depressed unless the Ground Speed Control lever has been moved to a different setting.
8. To operate the Spray Star at higher speed for transport, the Ground Speed Control lever should be returned to the "10" position.

HAND THROTTLE CONTROL LEVER

Transmission must be in neutral and park brake set when engine throttle control is used.

To increase the engine speed without holding your foot pedal down, use the engine throttle control lever on the right hand control panel. Push the lever forward until the desired rpm is attained.

This procedure will set the RPM allowing the operator to use the remote hose and handgun. It will also permit the operator to check the operation of the spray boom by observing it from the rear of the vehicle.

To release throttle control, pull back on the Lever allowing the engine to return to idle.

Transmission must be in neutral and parking brake set when engine throttle control is in use.



Never drive vehicle with engine speed increased by engine throttle lever. Loss of vehicle control may result.

TOWING UNIT

While towing the Spray Star 1600P place shift lever in neutral and disengage park brake.

HILLSIDE OPERATION

Do NOT stop or start suddenly on any slope. Be especially cautious when changing direction. Do NOT operate vehicle on slopes greater than 20°.

SPRAYER VALVE SETTINGS AND SPRAY TANK AGITATION

The gate valve on the suction side of the pump, between the tank and the pump must be open before pump is engaged. Close this valve only when necessary to clean the filter with spray material in the spray tank.

There are two manual flow control valves on the discharge side of the spray system. One controls the agitator. This valve may be opened as much as necessary to provide hydraulic agitation through the quadrajet agitator in the tank bottom. This valve may be partially closed to prevent or reduce foam buildup from the spray materials inside the tank. When the liquid level in the spray tank reaches a certain level (usually 1-25 gallons (3.8-95 Liters) depending on terrain and other conditions) it may be necessary to close the valve in the agitator line in order to prevent loss of suction prime.

If your Spray Star is fitted with a hose reel, there is a second ball valve on the discharge system to supply material to the hose reel.


The Quadrajet agitation system operates with four venturi jets in the tank bottom. These jets have replaceable orifice discs which discharge the following amounts of spray material.

Nozzle Diameter	Input to Agitator in gpm	Input to Agitator in L/min	Agitator Pressure in psi	Agitator Pressure in bar	Agitator Output in gpm	Agitator Output in L/min
1/8"	1.9	7.2	25	1.7	6.3	23.8
1/8"	2.7	10.2	50	3.4	10.0	37.9
1/8"	3.8	14.4	100	6.9	15.0	56.8
5/32"	2.8	10.6	25	1.7	7.6	28.8
5/32"	4.2	15.9	50	3.4	12.2	46.2
5/32"	5.5	20.8	100	6.9	17.5	66.2
3/16"	3.6	13.6	25	1.7	9.1	34.4
3/16"	5.6	21.2	50	33.4	14.3	54.1
3/16"	7.9	29.9	100	6.9	18.7	70.8

You can change orifice disc sizes to enhance spray system performance. Smaller discs reduce amount of agitation (desirable in some foaming materials) and make more dischargeable liquid available for nozzles. Larger (or none) discs increase amount of agitation and make less dischargeable liquid available for nozzles.

CONSOLE FEATURES

Operation

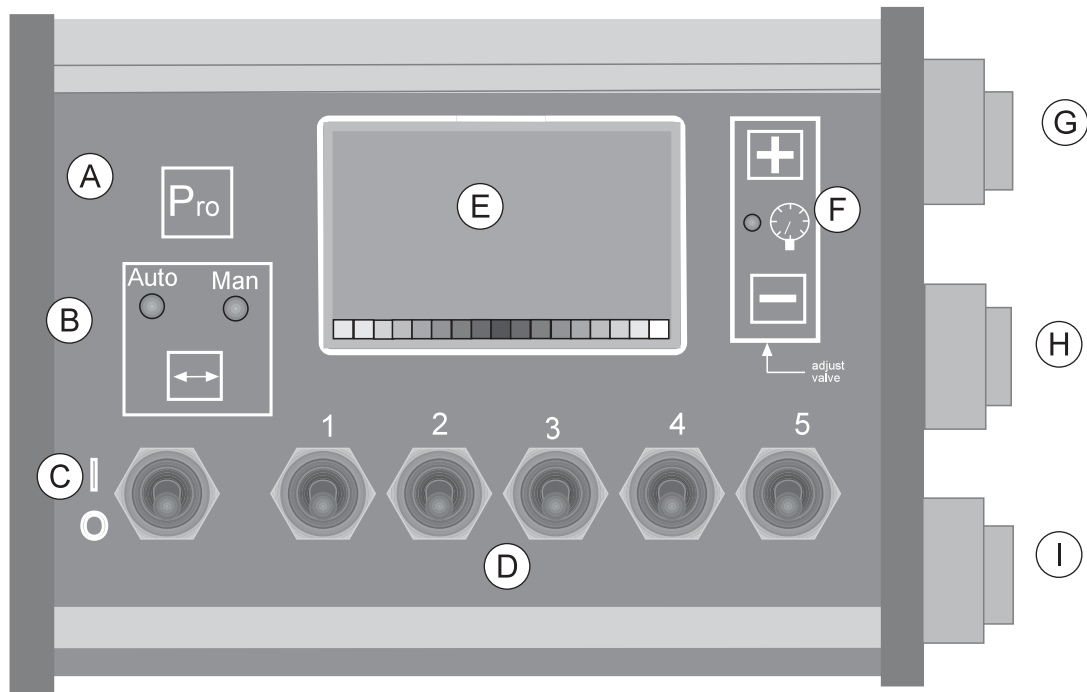

- A. Program Key - Used to access the programming mode.
- B. Auto/ Manual Key - Allows you to manually or automatically enter data.
- C. Master Boom Switch - Activates or stops boom spraying.
- D. Individual Boom Switches - Used to activate any up to 5 booms on the sprayer.
- E. LCD Display - In program mode, the default values are displayed. In operation mode, actual values are displayed.
- F. Value Changing Keys - The "+" and "-" keys are used to increase or decrease the values shown in the display.
- G. Sensor Cable Lead - provides connections to flowmeter and magnetic wheel sensor.
- H. Power Cable Lead - Main power cord.
- I. Valve Cable Lead - Provides connections to boom control valves and pressure regulating valve.

IMPORTANT PRELIMINARY INFORMATION

Before you begin, we recommend that you review the following Programming Guidelines that control the programming process.

1. For your convenience, the programming of the 844 has been divided into two programming categories; System Setup Mode and Application Setup Mode.
2. Depressing the **Pro** key once will flash "PRO" in the upper left hand corner of the display window. The word "USER" will be displayed in the lower right corner indicating you are about to enter the Application Setup Mode. Depressing the **Pro** key a second time will put the Control Console into the Application Setup Mode. If you inadvertently press the **Pro** key once, wait for 3 seconds and the Control Console will return to its normal operating mode.
3. Depressing and holding the **+** and **-** keys while simultaneously pressing the **Pro** key once will flash "PRO" in the upper left hand corner of the display window. The word "PrO" will be displayed at the left of the display window indicating you are about to enter the System Setup Mode. Depressing the **Pro** key a second time will put the Control Console into the System Setup Mode. A delay of three seconds will return the Control Console to its normal operating mode. The System Setup programming steps will likely only need to be programmed once, to customize the controller to your sprayer.
4. For either setup mode, if you depress and hold the **Pro** key for 3 seconds, your inputs will be stored and the computer will exit the respective setup mode. This action will not be necessary until the last programming step has been completed.
5. To increase the value of a programmable digit, depress the **+** key. To decrease the value, depress the **-** key. These keys are located directly to the right of the display.
6. For some programming steps, depressing and holding the **+** or **-** key will change the programmable value rapidly. Pressing the **+** or **-** key once will change the value by one increment.
7. Depressing the **+** and **-** keys simultaneously in some programming steps will set the value to "0".
8. For either setup mode, depressing the **Pro** key will advance you to the next programming step.

STEPS TO SUCCESSFUL PROGRAMMING






TO BEGIN THE PROGRAMMING PROCESS:

1. Read above for programming tips.
2. Be sure the "master" boom toggle switch is "OFF."
3. Turn console "ON" by pressing the **Pro** key. When the Control console is turned on, the software version will be displayed at the top of the display and the serial number will be displayed in the lower left of the display. This information will be needed when calling for service support.

PROGRAMMING THE 844 SPRAYER CONTROL SYSTEM





SYSTEM SETUP MODE

The System Setup Mode contains the programming steps that customize the controller to the sprayer or sprayer components. These include calibration steps and parameters that, once programmed, will likely never change.

To enter the System Setup Mode, press and hold the  and  keys simultaneously. While holding the  and  keys in, depress the  key twice (within 3 seconds) to enter the System Setup Mode.






SETTING YOUR PROGRAM MODE (U.S., TURF)

Default = U.S.

1. The 844 console will display a large “US” in the center of the display. The default value “US” indicates that all default values will be shown in U.S. measurements, unless changed to Turf (*trF*). Switching to Turf units will cause the controller to display application rates in Gallons per 1000 ft².
2. If you will be using U.S. measurements no change is necessary, depress the  key to advance to the next program step.
3. If, however, you will be using turf units, then depress either the  or  key to change from “US” to “TURF” mode. Depress the  key to accept the value and advance to the next program step.

FLOWMETER PULSES

Default = 650

1. During the Flowmeter Calibration Step, the  symbol (flowmeter turbine) will be flashing at the top of the console display.
2. First, locate the factory calibrated flowmeter pulse rate tag on the flowmeter. If this varies from the default value of the console, use the  or  keys to modify the value. Depressing the  and  keys simultaneously will clear the value to zero.

PRESSURE BASED SYSTEM

Note: If using a pressure based system, the 844 console will be preprogrammed for the pressure transducer sold with the controller kit, and this programming step will not appear.

PROGRAMMING THE 844 SPRAYER CONTROL SYSTEM (CONTINUED)

NOZZLE SPACING

Default = 20

1. While in the Nozzle Spacing step, the $\overset{\leftarrow}{\wedge} \wedge^{\rightarrow}$ symbol will be flashing at the top of the console display.
2. Nozzle spacing should be recorded in inches.
3. If the default value is correct, depress the **Pro** key to accept the value.
4. If the nozzle spacing is different than that shown as a default, then add or reduce this number by using the **+** or **-** keys to record the new value. Depressing the **+** and **-** keys simultaneously will clear the value to zero.
5. When the correct value has been entered, depress the **Pro** key to accept the value and advance to the next step.
6. When broadcast spraying, enter the nozzle spacing in the display.
7. If banding, enter the band width as your spacing.
8. If directed spraying, enter the row spacing divided by the number of nozzles per row as your spacing.

NOTE:

All Application rate readings (GPA, G/1000 ft²) and area readings are expressed in treated acres.

NUMBER OF SPRAY TIPS PER BOOM SECTION






Default = 6

1. While in the Tips Per Boom Section step, the $\overset{\square}{\#}$ symbol will be flashing at the top of the console display. The console will also display "SEC 1" at the left and a number (6) at the right of the display. The "SEC 1" refers to boom section #1 on your sprayer. The number at the right is to be adjusted to match the number of tips you have on boom section 1.
2. The default value of "6" will appear for all booms sections. The next 3 or 5 programming steps are Number of Spray Tips Per Boom Section steps. These steps correspond with the 3 or 5 boom switches on the lower portion of the console, depending on the 844 console you purchased. The section you are programming can be identified by looking at the SEC # at the left of the display.
3. You must program the correct number of spray tips for each boom section on your sprayer. Use the **+** or **-** keys to produce the correct value. Depressing the **+** and **-** keys simultaneously will clear the value to zero.
4. Advance to the next step by depressing the **Pro** key. This must be done for all Number of Spray Tips Per Boom Section steps.
5. Any individual boom switches not being used must be programmed to a "0" value. When you have programmed and validated the last Number of Spray Tips Per Boom Section step, advance to the next program step by depressing the **Pro** key.

PROGRAMMING THE 844 SPRAYER CONTROL SYSTEM (CONTINUED)

USER PROGRAMMABLE TIP

Default = 0.00


1. While in the User Programmable Tip step, the ▼ symbol will be flashing above the **P** tab at the bottom of the display.
2. In some cases you may find that nozzles other than those preprogrammed for the 844 Sprayer Control will need to be used. If one of the eleven pre-programmed tips do not meet your needs, this programming step allows the user to program a tip.
3. Use the  or  key to adjust flow rate in Gallons Per Minute of a single spray tip at 40 psi. Depressing the  and  keys simultaneously will clear the value to zero. To accept the value, depress the  key to advance to the next programming step.



If the user is using tips other than the TeeJet VisiFlo brand, the corresponding colors may not match. In this case, the user should determine the flow rate of the tip being used a 40 psi, and enter this flow rate as the programmable tip.





The flow rate will automatically be displayed at 40 psi. This pressure must be used for determining your tip's flow rate. Actual operation pressure is not important.



4. When the correct nozzle flow rate has been entered, advance to the next programming step by depressing the  key.



PRESSURE REGULATING MODE

Default = *byP* (Bypass)



1. While in the Pressure Regulating Mode step, the  symbol will be flashing at the top of the console display.
2. The default value "*byP*" indicates that the pressure regulating valve is plumbed in the bypass line. In most situations, especially total flows below 4 GPM, this is the preferred installation position. If the default is correct, depress the  key to accept the value and advance to the next programming step.




When programmed in the bypass mode, with the controller in "MAN" mode, the pressure regulating valve should close when the  key is depressed, and open when the  key is depressed.

3. In large flow situations, the pressure regulating valve can be located in the supply line between the flowmeter and the boom control valves. If you will be locating the pressure regulating valve in this position, use the  or  keys to change the value to *thr* (Throttle Mode).








When programmed in the throttling mode with the controller in "MAN" mode, the valve should open when the  key is depressed and close when the  key is depressed.

4. When you have completed the programming for Pressure Regulating mode, depress the  key to accept the valve and advance to the next programming step.

PROGRAMMING THE 844 SPRAYER CONTROL SYSTEM (CONTINUED)

BOOM CONTROL VALVE TYPE

Default = 2 Way

1. While the Boom Control Valve Type step, the  symbol will be flashing at the top of the display. The programmable information (2 Way or 3 Way) will be displayed at the left in the console display.
2. This programming step is used to distinguish the type of on-off boom control valves you have on your system. There are two types of valves that can be used, 2-way control valves or 3-way control valves.
3. A 2-way control valve is simply an on/off valve. Flow is either directed to the boom section(s) or it is blocked or diverted away from the booms. A 3-way control valve is known as a bypass valve. Flow continuously passes through this valve. When the valve is activated (on), flow is directed to the boom section(s). When the valve is not activated (off), flow is directed through a bypass port, back to the supply tank.
4. If you are using the 3-way type of boom control valves in your system, change the valve using the  or  keys. Depress the  key to accept the value and advance to the next programming step.
5. If the default value is correct, depress the  key to accept the value and advance to the next programming step.

NOTE:

If using 3-way, bypass boom control valves, refer to the instruction manual of the valve you are using for proper calibration instructions.

PROGRAMMING THE 844 SPRAYER CONTROL SYSTEM (CONTINUED)

SPEED SENSOR TYPE

Default = 250

Speed Calibration = 621

NOTE:





During Speed Calibration, the 844 will automatically sense whether a Wheel Sensor or Radar Speed Sensor is  being used.

While in the Speed Calibration Programming Step, the symbol will be flashing at the top of the display. The programmable value (250) will be displayed in the lower right corner of the display.


MAGNETIC PULSES

The speed sensor needs to be calibrated in order to provide the proper speed and area readings. The value for this step is the number of pulses generated by the speed sensor in 300 feet. This value can be determined by automatic calibration while driving exactly 300 feet, or by entering the number manually.

Automatic Calibration:

To automatically calibrate the speed sensor, mark off a distance of exactly 300 feet. While still in the speed calibration program step, position your sprayer at the beginning of your 300 foot course and press the  and  keys simultaneously to clear the contents of the display and to activate the auto calibration mode. When the auto calibration mode has been activated, CRL will be displayed at the lower right of the display. Next, press the  key once to begin the calibration process. Now drive the course and the 844 will count the pulses as the sprayer moves. The speed at which you drive over the course is not important. Stop the sprayer at exactly 300 feet and press the  key to validate the number in the display. The speed sensor is now properly calibrated.

NOTE:




Once the auto calibration mode has been activated, no other functions of the 844 are possible until the console receives speed impulses for calibration. To deactivate the auto calibration mode, depress the  key twice.

During the automatic calibration step, the 844 automatically senses whether a magnetic sensor or radar ground speed sensor is installed. If you prefer to enter the speed value manually, refer to the following instructions.

Manual Calculation:

To manually calculate the proper value for Wheel Speed Sensor pulses, you need to know the circumference of the wheel to which the sensor is mounted. It can be measured by marking the tire and measuring the distance covered as that mark makes on full revolution. Then use the following formula:

$$\frac{3600 \times \{\# \text{ magnets on wheels (usually 2)}\}}{\text{Wheel Circumference in inches}} \quad \text{i.e.} \quad \frac{3600 \times 2}{30} = 240$$




The result can be entered as a alternative to using the automatic calibration method. Use the  or  keys to adjust the value. Press the  key to validate the value and advance to the next programming step.

RADAR SPEED PULSES

Automatic Calibration:






The automatic calibration of a Radar speed sensor is similar to the automatic calibration of a wheel speed sensor. Refer to the directions above. When the console has determined that a Radar Speed Sensor is being used, "RAD" will be displayed in the lower left of the console display.

Manual Calibration:

To manually enter the radar calibration value, first press the Auto/Man key to put the control console into radar mode. When the Control Console is in the manual radar calibration mode, "RAD" will be displayed in the lower left of the console display. Now use the  or  keys to adjust the value. When the correct value has been entered, press the  key to validate this value.


LIQUID SPECIFIC GRAVITY (DENSITY)

Default = 1.00

1. While in the Liquid Specific Gravity (Density) Programming Step, the **D** symbol, will be flashing at the top of the console display.
2. The default value of "1.00" corresponds with the specific gravity of water and is correct for most pesticide applications. Occasionally some spray solutions, such as fertilizer, have different densities. If you are using such a material, a new value should replace the default value. The chart to the left can help you determine the specific gravity of other solutions.
3. To change the default value to your new value, use the  or  keys to change the value in the display. Depressing the  and  keys simultaneously will clear the value to zero. To accept the value and advance to the next programming step, depress the  key.
4. If the solution that you are using can not be found on the chart specific gravity can be calculated as follows:

Weight of Solution Per Gallon	Liquid Density
7.0 lbs.	0.84
8.0 lbs.	0.96
8.34 lbs. - Water	1.00
10.0 lbs.	1.20
10.65 lbs. - 28% N	1.28
10.85 lbs. - 30% N	1.30
11.0 lbs.	1.32
12.0 lbs.	1.44
14.0 lbs.	1.68

$$\text{Specific Gravity} = \frac{\text{Weight of solution (lbs. per gallon)}}{8.34 \text{ lbs. per gallon of water}}$$

5. When you have completed the programming of the Liquid Specific Gravity or Density, you have completed the System Setup Mode of the TeeJet 844 Sprayer Control.
6. Now, press and hold the  key for three seconds, and the entire program system will be stored in the computer's memory.

NOTE:

For your protection, the 844 console will not automatically power down while in the System Setup Mode. You must exit properly as described above to enable the console auto power down feature. Cutting the power to the controller while in the System Setup Mode will not save any changes made into the computer's memory.

PROGRAMMING THE 844 SPRAYER CONTROL SYSTEM (CONTINUED)

APPLICATION SETUP MODE

1. The Application Setup Mode contains the programming steps that are most frequently changed (target application rate, and nozzles used). Spraying Systems Co. has added this separate setup mode to speed the programming process when minor changes are made in the spraying operation (i.e. changing fields, switching nozzles, changing crops, etc.). The operator can now avoid toggling through all of the programming steps unnecessarily.
2. To enter the Application Setup Mode, depress the **Pro** key twice. Depressing the key once inadvertently will cause the display to flash "PrO" in the upper left and "USER" at the lower right of the display for three seconds before the 844 will return to normal operating mode. The "PrO/USER" indicates that the console is about to enter the Application Setup Mode. Depressing the **Pro** key a second time puts the Control Console into the Application Setup Mode.

TARGET APPLICATION RATE

U.S. Default = 20.0 GPA

Turf Default = 2.00 Gal/1000 ft²

1. While in the Target Application Rate step, the application rate, pressure, speed, and flow rate in Gallons Per Minute, will be displayed. The application rate units (GPA or G/1000 ft²) will be flashing indicating that the corresponding value can be adjusted or programmed.
2. Your target application rate should be entered in this step. Application rates will be expressed in Gallons Per Acre for U.S. units and in Gallons Per 1000 ft² for Turf Units.
3. Individual application rates will likely vary from the default value. Depress the **+** or **-** keys to adjust the value. Depressing the **+** and **-** keys simultaneously will clear the value to zero. When the desired application rate has been entered, depress the **Pro** key to accept the value and advance to the next step.

PROGRAMMING THE 844 SPRAYER CONTROL SYSTEM (CONTINUED)



NOZZLE SELECTION

Default = Red or 0.40 GPM

1. While in the nozzle selection step, the display will remain the same as above except the ▼ symbol will be flashing at the bottom of the display just above a color coded strip.


NOTE:

The tabbed color strip along the bottom of the display represents color coding for TeeJet VisiFlo spray tips.

2. Select the representative color to match the spray tips being used to apply the desired application rate. Use the  or  keys to toggle the ▼ key through the tabbed color strip at the bottom of the display panel. The corresponding flow rate for each color will be displayed in Gallons Per Minute at 40 psi at the lower right of the display. If the programmable tip is the used, toggle the ▼ key to the **P** tab. Flow rates will always be displayed in Gallons Per Minute at 40 psi regardless of any changes to other display parameters.
3. The table below indicates flow rates in Gallons Per Minute at 40 psi for the TeeJet VisiFlo color coded spray tips represented in the 844 Spray Control.



Color coding of spray tips is not uniform from manufacturer to manufacturer. Flow rates for all nozzles should be checked prior to use. Tips that are worn should be replaced to ensure an accurate application rate.

4. Feature: Based on the tip programmed and nozzle spacing, the 844 console will calculate the required speed to achieve the application rate that was entered in the last programming step. The speed will be displayed in the lower left corner of the display window. Keep in mind that this speed is based on a spraying pressure of 40 psi. More calculations can be performed in the next programming step.
5. When the correct flow rate for the spray tips being used has been entered, depress the  key to accept the value and advance to the next step.

TeeJet [®] VisiFlo [®] Tip Color	Flow Rate in GPM @ 40 psi
Orange	0.10
Green	0.15
Yellow	0.20
Blue	0.30
Red	0.40
Brown	0.50
Gray	0.60
White	0.80
Lt. Blue	1.00
Lt. Green	1.50
Black	2.00



PROGRAMMING THE 844 SPRAYER CONTROL SYSTEM (CONTINUED)

CALCULATION/WHAT IF? STEP

This Programming Step is a diagnostic tool only and has no effect on the operation of the TeeJet 844 Sprayer Control. It allows the user to adjust the indicated pressure to see what effects it would have on the operating speed; or the user can adjust the speed to see what pressure would need to be used to maintain the target application rate. This step should help determine if the correct nozzle size was chosen for the application.




While in the calculation step, either the pressure (psi) or speed (m.p.h.) units will be flashing.

ADJUST SPEED:

While in the Calculation Step, the user is able to view the nozzle flow rate, pressure, speed and application rate simultaneously. When first entering this step, the speed (m.p.h.) units will be flashing, indicating that this digit can be changed. By depressing the  or  keys, the programmer can change the indicated speed to a desirable speed or typical operating speed.

The 844 will immediately calculate what the pressure would need to be to maintain the target application rate at this speed. If the pressure is too high, you will need larger spray tips or will have to slow down. If the pressure is too low, you will need smaller spray tips or will have to speed up.

ADJUST PRESSURE:


If you wish to adjust the pressure, press the  key once so that the pressure (psi) units begin to flash. Use the  or  keys to adjust the indicated pressure to a desired or recommended pressure.


The 844 will immediately determine what the operating speed would need to be to achieve the target application rate at this pressure. If the speed indicated is too high, a smaller nozzle is needed. If the speed indicated is too low, a larger nozzle is needed.

LIQUID DENSITY:

All Calculations performed in the normal Calculation Step are based on spraying water. To convert calculations to the Liquid Density programmed in the Liquid Specific Gravity (Density) Step in the System Setup Mode, depress the Auto/Man key. When calculations are using the programmed Density, the **D** symbol will be displayed at the top of the display window.

NOTE: Note: The tip flow rate, in the lower right corner of the display, will always display the flow rate in Gallons Per Minute at 40 psi, regardless of changes to the indicated pressure.

After performing the calculations, you can advance to the beginning of the Application Setup sequence to make any changes by depressing the  key once. If no changes are necessary, you have completed the Application Setup Mode of the TeeJet 844 Sprayer Control.

NOW, PRESS AND HOLD THE  KEY FOR THREE SECONDS, AND THE ENTIRE APPLICATION SETUP MODE WILL BE STORED IN THE COMPUTER'S MEMORY.

NOTE: For your protection, the 844 console will not automatically power down while in the Application Setup Mode. You must exit properly as described above to enable the console auto power feature. Cutting the power to the controller while in the Application Setup Mode will not save any changes made into the computer's memory.

SPRAYER CHECKOUT

Before spraying check all connections related to the Sprayer Control assembly. Particular attention should be given to the speed sensor to be sure the sensor and magnets are in line, and properly secured.





Very important: Whenever you are working around a sprayer or farm chemicals, be sure to wear protective clothing and eye wear.

1. Partially fill the sprayer tank with water to flush the system and to make a visual check of the spray tips to be sure all tips are delivering a good spray pattern.
2. Follow these steps, in sequence, being sure the Master Boom Switch is in its “off” position:
 - a. Be sure the tank shut-off valve is open.
 - b. Start the engine, engage pump, and set the rpm to that which will be used when spraying.
 - c. Switch the computer on by depressing the **Prn** key on the display panel.
 - d. Ensure that the spray tips being used match those preprogrammed.
 - e. Turn “on” the toggle switches for each of the spray booms on your sprayer.
 - f. Depress the Auto/Manual key so that the red LED light indicates “MAN” mode.
 - g. Now, toggle the Master boom switch to “on.”
 - h. Adjust the pressure with the **+** and/or **-** keys.
3. At this point, the sprayer will be activated and spray tip performance can be visually checked. The pressure adjust keys can be used to raise or lower your spraying pressure. To stop spraying, toggle the Master boom switch to “off”.
4. The above steps provide a quick way to check-out your sprayer and computerized control system.
5. However, it is recommended that you calibrate your sprayer to prepare the unit for operation, and to diagnose spray tip wear. Worn tips can contribute to costly chemical waste, and inaccurate spraying regardless of your use of a sprayer control. Calibration is important and necessary to obtain the benefits associated with a computerized sprayer control.
6. The TeeJet Spray Products Catalog, supplied with the 844 Sprayer Control kit, gives complete information on sprayer calibration, along with other useful data and spraying information.

OPERATING INSTRUCTIONS (CONTINUED)



 

 



THE SPRAYING OPERATION


You have filled the sprayer tank and have thoroughly mixed the chemical(s). Your application rate has been determined as well as the spray tip you will be using, with the sprayer data programmed into the computer.


1. Switch the computer on by depressing the **Pro** key on the display panel.
2. Toggle the boom switches to their “on” position, for each of the booms on your sprayer.
3. Take note of the “numbered” booms on each side of the sprayer, so that the appropriate boom can be toggled “off” as necessary.
4. The Auto/Manual key should be switched to “AUTO”.
5. In the Auto mode, when the master boom switch is “off”, the target application rate as well as the  symbol will be displayed in the console display. When the master boom switch is “on”, the actual rate will be displayed and the  symbol will no longer appear.
6. On flow based models, the lower right corner of the display will alternate displays of the application area (Ac) and the total volume applies. The display will alternate approximately every three seconds.
7. While spraying with the master boom switch “on”, the display window will always display the actual application rate, vehicle speed, pressure and application area covered/total volume applied simultaneously.
8. As you enter the field to the point where you will begin spraying, turn the MASTER boom switch to “on” position. This will activate the spraying operation. Maintain your usual vehicle speed for spraying. Moderate changes in vehicle speed will not affect your application rate, because such changes are compensated by automatic pressure increases or decreases.
9. If for any reason you need to stop, turn the MASTER boom switch to “off”.
10. Alarm warnings can occur momentarily while the pressure regulating valve is searching for a new setting after the closing of a boom section or other change in normal operation. However, if the alarm stays on for a longer time, the valve may have reached its limit and your system will be unable to regulate flow beyond the limit.

FEATURES



BOOST MODE

1. There may be instances where “on the go” increased or decreased chemical application may be required in certain areas of your field. In situations like this, the  and  keys will allow you to easily make the necessary adjustments. The boost mode can be activated while spraying in the Auto mode by depressing either the  or  key once. With each subsequent depression of the  key the application rate will be increased by 10%. Each subsequent depression of the  key will reduce the application rate by 10%.
2. If the  or  key is depressed once inadvertently during operation, a delay of 3 seconds will deactivate the boost mode. Succeeding presses will change the target rate as explained above.


Example: If increasing the application rate by 10%, depress the  key once to activate the boost mode, and a second time to make the 10% increase.

3. If decreasing the application rate by 10%, repeat the above procedure using the  key.



BOOST MODE (CONTINUED)

- The application rate changes are monitored in the display, as you make them. The display will show UP 10, UP 20, dn 20, dn 30, etc. This will be displayed for approximately 3 seconds before the display returns to reading actual application rates. When making the application rate changes, it is not necessary to set the Auto/Man to “MAN” mode.
- To return the application rate to its programmed status, you may use the  or  keys individually to step back to the application rate in 10% increments, or depress them simultaneously to return to the programmed target application rate.

NOTE:

While in the boost mode, the  symbol will flash at the top of the console display, to remind the operator they are not spraying at the target application rate.

AREA/VOLUME FEATURE

- The 844 Sprayer Control will count application acres and measure total volume applied while the master boom switch is in the “on” position. The area counter will measure treated acres and is dependent on the value programmed for nozzle spacing. The volume measure is dependent on flowmeter pulses and is available on flow based models only.
- The lower right of the display window will alternately show the treated area (GPA or G/1000 ft²) sprayed and the total volume applied since the last clearing of the area counter/volume measure.
- To clear the area counter/volume measure, depress the Auto/Man key so that the LED indicates “MAN” mode, depress and hold the  and  keys simultaneously for three seconds.


NOTE:

The area memory counter/volume measure only works when the Master Boom Switch is turned “ON”.

APPLICATION ALARM

If the 844 senses a continuous discrepancy of 10% or more between the Target Application Rate and Actual Application Rate, the application rate units (GPA or G/1000 ft²) will flash in the display window. This alarms the operator to a problem with the sprayer plumbing, operation or programming.


NO FLOW ALARM

If the 844 stops receiving pulses from the flowmeter, the  symbol will flash at the top of the display. This alarm indicates that the flowmeter has stalled and alerts the operator that there is a problem with the flowmeter or elsewhere in the system.

This alarm will occur only when the Master Boom Switch and at least one boom toggle switch is “on”.

SIMULATED SPEED

Simulated Speed = 6 m.p.h.

- Simulated speed is a feature that allows you to operate and check your sprayer, using water, without actually moving the sprayer. This can and should be done prior to any spraying activity.
- To activate this simulated speed feature, go to the Calibrate Speed Programming step in the System Setup Mode.
- In the Calibrate Speed step, manually set the calibration value to zero, then exit the System Setup Mode by pressing and holding the  key for three seconds. This will automatically put the Control Console into the operating mode. The computer will sense that you are operating at a simulated speed of 6 m.p.h..
- Flip the toggle switches for each of the boom sections on your sprayer to their “on” positions. Now, switch the Master toggle to “on” which will activate the sprayer. If the 844 is set to Automatic Mode, it will adjust the pressure to achieve the target rate.
- After you have checked the flow rate and pressure and have made a visual inspection of the sprays, the 844 must be recalibrated to the speed sensor that you are using.

SPRAY OPERATION (AFTER PROPER SETUP AND CALIBRATION)

1. Add 1/2 the amount of water required for the spray operation to tank using air gap filler.
2. Start engine, set engine speed below 2000 RPM, and engage pump after taking all previously described safety and operation precautions.
3. Open agitator valve.
4. Add chemicals (taking all precautions described in this manual and by the chemical manufacturer).
 - a. Liquids may be poured directly into tank.
 - b. Wettable powder chemicals must be pre-mixed with water in a container to form a slurry. The mixture is then added to the tank through the fillwell strainer.
 - c. Chemical in soluble packs are place into the fillwell strainer basket and dissolved by adding water through the basket.

The balance of the water required for the spray operation is added to the tank through the fillwell strainer, using the air gap filler. This will wash any undissolved chemical into the tank.

5. Transport to sprayer site with and agitator operating.
6. Set Engine speed between 2000-3600 RPM.
7. (Optional) Engage ground speed control.
8. Obtain desired spraying speed before activating spray with switches on spray control console.

In some extreme situations, it may be necessary to decrease or completely close the flow of material to the agitator system in order to maintain desired pressure. If agitation is absolutely essential, a change may have to be made in some combination of ground speed, nozzle size or system pressure to maintain the necessary application rate.



Review the capacity of nozzles being used. Total capacity of all nozzles plus agitation system must not exceed pumping system capabilities refer to *Spraying Procedure* section of this manual. FLUSH PUMP AFTER USE

Engine RPM	Pump Shaft RPM	Pressure				Max HP
		GPM at 20psi	GPM at 30psi	GPM at 40psi	GPM at 60psi	
2300	3200	70	55	5	-	1.4
2750	3800	75	71	60	10	1.8
3200	4400	80	78	72	60	3.0

$$\text{Pump RPM} = \text{Engine RPM} \times 1.38$$

One of the most common causes for faulty-pump performance is corrosion inside the pump. Flush pump and entire system with a solution that will chemically neutralize the liquid pumped. Mix according to the manufacturer's directions. This will dissolve most residue remaining in the pump, leaving the inside of the pump clean for the next use.

TO PREVENT CORROSION

After cleaning the pump as directed, flush it with a permanent type automobile antifreeze (Prestone, Zerex, etc.) containing a rust inhibitor. Use a 50% solution that is, half antifreeze and half water. Then coat the interior of the pump with a substance which will prevent corrosion such as Fluid Film or WD40. If unit will not be used for an extended period of time, disconnect hoses into and out of the pump, seal openings to the pump with caps or tape. Dispose of fluids according to all federal, state and local regulations.

NOTE: All chemicals and chemical residue must be removed after each use. Dispose of fluids and residue according to all federal, state and local regulations.

SPRAYER CLEANING

Empty tank and clean unit thoroughly after each use following these instructions:

1. Remove coupling and rinse inside of tank thoroughly with clean water, replace coupling.
2. Fill tank ten percent full with clean water, start pump and discharge water through spray hose or spray boom (with nozzles removed), until empty.
3. Remove drain coupling again and rinse tank interior thoroughly.
4. Rinse exterior of sprayer thoroughly with clean water.
5. Remove bowl from sprayer filter (on operators left hand side of the spray tank). Remove stainless steel screen. Wash bowl and screen thoroughly. Apply thin layer of petroleum jelly to O-ring or gasket. Replace screen and bowl, taking care to position O-ring or gasket properly. Hand tighten.
6. Remove and clean Flow Meter turbine and inlet hub. Clean off all metal filings and wettable powders which have hardened on the plastic and metal parts. Check the inlet hub and turbine assembly for worn or damaged turbine blades and bearings. Flush Flow Meter with clear water and drain.

MANUAL HOSE REEL


Located at the back of the Spray Star behind the tank. Open the ball valve located near the pump to allow fluid to flow into the hose reel. Place the lockout pin in the unlocked position by pulling and turning it half a turn, this will allow you to pull out additional hose or to use the handle and wind up the hose. To prevent movement during transport or storage place the lockout pin in the locked position.

ELECTRIC HOSE REEL


Located at the back of the Spray Star behind the tank. Open the ball valve located near the pump to allow fluid to flow into the hose reel. To unwind hose just pull on the hose to get the desired amount. To wind up the hose make sure the toggle switch is in the ON position, push the momentary push button switch until you have reeled in the amount of hose desire. Turn off the safety switch when not in use.

FOAM MARKER


Located to the right of the control panel. Use lever (A) to designate which boom is to be used to dispense foam. With lever pointing toward the seat foam will dispense from right boom, and with lever pointing forward foam will dispense from the left boom. Use dial (B) located on top of foamer to adjust pressure for the amount of foam that will be dispensed. Switch (A) also turns foamer on or off.

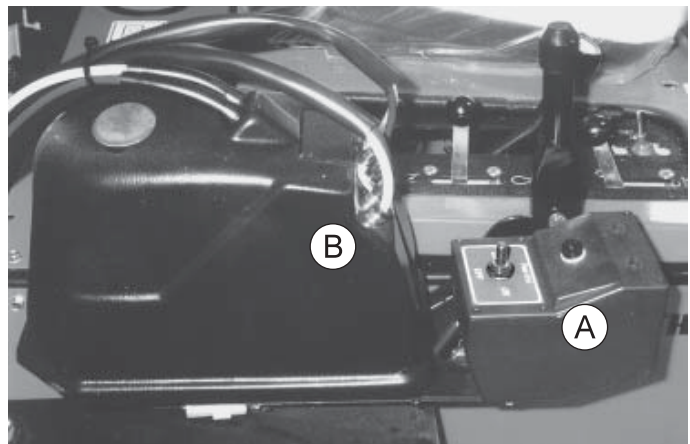

HYDRAULIC SCHEMATIC

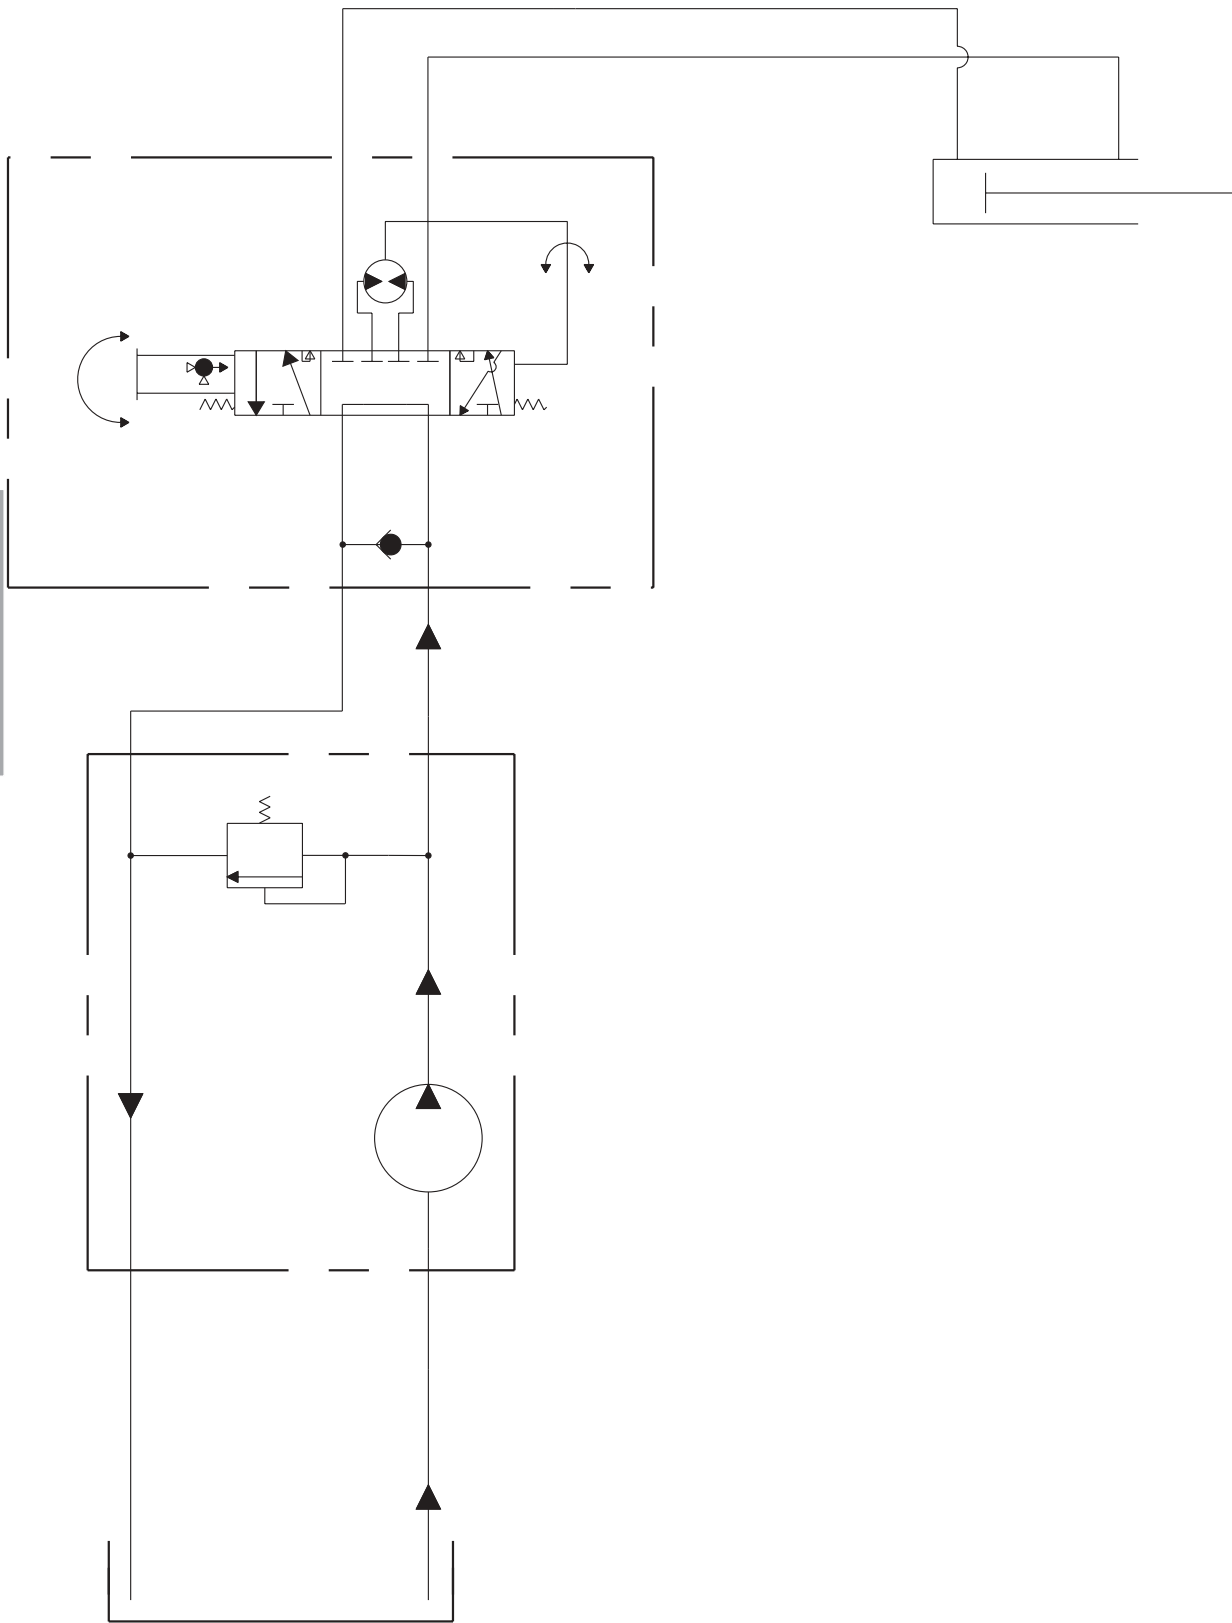

Schematics

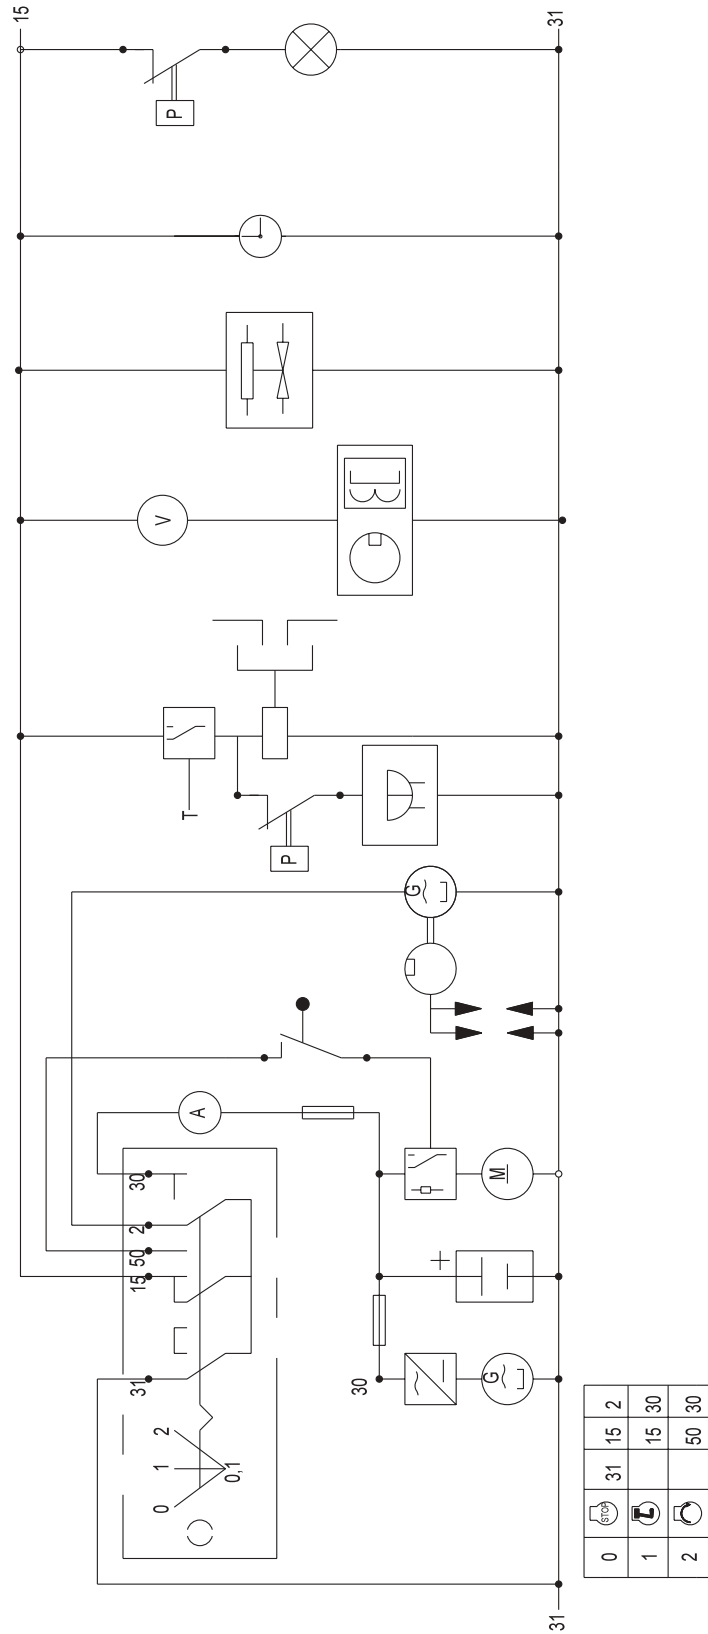

SPRAYING INTRODUCTION

This section is intended to offer practical guidelines for the distribution of liquid chemicals over an area of turf grass such as golf courses, park land, school grounds and lawns. SMITHCO makes no representation as to the suitability of any technique or product for any particular situation. This section is suitable for self-propelled spray vehicles or sprayers mounted onto vehicles.

Boom Spraying is the most effective, accurate and efficient method of applying chemicals to large turf areas. It may be done by means of:

- A dedicated spray vehicle
- A sprayer mounted upon a utility vehicle

Sprayers are typically equipped with wide spray booms. Generally these booms are between 15 feet (4.5m) and 20 feet (6m) in width. They are divided into three sections, with hinges that permit the long outer sections to automatically move out of the way and reset if an obstacle such as a tree or fence is in your path.

To minimize the chance for missed areas or double application use a device to mark the outside boundaries of each spray swath. Foam markers and dye markers are advisable.

TURF MANAGEMENT

Turf management chemicals are made for four general purposes:

1. **Fungicides:** Prevent or cure fungus on turf grass. They are made in 2 general types:
 - Systemic - Chemicals enter the plant system and protect or cure it of, fungus.
 - Contact - Kills fungus with which it comes into contact.
2. **Insecticides:** Eliminate damaging insects and worms (such as grubs, beetles, ants, etc.)
3. **Herbicides:** Control and eliminate undesirable weeds and grass from turf areas and non-turf areas such as bunkers, trails, fences, etc.
4. **Nutrients & Fertilizer:** Promote growth, beauty and color in turf grass.

Some materials have to be applied so that they get into the soil below the plant leaves, This is called "*soil application*". In order to do this, they are best applied with a *large volume of water*. They are often then *watered-in* using the irrigation system. This type of chemical material includes systemic chemicals and chemicals designed to destroy pests which live in the thatch and the soil.

Other materials must be applied to reach a problem that is present on the plant leaves. This is called "*Foliar Application*" and requires a *lower volume* of water. Instead of irrigation water, these materials are further activated by dry air and sunshine. They include contact fungicide and many herbicides.

The user of sprayers and chemicals must follow the directions provided with the spray material. It is the only way to insure safe and effective results. It provides information on how much chemical and how much water is to be applied to the area to be sprayed.

Though there are many types and sizes of nozzles, two specific types have proven most successful in turf grass management.

- The first type is **target-directed**. It sprays material in a direct line downwards to the target turf grass. These are flat fan nozzles, commonly referred to as TeeJet nozzles. They are available in a wide variety of sizes for any required discharge volume rate. They are the best for many contact or foliar applied pesticides. They are spaced either 10" (25 m) or 20" (51 cm) apart and overlap one another by about 1/3.
- The second type useful in turf management are **broadcast** type nozzles. They are commonly referred to as raindrop or floodjet nozzles. They spray a hollow-cone shaped pattern of much larger droplets which fall quickly to the turf under their own weight. They are best for systemic pesticides or any material requiring a large volume of water for soil application. The larger droplets are not as subject to drift from wind and are a safer, more environmentally friendly choice in many situations.

A handgun (hand-nozzle or hand-lance) is used to control and direct the spray pattern to the ground, shrub or tree. They must be constructed of long lasting and noncorrosive materials such as brass, stainless or aluminum. The handgun fits to a hose of any length from the sprayer allowing operator mobility. The hose should be as short as possible while still permitting operator mobility.

Liquid loses pressure due to friction as it travels through the hose, 1-3 psi (0.07-0.21 bar) for each foot (30 cm) of hose. For most operations $\frac{1}{2}$ " (1.25 cm) inside diameter hose is adequate. Trees over 40 ft (12 m) high require $\frac{3}{4}$ " (2 cm) inside diameter hose and a sprayer pump capable of delivering a volume of at least 20 gpm (75 lpm) and a pressure of at least 400 psi (28 bar).

NOZZLES

Always be alert to the possibility of a plugged or damaged nozzles. Serious misapplications may result. Check nozzle output periodically.

Modern nozzles use spring and diaphragm check valves to insure positive cutoff of chemicals without drip.

Snap-on caps make replacing and cleaning nozzles, quick, easy and fool proof with proper reinstallation.

An operator can see at a glance if all nozzles are the same size by the color code.

3 FUNCTIONS FOR A SPRAY BOOM NOZZLE

1. Regulating the flow is done through size of the orifice (opening) within the nozzle. All nozzles, regardless of type, have some point within them that regulates the flow of liquid. Obviously, the larger the opening the greater the rate of flow volume. Volume is expressed in Gallons Per Minute (gpm) or Liters Per Minute (lpm). Do not confuse the term volume with application rate, which will be covered later.

As pressure increases, the flow volume in a given nozzle also increases. For example, an average size nozzle which discharges 0.52 gpm (1.4 lpm) at 30 psi (2 bar), will discharge 0.73 gpm (2 lpm) at 60 psi (4 bar). In this example, an increase in pressure of 100% has caused an increase in discharge of 40%.

Some nozzles deliver a small volume (for example: 0.2 gpm (0.75 lpm)). Some nozzles deliver a relatively large volume (for example: 1.5 gpm (5.7 lpm)), or $7\frac{1}{2}$ times as much as the smaller nozzle in this example.

The amount of material (volume) to be applied is determined by the effect the chemical has on the turf.

2. The nozzle on a sprayer is to form the liquid into droplets. The size of the droplet is determined by two factors design and system pressure (psi/bar).

Particular applications are done best by big droplets such as systemic fungicides, insecticides and some herbicides in order to reduce drift. Other applications require small droplets like contact fungicides and some herbicides. Again, this is determined by whether the chemical is foliar applied or soil applied. Large droplets for soil applied material, small droplets for foliar applied materials that evenly cover the plant better.

Pressure also affects droplet size. More pressure at the same nozzle produces smaller droplets, more subject to drift. The general rule on pressure is to use the lowest pressure possible with just enough to form adequate spray nozzle patterns.

NOZZLES (CONTINUED)

- DISPERSE THE MATERIAL IN A SPECIFIC PATTERN that will insure even distribution of chemical across the swath covered by the boom.

As shown (to the right) the pattern formed by flat fan (TeeJet) nozzles would show most liquid concentrated at the center, then tapering off where it begins to overlap with the next nozzle—approximately $\frac{1}{3}$. The pattern of liquid dispersed by the hollow-cone (Raindrop) is more even across its width. Each nozzle overlaps the adjoining nozzle by 100%. That is to say the area covered by each nozzle extends to the center of the two nozzles on either side.

In order to properly develop their spray pattern, each nozzle must be the proper distance from the next nozzle (spacing) and the proper height above the ground.

NOZZLE SCREENS (STRAINERS)

Smaller nozzles require nozzle screens or strainers to prevent clogging.

- TeeJet type nozzles size 8001 and 80015 and RF Flat Spray Raindrop Nozzles require 100 mesh screens.
- TeeJet type nozzles from size 8002 through 8008 and RF Flat Spray Raindrop Nozzles require 50 mesh screens.
- Raindrop Hollow Cone Nozzles Size RA-2 through RA-6 require 50 mesh screens.
- Raindrop Hollow Cone Nozzles Size RA-8 and larger do not require strainers.
- Turbo Floodjet Nozzles TF-VS2 through TF-VS3 require 50 mesh screens.
- Turbo Floodjet Nozzles TF-VS4 and larger do not require screens.

SPACING

Turf spray nozzles are normally 10" (25 cm) or 20" (51 cm) apart (some cases 30" (76 cm), depending on the type of spray boom and type of area to be sprayed.

Very fine, level areas (golf greens and tees, bowling lawns, tennis courts, etc.) may be sprayed with nozzles spaced every 10" (25 cm).

BOOM HEIGHT

Height is very important in permitting spray nozzles to develop their proper spray pattern. If nozzles are too high, excessive overlap develops. If nozzles are too low, there is not enough overlapping of nozzle spray patterns.

NOZZLE TYPE	NOZZLE SPACING	HEIGHT ABOVE THE GROUND
80° Flat Fan	20" (51 cm)	18" (45-46 cm)
65° Flat Fan	10" (25 cm)	12" (30-31 cm)
Raindrop Cone	20" (51 cm)	18" (45-46 cm)
Raindrop Flat	20" (51 cm)	12" (30-31 cm)
Turbo Floodjet	20" (51 cm)	15" (38-39 cm)
Turbo Floodjet	30" (76 cm)	16" (40-41 cm)

Improper nozzle height or spacing prevents proper application of chemical. Some areas are under treated and chemicals are ineffective. Some areas are overtreated with wasted chemical and possible turf damage.

Operating your sprayer at a desired speed and pressure on a hard, dry surface is a good method of checking spraying consistency. Observe nozzles in operation, observe if the area dries evenly. If there are alternating wet and dry streaks, raise or lower the spray boom. If the wet streaks are directly under the nozzle, the boom is too low. If the wet streaks are between the nozzles, the boom is too high.

Calibrating simply means to adjust a set of variables on the sprayer in order to deliver the desired amount of chemical to a known area of turf.

The job of calibrating the sprayer consists of balancing these variables so that your sprayer delivers the desired application rate. That is, an amount of chemical on a given area. It is expressed as:

Gallons Per Acre (gpa) (1 US gpa = 0.83 UK gpa)

or **Gallons Per 1,000 Square Feet (gpt)**

or **Liters Per Hectare (lph)** (1 US gpa = 9.35 lph)

A number of acceptable methods for calibrating a turf sprayer are widely available. The calibration method chosen must take these variables into account. They must include known ground speed (by measurement or from an accurate speedometer) and nozzle output (gpm or lpm) from a nozzle chart or from actual measurement. The variables are:

PRESSURE

Just as pressure increases the volume discharge rate, it also increases the application rate. Pressure must increase by 4 times in order to double the application rate. Small pressure changes of 10 psi (1.4 bar) or less do not greatly affect performance.

Pressure is established and maintained by a pressure control valve or by a flow control valve located on the sprayer.

NOZZLE CAPACITY (VOLUME)

We have covered the different types of spray patterns of various nozzles and made our selection of type accordingly. We now have to choose a size which will provide the correct application rate.

Sizes are available for all requirements. Consult the nozzle chart in this manual for your nozzle type in order to select the correct size.

TRAVEL SPEED


Increased travel speed decreases the application rate (gpa, gpt or lph). Travel speed must be safe and appropriate for the area to be sprayed.

Unlike pressure changes which have only a minor effect on application rate, ground speed changes have a more major and direct effect. For example: A 50% decrease in ground speed means a 100% increase in application rate. If the vehicle does not have an accurate speedometer, correct speed must be determined by timing the sprayer travel over a measured distance. (Refer to the page in this manual titled, "Abbreviations and Conversions").

To calibrate a sprayer, the user must:

1. **Understand** the Variables
2. **Set** those variables using one of the proven methods available.
3. **Make** a trial run and measure the output (use water, not chemical).
4. **Determine** the output.
5. **Make** adjustments to the 3 variables until the output is at the desired level.

This covers the principles of what must be known to prepare a sprayer for operation.

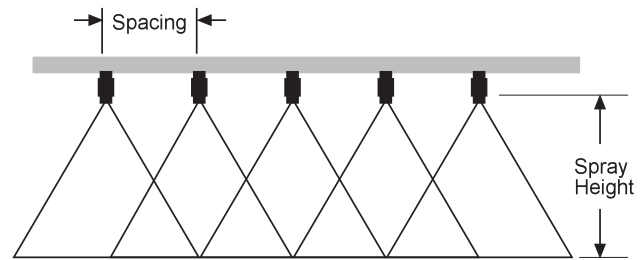

NOTE: There are other acceptable and proven methods of calibrating a turf sprayer for application. Other techniques may be more suitable depending on operational needs and technical competence of the operator.

THE NOZZLE CHART METHOD OF CALIBRATION

The Nozzle Chart Method is useful when the sprayer nozzles are new or nearly new. It is also the most useful method to employ when the sprayer is equipped with an Electronic Spray Control System. The Electronic Spray Control System does most of the calibration work, it is up to the operator to select the proper combination of nozzle size and ground speed which will deliver the desired application rate.

The nozzle chart method requires the use of the appropriate nozzle charts which are found in the back of this manual (Nozzle Charts 1 through 8). Nozzle charts for other nozzles are available from the manufacturer.

CALIBRATION STEPS

1. **Determine “HOW”** your sprayer is to be calibrated from the list of variables below.

- a. **Nozzle Type** (TeeJet, Raindrop, Turbo Flood)
- b. **Spacing** (10" (25 cm) or 20" (51 cm) or 30" (76 cm))
- c. **Expression of Application Rate** (gpa or gpt or lph)

The answers to these three questions will direct you to the appropriate nozzle chart for your application. The correct nozzle chart **MUST** be used.

2. **Determine the Desired Application Rate.**

This is determined from the information on chemical labels or other technical information available from a variety of sources.

3. **Determine an Acceptable Ground Speed.**

Conditions over which the sprayer will operate generally dictate the appropriate ground speed. Within the limits of practicality and efficiency, spraying should generally be done at lowest possible speed. This increases operator safety and contributes to more precise application of chemicals. For example, golf greens and tees and hill areas would generally be sprayed in the range of 2¹/₂ to 3¹/₂ m.p.h. (4-6 kph). Larger, open and more level areas such as golf fairways and park or school grounds would be sprayed at 4¹/₂ to 6 m.p.h. (7-10 kph).

The vehicle which carries or tows the sprayer should be equipped with a precise low-speed speedometer. If it is not, exact ground speed at a given engine speed must be determined by timing the travel of the sprayer over a measured distance.

4. **Determine Nozzle Size.**

Refer to the appropriate nozzle chart in the back of this manual for your nozzle TYPE (the type of nozzle you have or type you wish to use), nozzle SPACING and CALIBRATION TYPE (gpm, gpt or lph).

You will note from the chart, that application rates from any given nozzle decrease as the ground speed increases. In other words, the faster you drive, the less material you are applying.

Application rates are shown in the columns to the right of the charts. Once the desired application rate is decided upon, it should be located, as nearly as possible in one of these columns on the appropriate chart for your operation. It could well be that the approximate rate desired would be obtained from the nozzles already installed in the boom. If this is not possible, then nozzles will need to be changed.

NOTE:

When selecting a new nozzle size refer to the “Discharge Rate Column” on the nozzle charts. The Discharge Rate (gpm or lpm) multiplied by the number of nozzles should not exceed 75% of the actual discharge volume of the sprayer pump. [i.e., if you need to use nozzles which discharge 0.8 gpm (3.0 lpm), and the spray boom is equipped with 12 nozzles, the sprayer pump would have to produce an actual discharge volume of 13 gpm (49 lpm) in order to properly supply these nozzles.] If the collective volume of the spray boom nozzles exceeds the actual discharge volume of the pump, inadequate pressure and poor nozzle distribution patterns may result.

Once nozzle type and size have been determined, those nozzles are installed in the sprayer boom. Nozzles should be expected to be replaced after 15-20 hours of actual sprayer operation. After nozzles are installed, make trial application of water over a known area to check application rate.

THE NOZZLE CHART METHOD OF CALIBRATION (CONTINUED)

5. For Sprayer with Electronic Spray Control Systems.

On sprayers equipped with Electronic Spray Control Systems such as those manufactured by Raven Ind., Micro-Trak Co. and Dickey-John Co., it is still important to select the right type and size of nozzle for the required operation. Electronic Spray Control Systems cannot function properly if the nozzles are not capable of delivering the programmed (desired) application rate. Nozzles which are too large will not develop adequate pressure or satisfactory spray patterns. Nozzles which are too small will not allow the discharge of spray material at the programmed application rate.

Further, when calibrating sprayers which are equipped with Electronic Spray Control Systems, care must be taken to use the mode of operation on the Spray Control System (Gallons per acre "US" Mode); Gallons per 1,000 Square Feet ("Turf" Mode); or Liters per Hectare (Standard International Model), which corresponds with the nozzle calibration charts (gpa, gpt or lph).

6. Using the Nozzle Charts.

Select the correct chart based on your nozzle type, nozzle spacing and desired expression of application rate (gpa, gpt or lph). If the desired operating speed is not found on the nozzle chart, it is simple to determine application rate at different speeds by estimating from the known facts.

Example 1: If the desired speed is 2½ m.p.h. (4 kph) on a sprayer using Raindrop nozzles (Chart 5). The average between the application rates for 2 m.p.h. and 3 m.p.h. may be assumed to be the application rate for 2½ m.p.h..

Example 2: The desired speed is 6 m.p.h.. Use the application rate column for 3 m.p.h. a divide by 2.

7. Converting Nozzle Chart Method to British Gallons.

To convert any of the Gallon Per Acre rates to Imperial Gallons per acre, (Imp gpa) multiply by 0.83. To convert any of the Liter Per Hectare rates to Imperial Gallons Per Hectare (Imp gph), multiply by 0.22.

8. Checking the Actual Application Rate.

After the combination of ground speed, nozzle size and operating pressure has been selected, the sprayer should be operated with water only to determine if the target application rate is achieved.

THE "128" METHOD OF BOOM SPRAYER CALIBRATION

The "128" Method is useful for calibrating sprayers and also for checking the calibration of sprayer calibrated by the Nozzle Chart Method and sprayers using Electronic Spray Control Systems. The "128" is based on a convenient mathematical relationship that exists between US Gallons, liquid ounces and acres.

An ounce is 1/128th of a (US) gallon. If an area which was "1/128th of an acre" could be found, the number of ounces applied to that small area would be equal to the number of gallons applied to the acre Thus, no mathematical computations would be required.

To determine an area which is 1/128 of an acre:

- On nozzles with 20 inch (51 cm) spacing, measure off a distance of 204 ft (62 meters). Mark a "START" and a "STOP" line. The rectangle formed by this distance and the spraying width of one nozzle 20" (51 cm) is equal to 340 square feet which is equal to 1/128 acre. Therefore, the amount of material applied to this area by one nozzle in OUNCES is the same amount of material applied to an acre in GALLONS (gpa).
- On nozzles with 10 inch (25 cm) spacing, the measure distance is 408 feet (124 meters).
- On nozzles with 30 inch (76 cm) spacing the measured distance is 136 feet (41 meters).

CALIBRATING FOR APPLICATION

1. Fill the sprayer tank with water. Run the sprayer, inspect it for leaks and make sure all systems function properly.
2. Drive the sprayer through the measured distance discussed above at normal spraying speed, record the travel time required to cover the measured distance in seconds with a stopwatch.

THE "128" METHOD OF BOOM SPRAYER CALIBRATION (CONTINUED)

The carrying or towing vehicle is to be traveling at the desired speed when it crosses the start line of the measured course.

Repeat this procedure and determine the average of the two times.

3. With the sprayer parked, run the sprayer at the required pressure level. Catch the output of each nozzle in a container which is marked or graduated in Ounces for the exact same period of time which it took the sprayer to cover the measured course in step #2. It is necessary to operate the vehicle engine at spraying speed using a hand throttle.
4. Observe the volume of water in the collection bottle. The number of OUNCES collected in the time it takes to cover the marked course. Take the average nozzle output by adding the outputs of each nozzle and then dividing that sum by the number of nozzles.

The NUMBER OF OUNCES collected in the time required to cover the SMALL AREA is equal to the NUMBER OF GALLONS applied per ACRE. For example: if an average of 40 ounces of water is collected in the time required to cover the 1/128 acre area, the application rate is 40 gallons per acre (gpa).

NOTE: As a practical matter, if high application rates are desired (above 75 gpa), the measured course length should be reduced by half (i.e. 102 ft (31 m) for 20 inch (52 cm) spaced nozzles). The volume collected (above) is then doubled (multiplied by 2).

AVERAGE OUTPUT (Ounces) = APPLICATION RATE (gpa)

5. Observe individual nozzle output volumes. If an individual nozzle is 10% above or below the average output, check for blockages in the nozzle or in the nozzle strainer. If the nozzle is worn or damaged, replace it.
6. Compare this actual application rate with the recommended rate. If the actual rate is more than 5% higher or lower than the intended rate, adjustments must be made.
7. Minor adjustments in application rate may be made by increasing or decreasing the spraying pressure. Lowering spraying pressure decreases application rate. Increasing spraying pressure increases application rate. This procedure normally does not apply to spray systems controlled by an Electronic Spray Control System, which governs flow rate.
8. Adjustments in application rate may be made by increasing or decreasing the travel speed of the sprayer if conditions permit. Slower speeds increase application rate. Faster speeds decrease application rate.
9. Nozzle sizes can be changed to provide the correct application rate. Refer to the nozzle charts in this book for the desired nozzle type.
10. Re-calibrate the sprayer (steps 2-6) after any adjustments are made.

As previously discussed, there are other acceptable methods of Turf Sprayer Calibration. Chemical suppliers, Agricultural Extension Agents, Universities and consultants of various types offer helpful advice on this subject. Technical catalogues are available from nozzle manufacturers.

TRANSFERRING THE "128" METHOD INTO METRIC (LITERS PER HECTARE)

The same steps are used that are used when calibrating in gallons per acre. First a relationship between a measurable amount (milliliters) and the calibration amount (liter) is determined. That ratio is 1:1000.

Now an area which is 1/1000th of a hectare must be measured.

On spray booms with 51 cm (20 inch) spacing, mark off an area which is 20 meters (65.6 feet) long. The area formed by that length and the width of one spray nozzle (20 meters by 0.5 meters) is 10 square meters which is 1/1000 of a hectare. Therefore, the amount of spray material applied to this small area in milliliters is equal to the amount applied to one hectare in liters.

Then, follow the remaining steps 2-10, substituting milliliters for ounces, liters for gallons, square meters for square feet and hectares for acres.

AVERAGE OUTPUT (Milliliters) = APPLICATION RATE (LITERS/HECTARE)

NOZZLE PERFORMANCE CHART #1

Nozzle Type: XR Teejet & DG Teejet Spacing: 20 inch (51cm) Calibration: US Gal/Acre (GPA) & US Gal/1,000 Square Feet (GPT)											
Color	Size	Pressure psi	Nozzle Capacity (Gal/Min)	Application Rate GPA				Application Rate GPT			
				Speed MPH (KPH)				Speed MPH (KPH)			
				2 (3)	3 (5)	4 (6)	5 (8)	2 (3)	3 (5)	4 (6)	5 (8)
Orange	XR8001	20 (1.4)	0.07	10.4	6.9	5.2	4.2	0.24	0.16	0.12	0.10
		30 (2.1)	0.09	13.4	9	7	5	0.31	0.21	0.16	0.11
		40 (2.9)	0.10	14.9	10	8	6	0.34	0.23	0.17	0.14
		60 (4.3)	0.12	17.8	12	9	7	0.41	0.28	0.21	0.16
Green	XR80015 DG8002	20 (1.4)	0.11	16.3	9	8	7	0.38	0.25	0.19	0.15
		30 (2.1)	0.13	19.3	13	10	8	0.44	0.30	0.22	0.18
		40 (2.9)	0.15	22	15	11	9	0.51	0.34	0.26	0.20
		60 (4.3)	0.18	27	18	13	11	0.61	0.41	0.31	0.25
Yellow	XR8002 DG8002	20 (1.4)	0.14	21	14	10	8	0.48	0.32	0.24	0.19
		30 (2.1)	0.17	25	17	13	10	0.58	0.39	0.29	0.23
		40 (2.9)	0.30	45	30	22	18	1.02	0.68	0.51	0.41
		60 (4.3)	0.37	55	37	27	22	1.26	0.84	0.63	0.50
Blue	XR8003 DG8003	20 (1.4)	0.21	31	21	16	13	0.72	0.48	0.36	0.29
		30 (2.1)	0.26	39	26	19	15	0.89	0.59	0.44	0.35
		40 (2.9)	0.30	45	30	22	18	1.02	0.68	0.51	0.41
		60 (4.3)	0.37	55	37	27	22	1.26	0.84	0.63	0.50
Red	XR8004 DG8004	20 (1.4)	0.28	42	28	21	17	0.98	0.64	0.48	0.38
		30 (2.1)	0.35	52	35	26	21	1.20	0.80	0.60	0.48
		40 (2.9)	0.40	59	40	30	24	1.40	0.91	0.68	0.55
		60 (4.3)	0.49	73	49	36	29	1.70	1.10	0.84	0.67
Brown	XR8005 DG8005	20 (1.4)	0.35	52	35	26	21	1.70	0.80	0.60	0.48
		30 (2.1)	0.43	64	43	32	26	1.50	0.98	0.73	0.59
		40 (2.9)	0.50	74	50	37	30	1.70	1.10	0.85	0.68
		60 (4.3)	0.61	91	60	45	36	2.10	1.40	1.00	0.83
Gray	XR8006	20 (1.4)	0.42	62	42	31	25	1.40	1.00	0.72	0.57
		30 (2.1)	0.52	77	51	39	31	1.80	1.20	0.89	0.71
		40 (2.9)	0.60	89	59	45	35	2.00	1.40	1.00	0.82
		60 (4.3)	0.73	110	73	55	44	2.50	1.70	1.30	1.00
White	XR8008	20 (1.4)	0.57	85	56	42	34	1.90	1.30	0.97	0.78
		30 (2.1)	0.69	102	68	51	41	2.40	1.60	1.20	0.94
		40 (2.9)	0.80	119	79	59	48	2.70	1.80	1.40	1.10
		60 (4.3)	0.98	146	97	73	58	3.30	2.20	1.70	1.30
Steel	SS8010	40 (2.9)	1.00	144	96	72	54	3.30	2.20	1.70	1.20
		60 (4.3)	1.20	180	120	90	78	4.10	2.80	2.00	1.80

NOZZLE PERFORMANCE CHART #2

Nozzle Type:		XR Teejet & DG Teejet									
Spacing:		20 inch (51cm)									
Calibration:		Liters Per Hectare									
Color	Size	Pressure psi (bar)	Nozzle Capacity (L/Min)	Application Rate LPH Speed KPH (MPH)							
				3 (2)	5 (3)	6 (4)	8 (5)				
Orange	XR8001	20 (1.4)	0.26	97	65	5.2	4.2				
		30 (2.1)	0.34	125	83	7	5				
		40 (2.9)	0.38	140	94	8	6				
		60 (4.3)	0.45	166	112	9	7				
Green	XR80015 DG8002	20 (1.4)	0.42	152	83	8	7				
		30 (2.1)	0.49	180	122	10	8				
		40 (2.9)	0.57	206	140	11	9				
		60 (4.3)	0.68	252	193	13	11				
Yellow	XR8002 DG8002	20 (1.4)	0.53	196	131	10	8				
		30 (2.1)	0.64	234	159	13	10				
		40 (2.9)	0.76	281	187	22	18				
		60 (4.3)	0.91	346	234	27	22				
Blue	XR8003 DG8003	20 (1.4)	0.79	290	196	16	13				
		30 (2.1)	0.98	360	243	19	15				
		40 (2.9)	1.13	421	281	22	18				
		60 (4.3)	1.40	514	346	27	22				
Red	XR8004 DG8004	20 (1.4)	1.06	393	262	21	17				
		30 (2.1)	1.32	486	327	26	21				
		40 (2.9)	1.51	552	374	30	24				
		60 (4.3)	1.90	683	458	36	29				
Brown	XR8005 DG8005	20 (1.4)	1.30	486	327	26	21				
		30 (2.1)	1.70	598	402	32	26				
		40 (2.9)	1.90	692	468	37	30				
		60 (4.3)	2.30	851	561	45	36				
Gray	XR8006	20 (1.4)	1.60	580	393	31	25				
		30 (2.1)	2.00	720	477	39	31				
		40 (2.9)	2.30	832	552	45	37.5				
		60 (4.3)	2.80	1029	683	55	44				
White	XR8008	20 (1.4)	2.20	795	524	42	34				
		30 (2.1)	2.60	954	636	51	41				
		40 (2.9)	3.00	1112	739	59	48				
		60 (4.3)	3.70	1365	907	73	58				
Steel	SS8010	40 (2.9)	3.80	1348	898	72	54				
		60 (4.3)	4.50	1693	1122	90	78				

NOZZLE PERFORMANCE CHART #3

Nozzle Type: XR Teejet & DG Teejet Spacing: 10 inch (25cm) Calibration: US Gal/Acre (GPA) & US Gal/1,000 Square Feet (GPT)											
Color	Size	Pressure psi	Nozzle Capacity (Gal/Min)	Application Rate GPA				Application Rate GPT			
				Speed MPH (KPH)				Speed MPH (KPH)			
				2 (3)	3 (5)	4 (6)		2 (3)	3 (5)	4 (6)	
Orange	XR8001	20 (1.4)	0.07	21	14	10		0.48	0.32	0.24	
		30 (2.1)	0.09	27	18	13		0.62	0.40	0.30	
		40 (2.9)	0.10	30	20	16		0.68	0.46	0.34	
		60 (4.3)	0.12	36	24	18		0.92	0.54	0.41	
Green	XR80015 DG80015	20 (1.4)	0.11	32	18	16		0.78	0.50	0.39	
		30 (2.1)	0.13	39	26	20		0.99	0.60	0.44	
		40 (2.9)	0.15	44	30	22		1.02	0.68	0.52	
		60 (4.3)	0.18	54	36	27		1.22	0.82	0.61	
Yellow	XR8002 DG8002	20 (1.4)	0.14	42	28	21		0.96	0.64	0.48	
		30 (2.1)	0.17	51	34	26		1.16	0.79	0.58	
		40 (2.9)	0.30	60	40	30		1.36	0.90	0.68	
		60 (4.3)	0.37	74	50	37		1.70	1.14	0.85	
Blue	XR8003 DG8003	20 (1.4)	0.21	62	42	31		1.44	0.96	0.72	
		30 (2.1)	0.26	78	52	39		1.78	1.18	0.89	
		40 (2.9)	0.30	90	60	45		2.04	1.36	1.02	
		60 (4.3)	0.37	110	74	55		2.52	1.68	1.26	
Red	XR8004 DG8004	20 (1.4)	0.28	84	56	42		1.9	1.28	0.96	
		30 (2.1)	0.35	104	70	52		2.4	1.6	1.2	
		40 (2.9)	0.40	118	80	59		2.8	1.8	1.4	
		60 (4.3)	0.49	146	98	72		3.4	2.2	1.7	
Brown	XR8005 DG8005	20 (1.4)	0.35	104	70	52		2.4	1.6	1.2	
		30 (2.1)	0.43	128	86	64		3.0	2.0	1.4	
		40 (2.9)	0.50	148	100	74		3.4	2.2	1.7	
		60 (4.3)	0.61	182	120	91		4.2	2.8	2.1	
Gray	XR8006	20 (1.4)	0.42	124	84	62		2.8	2.0	1.4	
		30 (2.1)	0.52	154	102	77		3.6	2.4	1.8	
		40 (2.9)	0.60	178	118	89		4.0	2.8	2.0	
		60 (4.3)	0.73	220	146	110		5.0	3.4	2.5	
White	XR8008	20 (1.4)	0.57	170	112	85		3.8	2.6	1.9	
		30 (2.1)	0.69	204	136	102		4.8	3.2	2.4	
		40 (2.9)	0.80	238	158	118		5.4	3.6	2.8	
		60 (4.3)	0.98	292	194	146		6.6	4.4	3.4	
Steel	SS8010	40 (2.9)	1.00	288	192	144		6.6	4.4	3.4	
		60 (4.3)	1.20	360	240	179		8.1	5.8	4.0	

NOZZLE PERFORMANCE CHART #4

Nozzle Type:		XR Teejet & DG Teejet										
Spacing:		10 inch (51cm)										
Calibration:		Liters Per Hectare										
Color	Size	Pressure psi (bar)	Nozzle Capacity (L/Min)	Application Rate LPH								
				Speed KPH (MPH)								
				3 (2)	5 (3)	6 (4)						
Orange	XR8001	20 (1.4)	0.26	194	130	98						
		30 (2.1)	0.34	250	166	126						
		40 (2.9)	0.38	280	188	142						
		60 (4.3)	0.45	332	224	167						
Green	XR80015 DG80015	20 (1.4)	0.4	304	186	152						
		30 (2.1)	0.5	366	244	184						
		40 (2.9)	0.6	412	280	206						
		60 (4.3)	0.7	500	386	249						
Yellow	XR8002 DG8002	20 (1.4)	0.5	392	262	196						
		30 (2.1)	0.6	468	318	264						
		40 (2.9)	0.8	562	374	281						
		60 (4.3)	0.9	692	468	346						
Blue	XR8003 DG8003	20 (1.4)	0.8	580	392	292						
		30 (2.1)	1.0	730	486	360						
		40 (2.9)	1.1	840	562	420						
		60 (4.3)	1.4	1028	692	510						
Red	XR8004 DG8004	20 (1.4)	1.1	786	524	393						
		30 (2.1)	1.3	972	654	468						
		40 (2.9)	1.5	1104	748	553						
		60 (4.3)	1.9	1366	916	683						
Brown	XR8005 DG8005	20 (1.4)	1.3	972	654	486						
		30 (2.1)	1.7	1196	804	598						
		40 (2.9)	1.9	1384	936	692						
		60 (4.3)	2.3	1702	1122	851						
Gray	XR8006	20 (1.4)	1.6	1160	786	580						
		30 (2.1)	2.0	1440	954	720						
		40 (2.9)	2.3	1664	1104	832						
		60 (4.3)	2.8	2058	1366	1029						
White	XR8008	20 (1.4)	2.2	1590	1048	795						
		30 (2.1)	2.6	1908	1272	954						
		40 (2.9)	3.0	2224	1478	1104						
		60 (4.3)	3.7	2730	1814	1365						
Steel	SS8010	40 (2.9)	3.8	2692	1796	1346						
		60 (4.3)	4.5	3366	2244	1683						

NOZZLE PERFORMANCE CHART #5

Nozzle Type:		Raindrop 1/4"									
Spacing:		20 inch (51cm)									
Calibration:		US Gal/Acre (GPA) & US Gal/1,000 Square Feet (GPT)									
Color	Size	Pressure psi	Nozzle Capacity (Gal/Min)	Application Rate GPA				Application Rate GPT			
				Speed MPH (KPH)				Speed MPH (KPH)			
				2 (3)	3 (5)	4 (6)	5 (8)	2 (3)	3 (5)	4 (6)	5 (8)
Yellow	RA-2	20 (1.4)	0.14	21	14	10.5	8.4	0.48	0.32	0.24	0.19
		30 (2.1)	0.17	26	17	13	10.3	0.60	0.39	0.30	0.24
		40 (2.9)	0.20	29.8	19.8	14.9	11.9	0.69	0.46	0.34	0.27
		50 (3.6)	0.22	33.2	22.2	16.6	13.3	0.76	0.51	0.38	0.31
Red	RA-4	20 (1.4)	0.28	42	28	21	16.8	0.97	0.64	0.48	0.39
		30 (2.1)	0.35	52	34	26	20	1.20	0.78	0.60	0.46
		40 (2.9)	0.40	60	40	30	24	1.38	0.92	0.69	0.55
		50 (3.6)	0.45	66	44	33	27	1.51	1.00	0.75	0.63
Brown	RA-5	20 (1.4)	0.35	52	35	26	21	1.20	0.80	0.60	0.48
		30 (2.1)	0.44	64	42	32	26	1.47	0.97	0.74	0.60
		40 (2.9)	0.50	74	50	37	30	1.70	1.15	0.85	0.69
		50 (3.6)	0.56	84	56	42	33	1.93	1.29	0.97	0.76
Gray	RA-6	20 (1.4)	0.43	64	42	32	25	1.47	0.97	0.74	0.57
		30 (2.1)	0.52	78	52	39	31	1.79	1.20	0.90	0.71
		40 (2.9)	0.60	90	60	45	36	2.07	1.38	1.04	0.83
		50 (3.6)	0.67	100	66	50	40	2.30	1.52	1.15	0.92
White	RA-8	20 (1.4)	0.57	84	56	42	34	1.93	1.29	0.97	0.78
		30 (2.1)	0.70	102	68	51	41	2.34	1.56	1.17	0.94
		40 (2.9)	0.80	118	80	59	48	2.71	1.84	1.36	1.10
		50 (3.6)	0.90	132	88	66	53	3.03	2.02	1.52	1.22
Tan	RA-10	20 (1.4)	0.71	106	70	53	42	2.44	1.61	1.22	0.97
		30 (2.1)	0.87	128	86	64	51	2.94	1.98	1.47	1.17
		40 (2.9)	1.00	148	100	74	59	3.40	2.30	1.70	1.40
		50 (3.6)	1.10	166	110	83	66	3.82	2.53	1.91	1.52
Lt Blue	RA-15	20 (1.4)	1.10	158	106	79	63	3.63	2.44	1.82	1.45
		30 (2.1)	1.30	192	128	96	77	4.41	2.94	2.21	1.77
		40 (2.9)	1.50	222	148	111	89	5.10	3.40	2.50	2.55
		50 (3.6)	1.70	250	166	125	100	5.75	3.82	2.87	2.30

NOZZLE PERFORMANCE CHART #6

Nozzle Type:		Raindrop 1/4"									
Spacing:		20 inch (51cm)									
Calibration:		Liters Per Hectare									
Color	Size	Pressure psi (bar)	Nozzle Capacity (L/Min)	Application Rate LPH Speed KPH (MPH)							
				3 (2)	5 (3)	6 (4)	8 (5)				
Yellow	RA-2	20 (1.4)	0.53	196	131	98	79				
		30 (2.1)	0.64	243	159	122	96				
		40 (2.9)	0.76	279	185	139	111				
		50 (3.6)	0.83	310	208	155	124				
Red	RA-4	20 (1.4)	1.06	393	261	196	157				
		30 (2.1)	1.32	486	319	243	187				
		40 (2.9)	1.51	561	374	280	224				
		50 (3.6)	1.70	617	411	308	252				
Brown	RA-5	20 (1.4)	1.36	486	327	243	196				
		30 (2.1)	1.66	598	392	299	243				
		40 (2.9)	1.89	691	467	345	280				
		50 (3.6)	2.12	785	523	392	308				
Gray	RA-6	20 (1.4)	1.63	598	392	299	233				
		30 (2.1)	1.97	729	486	364	289				
		40 (2.9)	2.27	841	561	420	336				
		50 (3.6)	2.53	935	617	467	374				
White	RA-8	20 (1.4)	2.15	785	523	392	317				
		30 (2.1)	2.65	953	635	476	383				
		40 (2.9)	3.02	1103	748	551	440				
		50 (3.6)	3.40	1234	822	617	495				
Tan	RA-10	20 (1.4)	2.68	991	654	495	392				
		30 (2.1)	3.29	1196	804	598	476				
		40 (2.9)	3.78	1383	935	691	551				
		50 (3.6)	4.16	1552	1028	776	617				
Lt Blue	RA-15	20 (1.4)	4.16	1477	991	738	589				
		30 (2.1)	4.91	1795	1196	897	719				
		40 (2.9)	5.70	2075	1383	1037	832				
		50 (3.6)	6.43	2337	1552	1168	935				

Nozzle Charts

NOZZLE PERFORMANCE CHART #7

Nozzle Type: Turbo Floodjet Spacing: 30 inch (76cm) Calibration: US Gal/Acre (GPA) & US Gal/1,000 Square Feet (GPT)											
Color	Size	Pressure psi	Nozzle Capacity (Gal/Min)	Application Rate GPA				Application Rate GPT			
				Speed MPH (KPH)				Speed MPH (KPH)			
				3 (5)	4 (6)	5 (8)	6 (10)	3 (5)	4 (6)	5 (8)	6 (10)
Red	TF-VS2	20 (1.4)	0.28	19	14	11	9	0.40	0.30	0.25	0.20
		30 (2.1)	0.35	23	17	14	11	0.50	0.40	0.30	0.25
Brown	TF-VS2.5	20 (1.4)	0.35	23.4	17.6	14	11.7	0.54	0.40	0.32	0.27
		30 (2.1)	0.43	28.6	21.4	17.2	14.3	0.66	0.49	0.40	0.33
Gray	TF-VS3	20 (1.4)	0.42	28	21	16.8	14	0.64	0.48	0.39	0.32
		30 (2.1)	0.52	34.4	25.8	21	17.2	0.79	0.59	0.48	0.40
White	TF-VS4	20 (1.4)	0.57	37.4	28	22	18.7	0.86	0.64	0.51	0.43
		30 (2.1)	0.69	46	34.4	28	23	1.06	0.79	0.64	0.53
Blue	TF-VS5	20 (1.4)	0.71	46	35	28	23	1.06	0.80	0.64	0.53
		30 (2.1)	0.87	56	44	35	28	1.29	1.01	0.80	0.64
Green	TF-VS7.5	20 (1.4)	1.10	70	52	43	35	1.61	1.20	1.00	0.80
		30 (2.1)	1.30	86	64	52	43	2.00	1.47	1.25	1.00
Black	TF-VS10	20 (1.4)	1.40	94	70	56	47	2.20	1.70	1.60	1.10
		30 (2.1)	1.70	114	86	68	57	2.62	1.98	1.56	1.31

NOZZLE PERFORMANCE CHART #8

Nozzle Type:		Turbo Floodjet									
Spacing:		30 inch (76cm)									
Calibration:		Liters Per Hectare									
Color	Size	Pressure psi (bar)	Nozzle Capacity (L/Min)	Application Rate LPH							
				Speed KPH (MPH)							
				5 (3)	6 (4)	8 (5)	6 (10)				
Red	TF-VS2	20 (1.4)	1.06	178	131	103	84.2				
		30 (2.1)	1.32	215	159	131	103				
Brown	TF-VS2.5	20 (1.4)	1.32	219	165	131	109				
		30 (2.1)	1.63	267	200	161	134				
Gray	TF-VS3	20 (1.4)	1.59	262	196	157	131				
		30 (2.1)	1.97	322	241	196	161				
White	TF-VS4	20 (1.4)	2.16	350	262	206	175				
		30 (2.1)	2.61	430	322	262	215				
Blue	TF-VS5	20 (1.4)	2.69	430	327	262	215				
		30 (2.1)	3.29	524	411	327	262				
Green	TF-VS7.5	20 (1.4)	4.16	655	486	402	327				
		30 (2.1)	4.92	804	598	486	402				
Black	TF-VS10	20 (1.4)	5.30	879	655	524	439				
		30 (2.1)	6.43	1066	804	636	533				

ABBREVIATIONS AND CONVERSIONS

gpm	Gallons per minute	cm	Centimeters
lit/min	Liters per minute	dm	Decimeters
dl/min	Deciliter per minute	m	Meter
psi	Pounds per square inch	mm	Millimeters
km	Kilometers	m.p.h.	Miles per hour
gpa	Gallon per acre	km/h	Kilometers per hour
lit/ha	Liters per hectare	us	Volume per ACRE
ml/ha	Milliliter per hectare	Si	Volume per hectare
gpk	Gallons per 1,000 sq ft	TU	Volume per 1,000 sq ft

AREA & SPEED

Distance (feet) x 0.68 = Travel Speed (m.p.h.) Travel Time (seconds)

Time Required in Seconds to Travel a Distance of:

Speed (m.p.h.)	100 Ft	200 Ft	300 Ft
1.0	68	136	205
1.5	46	92	136
2.0	34	68	103
2.5	27	54	82
3.0	23	46	68
3.5	20	40	58
4.0	17	34	52
4.5	15	30	46
5.0	13	28	41

LIQUID/VOLUME

1 US Gallon x 128 = Fluid Ounces

1 US Gallon x 3.785 = Liters

1 US Gallon x 0.83267 = Imperial Gallons

1 US Gallon x 8.34 = Pounds (Water)

1 Gallon Per Acre = 2.9 Fluid Ounces per 1,000 Square Feet = 9.35 Liters Per Hectare

1 Gallon Per 1,000 Square Feet = 43.56 Gallons Per Acre

1 Gallon = 128 Fluid Ounces = 8 Pints = 4 Quarts = 3.79 Liters = 0.83 Imperial Gallons

$$\text{gpa} = \frac{5940 \times \text{GPM (per nozzle)}}{\text{MPH} \times \text{Nozzle Spacing Width (inches)}}$$

M.P.H. x Nozzle Spacing Width (inches)

$$\text{GAL. 1,000 Square Feet} = \frac{136 \times \text{GPM (per nozzle)}}{\text{MPH} \times \text{Nozzle Spacing Width (inches)}}$$

LENGTH/DISTANCE

1 millimeter (mm) = 0.039 inch

1 centimeter (cm) = 0.393 inch

1 meter (m) = 3.281 feet

1 kilometer (km) = 0.621 mile

1 inch = 25.4 millimeters; 2.54 centimeters

1 mile = 5280 Feet = 1610 Meters = 1.609 Kilometers

AREA

1 square meter = 10.764 sq feet

1 hectare (ha) = 2.471 acres = 10,000 sq meters

1 acre = 0.405 hectare = 43,560 Square Feet

1 sq mile = 640 acres = 258.9 hectares

PRESSURE

1 Pound Per Square Inch = 0.069 Bar

EC Declaration of Conformity

according to Directive 89/392/EEC

We

SMITHCO INC.

(Name of supplier)

34 West Ave. Wayne, PA 19087 USA

(Full address of the manufacture - authorized representative established in the Community must also give the business name and address of the manufacture)

declare under our sole responsibility, that the product

Spray Star 1600P / 14-300-A

(Make, Model)

to which this declaration relates corresponds to the relevant basic safety and health requirements of the Directive 89/392/EEC,

(if applicable)

and to the requirements of the other Directives:

EN292-1

EN292-2

EN294

EN349

92/59

89/392

(Title and/ or number and date of issue of the other Directives)

(if applicable)

For the relevant implementation of the safety and health requirements mentioned in the Directives, the following standard(s) and/or technical specification(s) has (have) been respected:

ISO 37-1983

PREN 836

ISO 1219-1976

SAE HS-2800

SAE J1362

(Title and/ or number and date of issue of standard(s) and/ or technical specification(s))

Cameron, Wisconsin USA

March 19, 1995

(Place and date of issue)



(Name, function and signature of the authorized person)



LIMITED WARRANTY

SMITHCO warrants this product to be free from defects in material and workmanship under normal use for one year from the date of purchase by the original user. (60 days if product is used for rental purposes.) All warranty claims must be handled through a SMITHCO authorized dealer or by SMITHCO, INC. All transportation charges must be paid by the purchaser.

There is no further express warranty. All implied warranties, including those of merchantability and fitness for a particular purpose, are limited to one year, (60 days if product is used for rental purposes) from the date of purchase by the original user, and to the extent permitted by law any and all implied warranties are excluded and disclaimed after the expiration of such period.

All incidental and consequential damages, including pickup and delivery of the unit, communication, mileage charges and/or rental of a replacement unit during repair, are not covered under this warranty, nor is any loss of income and/or other loss resulting from the failure of the product to function due to a warranty defect.

The following items are not covered under the SMITHCO warranty, and are warranted by their respective manufacturer.

- (a) Engine and engine parts, including starters, generators, alternators and filters.
- (b) Transaxle, differentials, gear boxes and mechanical pumps.
- (c) Hydrostatic transmissions, hydraulic pumps and motors.
- (d) Batteries.
- (e) Wheels and tires.

A copy of the warranty for the above items is furnished if necessary with each SMITHCO product.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.

Federal law now requires disclosure of the warranty which applies to this product prior to the sale to a customer. Please leave this statement attached to the product and allow the buyer to remove it after purchase.

SMITHCO

Wayne, Pennsylvania 19087

