

SMITHCO

Wayne, Pennsylvania 19087

OPERATOR'S MANUAL

**Spray Star 1000
Model 1006**

Requires 10-160 Boom

Starting Serial #100100

January, 1999

SMITHCO PRODUCT SUPPORT
1-800-891-9435
Hwy SS and Poplar Avenue, Cameron WI 54822
E-mail: productsupport@smithco.com

CONTENTS

Introduction

Introduction 1-9

Introduction	1
Symbols	2-3
General Safe Practices	4
Safe Spraying Practices	5
Specifications	6
Optional Spray Equipment	6
Set Up	7-8
Controls & Instruments	8-9

Operation

Operation 10-23

Operating Instructions	10-12
Console Features	13
Programming Guidelines	14
Initial Programming of Console Computer	14-18
Tip Selection	19
Operating Instructions	20-21
Alarms and Warnings	21
Spray Operation	22-23

Schematics

Schematics 24

Wiring Schematic	24
Hydraulic Schematic	24

Spraying Procedures

Spraying Procedure 25-31

Spraying Introduction	25
Turf Management	25
Hose & Handgun Spraying	26
Nozzles	26-27
Calibration Introduction	28
The Nozzle Chart Method of Calibration	29-30
The "128" Method of Boom Sprayer Calibration ...	30-31

Nozzle Charts

Nozzle Charts 32-39

Nozzle Performance Chart #1	32
Nozzle Performance Chart #2	33
Nozzle Performance Chart #3	34
Nozzle Performance Chart #4	35
Nozzle Performance Chart #5	36
Nozzle Performance Chart #6	37
Nozzle Performance Chart #7	38
Nozzle Performance Chart #8	39

Reference

Reference 40-42

Abbreviations and Conversions	40
Declaration of Conformity	42
Limited Warranty	Inside Back Cover

Thank you for purchasing a **SMITHCO** product.


Read this manual and all other manuals pertaining to the Spray Star 1000 carefully as they have safety, operating, assembly and maintenance instructions. Failure to do so could result in personal injury or equipment damage.

Keep manuals in a safe place after operator and maintenance personnel have read them. Right and left sides are from the operator's seat, facing forward.

All **SMITHCO** machines have a Serial Number and Model Number. Both numbers are needed when ordering parts. The serial number plate on the Spray Star 1000 is located on the right main frame, in front of the oil tank. Refer to engine manual for placement of engine serial number.

For easy access record your Serial and Model numbers here.


SMITHCO		DATE OF MFG.
WAYNE, PENNSYLVANIA 19087 USA 610-688-4009 Fax 610-688-6069		<input type="text"/>
SERIAL NO.	kW/hp	
<input type="text"/>	<input type="text"/>	
MODEL NO.	kg/lb	
<input type="text"/>	<input type="text"/>	

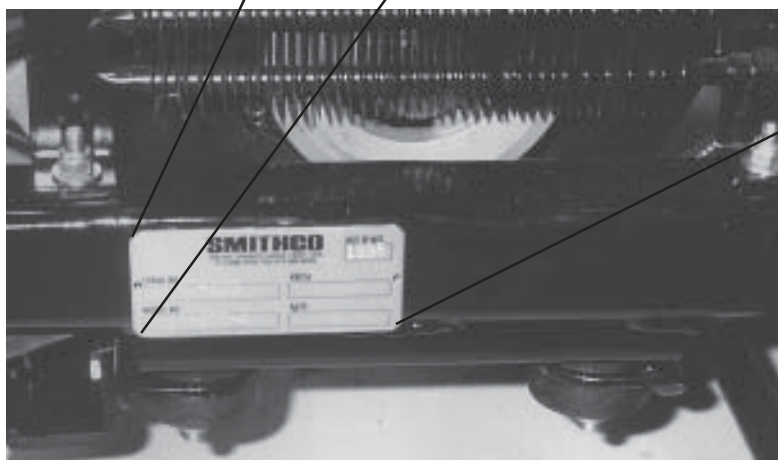

Information needed when ordering replacement parts:

1. Model Number of machine
2. Serial Number of machine
3. Name and Part Number of part
4. Quantity of parts

SYMBOLS

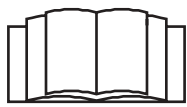

Read Operator's Manual



Electrical Power



No Electrical Power




Engine - Stop



Engine - Start




Engine - Run

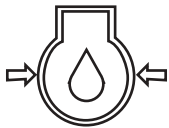


Engine Oil




Temperature Light

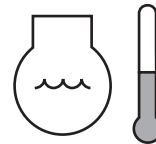

Water Temperature

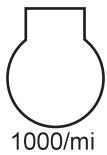

RPM

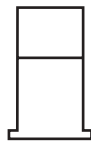

Gasoline



Diesel



Glow Plug - On




Glow Plug - Off




Glow Plug



Hour Meter

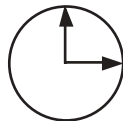

Hour Meter

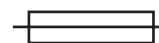

Fuse



Hand Throttle



Choke - Closed



Choke - Open



Park Brake




Park Brake Release




Hydraulic Oil Level



Up/Down Arrow

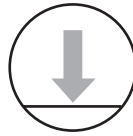


Down/Lower

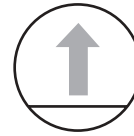


Up/Raise



No Smoking

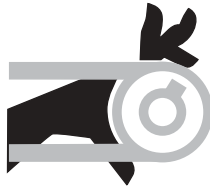

Moving Parts

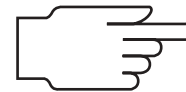

Manual Operation




Pinch Point




Step




Hot Surface

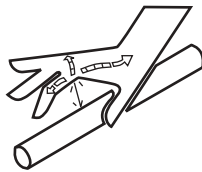

Hydraulic Fluid Penetration

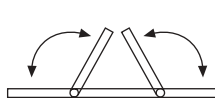

Lift Arm

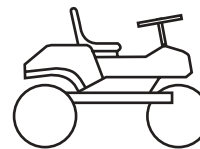

Tractor




Engage



Disengage



PTO

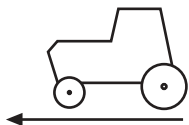

Ground Speed



Fast



Slow

H

High

L

Low

F

Forward

R

Reverse

N

Neutral



Warning
Danger
Caution


SAFE PRACTICES

1. It is your responsibility to read this manual and all publications associated with this machine.
2. Never allow anyone to operate or service the machine or its optional equipment without proper training and instructions. Never allow minors to operate any equipment.
3. Learn the proper use of the machine, the location and purpose of all the controls and gauges before you operate the equipment. Working with unfamiliar equipment can lead to accidents.
4. Wear all the necessary protective clothing and personal safety devices to protect your head, eyes, ears, hands and feet. Operate the machine only in daylight or in good artificial light.
5. Inspect the area where the equipment will be used. Pick up all debris you can find before operating. Beware of overhead obstructions and underground obstacles. Stay alert for hidden hazards.
6. Never operate equipment that is not in perfect working order or without decals, guards, shields, or other protective devices in place.
7. Never disconnect or bypass any switch.
8. Carbon monoxide in the exhaust fumes can be fatal when inhaled, never operate a machine without proper ventilation.
9. Fuel is highly flammable, handle with care.
10. Keep engine clean. Allow the engine to cool before storing and always remove the ignition key.
11. Disengage all drives and set park brake before starting the engine.
12. Never use your hands to search for oil leaks. Hydraulic fluid under pressure can penetrate the skin and cause serious injury.
13. This machine demands your attention. To prevent loss of control or tipping of the vehicle:
 - A. Use extra caution in backing up the vehicle. Ensure area is clear.
 - B. Do not stop or start suddenly on any slope.
 - C. Reduce speed on slopes and in sharp turns. Use caution when changing directions on slopes.
 - D. Stay alert for holes in the terrain and other hidden hazards.
14. Before leaving operator's position:
 - A. Disengage all drives.
 - B. Set park brake.
 - C. Shut engine off and remove the ignition key.
 - D. If engine has to run to perform any maintenance keep hands, feet, clothing and all other parts of body away from moving parts.
15. Keep hands, feet and clothing away from moving parts. Wait for all movement to stop before you clean, adjust or service the machine.
16. Keep the area of operation clear of all bystanders.
17. Never carry passengers.
18. Stop engine before making repairs/adjustments or checking/adding oil to the crankcase.
19. Use parts and materials supplied by **SMITHCO** only. Do not modify any function or part.
20. Use caution when booms are down as they extend out beyond the center line of the machine.
21. The tank is a confined space, take precaution.

These machines are intended for professional maintenance on golf courses, sports turf, and any other area maintained turf and related trails, paths and lots. No guaranty as to the suitability for any task is expressed or implied.



Persons engaged in the handling, preparation or application of chemicals must follow accepted practices to insure the safety of themselves and others,

1. **WEAR** protective clothing including: gloves, hat, respirator, eye protection and skin covering suitable for protection from chemicals being used.
2. **BATHE** thoroughly after any exposure to chemicals, giving particular attention to eyes, nose, ears and mouth.
3. **CLEAN** equipment and materials in accordance with employer, municipal and state regulations. Use only approved areas and drains.
4. **DISPOSE** of chemicals and rinse solutions by approved and legal means.
5. **PROVIDE** methods and materials for operators to wash eyes and hands immediately during the spraying process.
6. **PROVIDE** methods and materials for control, safe dilution and neutralization of chemical spills during preparation, spraying, transporting and cleanup.
7. Always check and follow the directions and safety warnings of the chemicals to be used.
8. Secure the discharge lines before starting the pump. An unsecured discharge line may whip.
9. Periodically inspect the pump and the system components.
10. Check hoses for weak or worn condition before each use. Make certain that all connections are tight and secure.
11. Do not operate unit with leaks, frayed, kinked hoses or tubing. Repair or replace immediately.
12. Use only pipe, hose and fittings rated for maximum pressure or pressure at which pressure relief valve is set at. When replacing pipe, hose or fittings, use new product.
13. Do not operate a gasoline engine in an enclosed area. Be sure the area is well ventilated.
14. Do not use these pumps for pumping water or other liquids for human or animal consumption.
15.  **Do not pump flammable or explosive fluids such as gasoline, fuel oil, kerosene, etc. Do not use in explosive atmospheres. The pump should be used only with liquids compatible with the pump component materials.**
WARNING
16. Be sure all exposed moving parts are guarded and that all coupling devices are securely attached before applying power.
17. Before servicing, disconnect all power, make sure all pressure in the system is relieved, drain all liquids from the system and flush.
18. Protect pump from freezing conditions by draining liquid and pumping rust inhibiting antifreeze solution through the system, coating the pump interior.

SPECIFICATIONS

WEIGHTS AND DIMENSIONS

Length	112" (285 cm)
Width	70" (178 cm)
Width With Boom Open	180" (457 cm)
Height	48" (122 cm)
Wheel Base	53" (135 cm)
Weight Empty	1200 lbs (544 kg)
Weight Full	2200 lbs (998 kg)

SOUND LEVEL (DB)

At ear level	88 dB
At 3 ft (0.914 m)	84 dB
At 30 ft (9.14 m)	72 dB

ENGINE

Make	Kohler
Model#	Command CH25S
Type / Spec#	PA 68673
Horsepower	25 hp (18 kW)
Fuel	Unleaded 87 Octane Gasoline Minimum
Cooling System	Air Cooled
Lubrication System	Full Pressure
Alternator	25 amp

WHEELS & TIRE

Front: Two 20 x 10.00 x 10 NHS Multi-Rib; 20 psi (1.4 bar)
Rear: Two 24 x 12.00 x 12 NHS Multi-Trac; 20 psi (1.4 bar)

SPEED

Forward Speed	0-8 m.p.h. (0-12.8 kph)
Reverse Speed	0-3 m.p.h. (0-4.8 kph)

BATTERY

	Automotive type 24F - 12 volt
BCI Group	Size 24
Cold Cranking Amps	575 minimum
Ground Terminal Polarity	Negative (-)
Maximum Length	10.25" (26 cm)
Maximum Width	6.88" (17 cm)
Maximum Height	10" (25 cm)

FLUID CAPACITY

Crankcase Oil	See Engine Manual
Fuel	5 gallon (19 liters)
Hydraulic Fluid	5 gallon (19 liters)
Grade of Hydraulic Fluid	SAE 10W-40 API Service SJ or higher Motor Oil

OPTIONAL EQUIPMENT

10-108	Speedometer Kit	10-260	203 Spray System (1002)
10-106	Fresh Water Tank	10-102	Manual Spray System (1004)
10-103	Electric Actuator Lift Kit	10-101	834 Spray System (1006)
10-297	Hydraulic Actuator Lift Kit	10-110	440 Spray System (1008)
10-105	Foam Marker	10-270	3-Way Manual System (1010)
10-160	15' Stainless Steel Boom - manual	33-216	Battery Automotive Type 24F-12 volt
10-301	15' Terrain Following Boom		
10-107	Hose Reel Mounting Kit		
16-906	Hose Reel 12 volt electric rewind 200' (61 m) capacity (to be used with 10-107)		
16-129	Hose Reel 200' (61 m) capacity (to be used with 10-107)		

The Spray Star 1000 arrives from **SMITHCO** setup and ready for service. Depending on freight conditions the tires, wheels, and steering wheel may have to be installed.



The spray system is normally shipped attached to the 1000 Prime Mover. If a spray system is to be fitted to a Prime Mover by a dealer or owner, assemble and attach the components in accordance with the parts drawings in this manual.

1. Remove the top and sides from the shipping crate then remove the banding from the Spray Star.



Banding is under tension.

2. Remove the seat, steering wheel and anything else that is in the crate.
3. Lift front end using a hydraulic jack, taking care that the jack is not placed in a location that would damage any steering system components, install front wheels and torque nuts to 64-74 ft/lb (87-100 Nm). Then raise rear axle using a hydraulic jack and install rear wheels and tires, torque lug nuts to 64-74 ft/lb (87-100 Nm). Re-torque after the first 10 hours and every 200 hours thereafter.
4. Set park brake.
5. Check the tire pressure. The front and rear tires are 20 psi (1.4 bar).
6. Remove the tape holding (Ref B) woodruff key to the shaft. Put steering wheel (Ref A) on the shaft of the steering mechanism (Ref C). Tighten nut to 30-40 ft/lbs (41-54 Nm). **Do not over tighten.**
7. Install the seat with the stud going through the engine cover and the flat washers, lockwashers and nuts. Use front set of holes for shortest distance from foot pedals to seat. Use back set of holes for longest distance from foot pedal to seat.
8. **Battery NOT furnished.** Install a battery automotive type 24F-12 volt; 575 cold cranking amps minimum; (10.25" (26 cm) long x 6.88" (17 cm) wide x 10" (25 cm) high maximum case) into the battery box, which is located on the left side of the engine compartment. Place battery into battery box with posts to the rear. This is a negative grounding system.

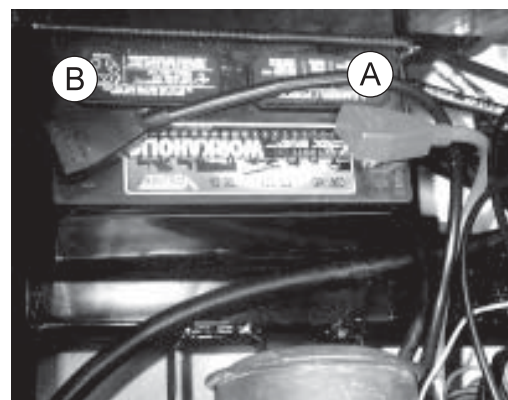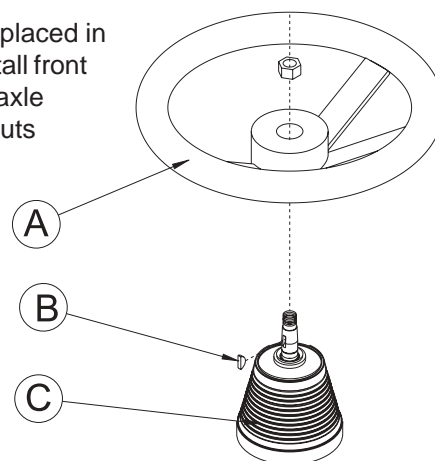

Connecting battery cables to the wrong post could result in personal injury and/or damage to the electrical system. Make sure battery and cables do not interfere or rub on any moving part. Connect red positive (+) cable (A) to battery first. When disconnecting remove black negative (-) cable (B) first.

9. Check hydraulic fluid level in tank located on the left side. Remove cap and add SAE 10W-40 API Service SJ or higher motor oil if necessary. Fluid level should be about 2-2 1/2" (5-6.4 cm) from the top of the tank when cold. **DO NOT OVERFILL.**
10. Fill fuel tank, located on right side, with Unleaded 87 Octane gasoline (minimum).




Gasoline is flammable, caution must be used when storing or handling it. Do not fill fuel tank while engine is running or in an enclosed area, fumes are explosive and dangerous to inhale. DO NOT SMOKE while filling the fuel tank. DO NOT OVERFILL.

SET UP (CONTINUED)

11. Machine should be greased before starting, refer to *Spray Star 1000 Parts/Service Manual* for location.
12. Attach the Spray Boom and any other Optional Equipment to the Prime Mover, in accordance with instructions in the *Spray Star 1000 Parts/Service Manual*. The nozzles must be the correct distance above the turf as described in *Turf Spraying Guide*. The spray boom must operate properly and the outer sections must break away safely if an object is struck by them, they must then return to normal operation position.
13. Be sure to double check boom heights, nozzle spacing and displacement before spraying.
14. Machine is shipped with windshield washer fluid in to prevent freezing. Flush system completely with clear water. Fill tank with water and retighten the four bolts used to hold the tank in place.
15. Read operating instructions before starting.


NOTE: Never allow pump to run dry! The valve on the suction side of the pump (between the pump and tank) must be fully open whenever the pump is operated.

CONTROLS & INSTRUMENTS

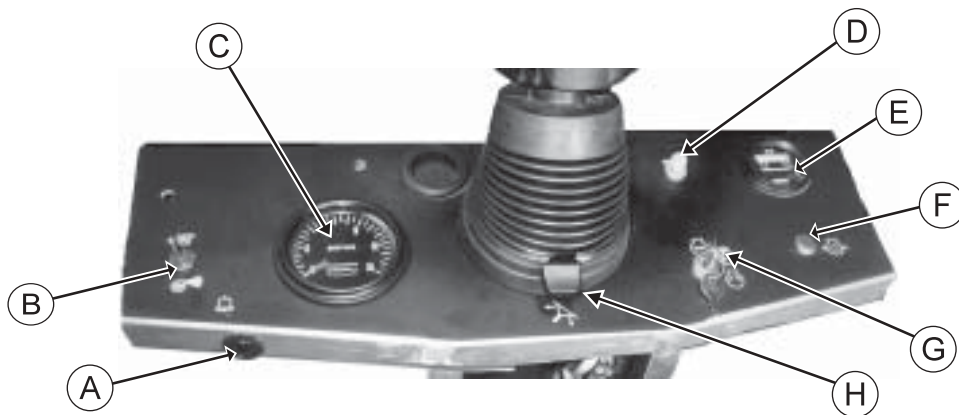


- A. Buzzer - The buzzer sounds if the pump is running dry.
- B. Pump On/Off Switch - Turns pump on or off.
- C. Speedometer - The Speedometer indicates ground speed of the vehicle in miles per hour and kilometers per hour. (OPTIONAL)
- D. Circuit Breaker - The circuit breaker is a resetable fuse. To reset push down on it.
- E. Hour Meter/ Volt Meter - The hour meter indicates hours of machine operation. It operates only when the ignition switch is on. The volt meter indicates battery voltage. When starting, the battery voltage should not drop below 9 volts. With key on, engine not running, the voltage should be 12 volts. With engine running at 3600 rpm the voltage should read around 14 volts.
- F. Oil Light - The oil light should come on when the ignition is on without the engine running and go out when the engine is running. The oil light will light when the oil pressure is low. If oil light should come on, shut engine off immediately and find the cause.
- G. Ignition Switch - The ignition switch has three positions: Off - Run - Start.
- H. Tilt Steering - Hold lever down and adjust steering wheel to desired position and release lever.

- I. Spray Boss Control - Engages and disengages speed boss. Forward is engage and all the way back is disengage. When the lever is engaged it sets a stop for the accelerator. The accelerator pedal must be used to maintain this speed. To adjust speed use the knob on the end of the lever, counter clockwise increases speed and clockwise decreases speed. Disengage the lever and you will have accelerator pedal range.
- J. Hand Throttle - The hand throttle is used to regulate engine speed.
- K. Choke - The choke is used in starting the engine. Pull choke out to close choke when starting a cold engine. Push in when engine starts. A warm engine may require "choking" to start.
- L. Boom Switches (Electric Lift Kit)
- M. Boom Levers (Hydraulic Lift Kit)

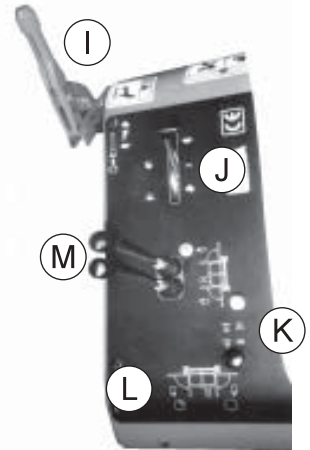


- N. Park Brake - The park brake is only a parking brake. Pull back to release, push forward to apply. Some adjustment can be made by turning the knob clockwise to tighten and counter clockwise to loosen.

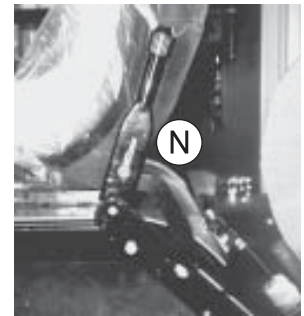


- O. Accelerator Pedal - This pedal controls ground speed. Press pedal to increase speed. Varying the amount of movement of the pedal will vary the ground speed.
- P. Reverse Pedal - This pedal controls ground speed in the reverse direction.

When pedals are released the hydrostatic transmission centers and stops the vehicle with a braking action.

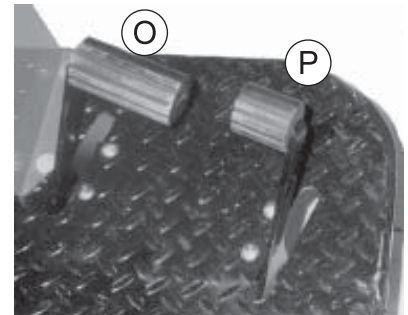

MASTER BOOM SWITCH

The master boom switch (R), located on the left floorboard is used to override the master switch on the computer console of the spray systems. By pushing down it will turn on/off the booms. *For 834 Systems* the Master Switch on the computer **must be on** for the master boom control switch to work. *For the 440 System* the Master Switch on the computer **must be off** for the master boom control switch to work.

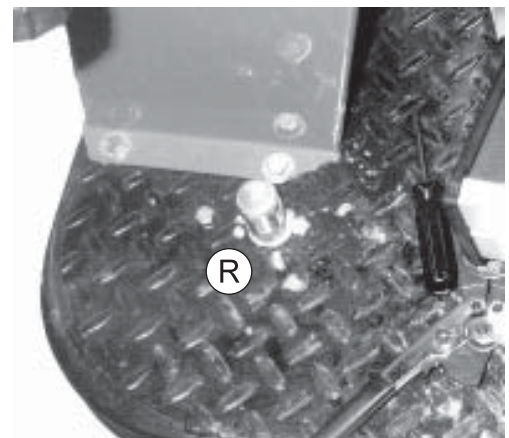

OPERATION

Before operating the Spray Star 1000, become familiar with all controls and functions. Also complete all maintenance requirements and read all safety warnings. Knowing the Spray Star 1000 thoroughly, how it operates, and by doing the prescribed maintenance steps, you can expect trouble free operation for years to come.

SAFETY

Safety needs to always be the concern of an operator of a moving vehicle or any machine with moving parts.


1. Keep all shields and guards in place.
2. Keep the parking brake engaged any time the operator is away from the vehicle or whenever service is performed.
3. Always wear the necessary protective clothing and equipment.
4. Turn engine off when refueling or performing maintenance not specifically requiring engine power.

DAILY CHECKLIST

1. Check the engine oil level. Add as needed. **DO NOT OVERFILL**. Refer to engine owner's manual for oil grade and procedure.
2. Tire pressure should be 20 psi (1.4 bar) maximum on all tires.
3. Inspect the electrical system and battery cables for loose connections or frayed wiring. Replace any faulty equipment or tighten if loose.
4. Check hardware for loose or missing nuts, bolts, screws, etc., and tighten or replace as needed.
5. Inspect hydraulic lines for damage or leaks. Never use hands to inspect for leaks.
6. Check the hydraulic fluid level. The hydraulic fluid tank is located on the left side of the machine. The fluid level should be 2"-2½" (5 - 6.4 cm) from the top of the tank when cold. Use only SAE 10W-40 API Service SJ or higher Motor Oil.
7. Inspect the steering, throttle and shift linkages for good hookups and clear travel.
8. Check controls for smooth, proper working operation. Lubricate as needed.
9. Check park brake adjustments. Adjust as required.
10. Check anti-vibration mounts on engine frame.

STARTING THE ENGINE

1. Make sure the fuel flow valve is 'On'. It is located on the fuel tank.
2. The ignition switch is located on the dashboard. Insert the key (A) and turn clockwise until the engine starts (C). Release the key and it will return to the run position (B). Use the choke and hand throttle as necessary.
3. Allow engine to idle and warm up before selecting direction of travel.

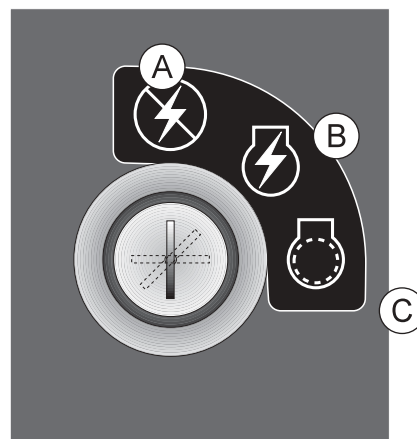

STOPPING THE ENGINE

NOTE: If the engine has been running under high power, let it run at slow idle speed a few minutes to cool the engine down, before turning the ignition switch to the OFF position.

1. Disengage spray pump.
2. Move the throttle lever to "slow" and turn ignition key to the "off" position.
3. Remove the ignition key and engage the park brake.



Never leave the vehicle unattended with the engine running. Always bring the vehicle to a complete stop, engage park brake, turn key off and remove key.

Before using the Spray Star, the operator and spray technician must familiarize themselves with all of the information on chemical spraying contained in the *Turf Spray Guide*.

NOTE:

All testing and calibrating of sprayers is to be done with water, not chemicals. This insures the safety to all involved in performing the calibration operation. Only after all calibration procedures are completed should chemical be added to the sprayer.

TOWING UNIT

When it is necessary to move the Spray Star 1000 without the engine running, the bypass valve built into hydrostatic pump must be "open" by turning it counterclockwise. The valve is located on the bottom of the pump. An "open" valve allows fluid to pass through the wheels freely. When normal driven operation is desired, valve should be "closed" by turning it clockwise. Failure to "close" the valve with engine running means no power to wheels.

HILLSIDE OPERATION

Do NOT stop or start suddenly on any slope. Be especially cautious when changing direction. Do NOT operate on slopes greater than 20°.

BATTERY

Batteries normally produce explosive gases which can cause personal injury. Do not allow flames, sparks or any ignited object to come near the battery. When charging or working near battery, always shield your eyes and always provide proper ventilation.

Battery cable should be disconnected before using "Fast Charge".

Charge battery at 15 amps for 10 minutes or 7 amps for 30 minutes. Do not exceed the recommended charging rate. If electrolyte starts boiling over, decrease charging.

Always remove grounded (-) battery clamp first and replace it last. Avoid hazards by:

1. Filling batteries in well-ventilated areas.
2. Wear eye protection and rubber gloves.
3. Avoid breathing fumes when electrolyte is added.
4. Avoid spilling or dripping electrolyte.



Battery Electrolyte is an acidic solution and should be handled with care. If electrolyte is splashed on any part of your body, flush all contact areas immediately with liberal amounts of water. Get medical attention immediately.

JUMP STARTING




Use of booster battery and jumper cables. Particular care should be used when connecting a booster battery. Use proper polarity in order to prevent sparks.

To jump start (negative grounded battery):

1. Shield eyes.
2. Connect ends of one cable to positive (+) terminals of each battery, first (A) then (B).
3. Connect one end of other cable to negative (-) terminal of "good" battery (C).
4. Connect other end of cable (D) to engine block on unit being started (NOT to negative (-) terminal of battery)

To prevent damage to other electrical components on unit being started, make certain that engine is at idle speed before disconnecting jumper cables.

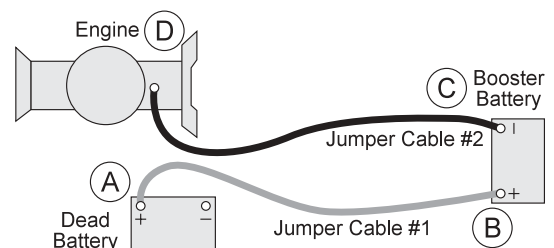

OPERATION (CONTINUED)

SPRAYER VALVE SETTINGS AND SPRAY TANK AGITATION

The gate valve on the suction side of the pump, between the tank and the pump must be open before pump is engaged. Close this valve only when necessary to clean the filter with spray material in the spray tank.


There is a manual flow control valve on the discharge side of the spray system that controls the agitator. This valve may be opened as much as necessary to provide hydraulic agitation through the quadrajet agitator in the tank bottom. This valve may be partially closed to prevent or reduce foam buildup from the spray materials inside the tank. When the liquid level in the spray tank reaches a certain level (usually 1-25 gallons (3.8-95 Liters) depending on terrain and other conditions) it may be necessary to close the valve in the agitator line in order to prevent loss of suction prime.

If your Spray Star is fitted with a hose reel, there is a second ball valve on the discharge system to supply material to the hose reel.

The Quadrajet agitation system operates with four venturi jets in the tank bottom. These jets have replaceable orifice discs which discharge the following amounts of spray material.

Nozzle Diameter	Input to Agitator in gpm	Input to Agitator in L/min	Agitator Pressure in psi	Agitator Pressure in bar	Agitator Output in gpm	Agitator Output in L/min
1/8"	1.9	7.2	25	1.7	6.3	23.8
1/8"	2.7	10.2	50	3.4	10.0	37.9
1/8"	3.8	14.4	100	6.9	15.0	56.8
5/32"	2.8	10.6	25	1.7	7.6	28.8
5/32"	4.2	15.9	50	3.4	12.2	46.2
5/32"	5.5	20.8	100	6.9	17.5	66.2
3/16"	3.6	13.6	25	1.7	9.1	34.4
3/16"	5.6	21.2	50	3.4	14.3	54.1
3/16"	7.9	29.9	100	6.9	18.7	70.8

You can change orifice disc sizes to enhance spray system performance. Smaller discs reduce amount of agitation (desirable in some foaming materials) and make more dischargeable liquid available for nozzles. Larger (or none) discs increase amount of agitation and make less dischargeable liquid available for nozzles.

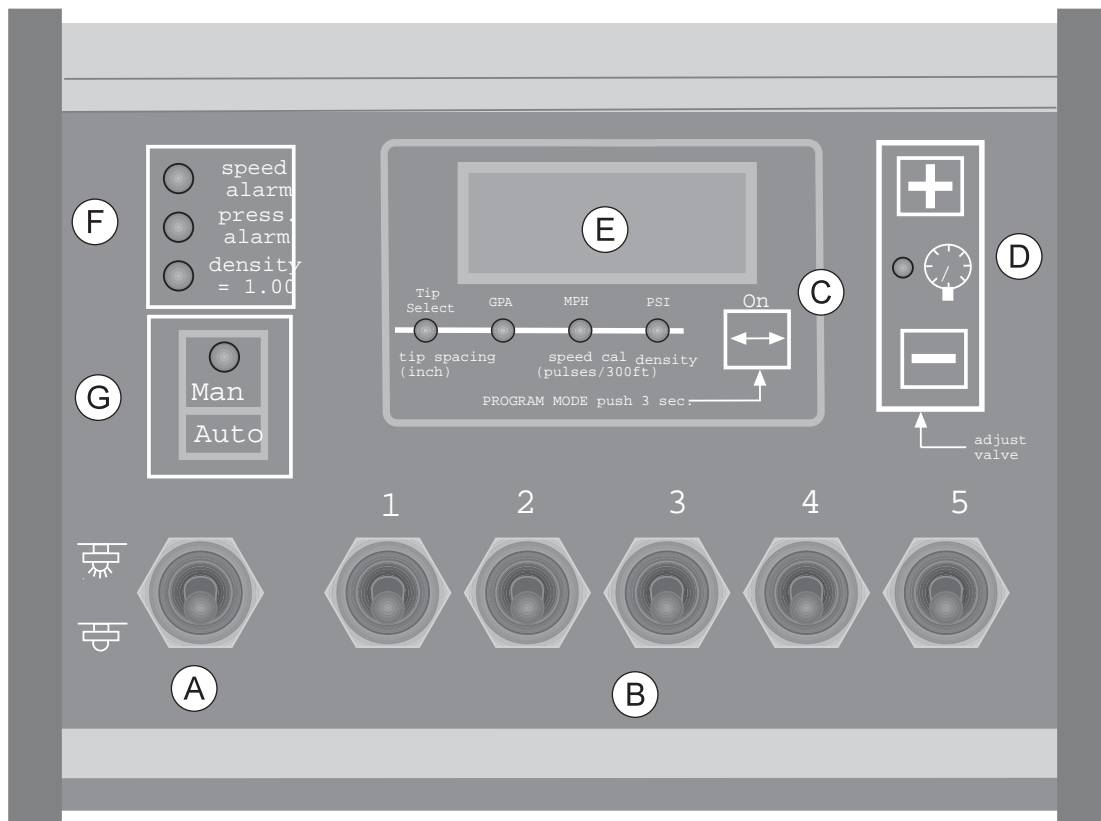









- A. Master Boom Switch - Activates or stops boom spraying.
- B. Individual Boom Switches - Used to activate any of up to 5 booms on a sprayer.
- C. Power On Switch - This key is used to power the console on.
- D. Value Changing Keys - The "+" and "-" keys are used to increase or decrease the values shown in the display.
- E. LCD Display - In program mode, the default values are displayed. In operation mode, actual values are displayed.
- F. Alarms and Warnings - The Speed Alarm flashes when no speed pulses are received during spraying. The Press. Alarm flashes when the signal from the pressure sensor drops below 4 mA while spraying. The Density Alarm is a warning that will light when the density selected in the programming mode is different than 1.0.
- G. Auto/Manual Key - Allows you to manually or automatically enter data.

PROGRAMMING GUIDELINES

Make sure that all hardware components are properly installed and tested. Before you start the programming process you should first check if the console and all sensors are working properly.


IMPORTANT PRELIMINARY INFORMATION

Before you begin, we recommend that you review the following Programming Guidelines that control the programming process:



1. The  key is used to power the console ON.
2. **Auto** &  simultaneous key combination is used to power OFF (when not spraying).
3. Holding  key for 3 seconds is used to enter programming mode.
4. Depressing the  key saves the current parameter and advances to the next programming step during programming mode.
5. The value of a parameter is changed with the  and  keys. Holding the  or  key changes the parameter rapidly.

START

To begin the programming process:

1. Read above for programming tips.
2. Be sure the Master boom switch is "OFF."
3. Turn console "ON" by pressing the  key. When the control console is turned on, the software version will be displayed for approximately 5 seconds. At the same time all LED's will be ON.

The software version and serial number of the console will be needed when calling for service support. The serial number is located on a sticker on the back of the console.

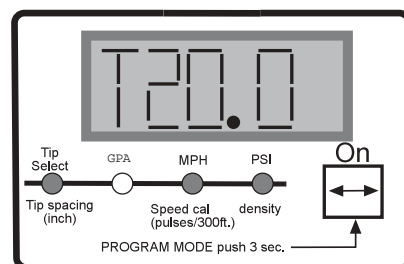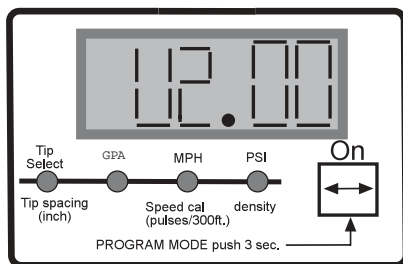



Example: the software version is U2.00.

4. After a short time the console will change to the target application rate display.

SYSTEM SETUP MODE

The System Setup Mode contains the programming steps that customize the monitor to the sprayer or sprayer components. These include calibration steps and parameters that, once programmed, will likely never change.


To enter the System Setup Mode:

1. First, be sure that the console is ON (if not put it on by pressing the  key and wait until the normal display is visible).
2. Ensure the Master boom switch is OFF.
3. Then press and hold the  key for 3 seconds to enter the System Setup Mode.

DENSITY

Default = 1.00

If a substance other than water is being sprayed or used as a carrier (e.g. liquid fertilizer), enter the density of that fluid.

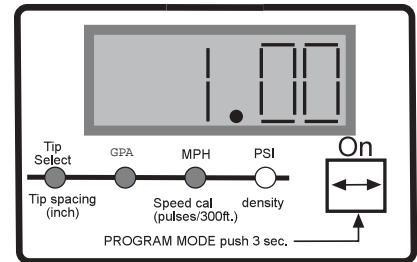




Weight of Solution Per Gallon	Liquid Density
7.0 lbs.	0.84
8.0 lbs.	0.96
8.34 lbs. - Water	1.00
10.0 lbs.	1.20
10.65 lbs. - 28% N	1.28
10.85 lbs. - 30% N	1.30
11.0 lbs.	1.32
12.0 lbs.	1.44
14.0 lbs.	1.68

NOTE:

If the solution that you are using can not be found in the chart at left, the Liquid Density can be calculated as follows:

$$\text{Density} = \frac{\text{Weight of Solution}}{\text{Weight of Water}}$$

Use the  or  keys to adjust this value. Once the correct units have been selected, depress the  key to advance to the next step.



SPEED SENSOR CALIBRATION


Default = 250 pulses/ 300 ft


The speed sensor needs to be calibrated in order to provide the proper speed reading. The value for this step is the number of pulses generated by the speed sensor in 300 feet.



AUTO CALIBRATION

The speed sensor can be automatically calibrated by driving 300 feet. The console will automatically detect a RADAR sensor (if used).

To start the auto calibration procedure, press simultaneously on the  and  keys. The display now will show CAL.

Now you have to drive to the starting point of the 300 ft distance. Push the  key to start counting speed pulses as you cross the start point.


Drive 300 ft and press  again to stop the pulse counting as you cross the finish point.

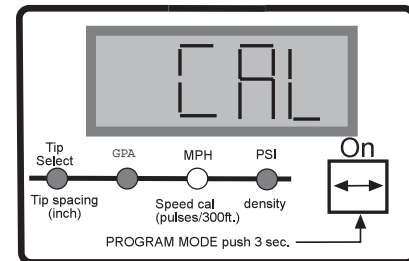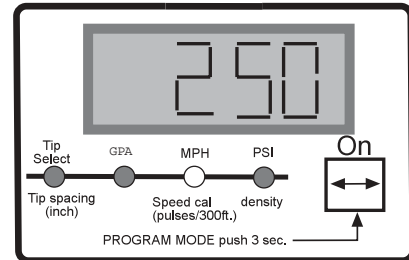


NOTE: During the pulse counting the Man LED will be flashing.



The number now on the display is the number of pulses corresponding to 300 ft

The auto calibration procedure can be escaped with the  key. The console will then return to the previous calibration value.

The calibration number for the 1006 is 965.

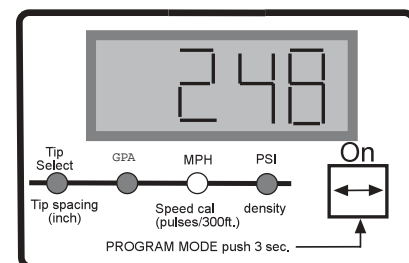




NOTE: The auto speed calibration should be repeated at least twice and an average of the calibration numbers should be entered.

MANUAL CALCULATION

To manually calculate the proper value for Wheel Speed Sensor pulses, you need to know the circumference of the wheel to which the sensor is mounted. It can be measured by marking the tire and measuring the distance covered as that mark makes one full revolution. Then use the following formula:

$$3,600 \times \# \text{ Magnets on Wheel}$$

$$\text{Wheel Circumference in Inches}$$

Use the  or  keys to adjust the value. Press the  key to validate the value and advance to the next programming step.



NOTE: The wheel calibration should be repeated if you are changing to another wheel diameter.

SPEED CALIBRATION (CONTINUED)

SIMULATED SPEED




If you enter 0 in this programming step, then the console always works with a simulated speed. This simulated speed can be used to test out the sprayer at stand still.


The simulated speed feature allows you to check out the sprayer at a certain speed without actually moving the sprayer. This can be done prior to any spraying activity. The simulated speed value can be changed with the

 and  keys when the speed is shown on the display in normal working mode.

TIP SPACING




Default - 20 inches

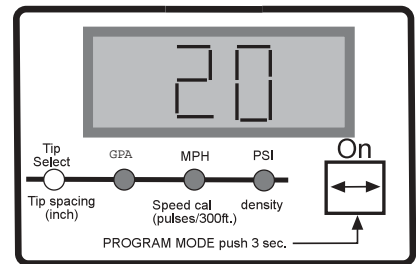Use the  or  keys to adjust this value. Once the correct units have been selected, depress the  key to advance to the next step. The value shown is represented in inches.





PRESSURE REGULATING MODE

Default = byP

The default value "byP" indicates that the pressure regulating valve is plumbed in a bypass line. If the default value is correct, press the  key. Use the  or  keys to change the value to throttle (tHr) mode if needed.

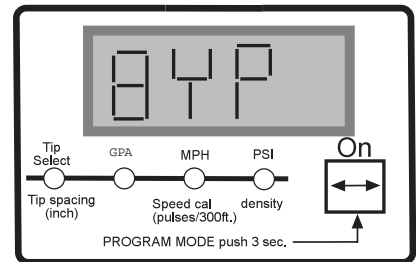


NOTE: This setting must match the actual plumbed mode of the regulating valve. Changing this setting will only reverse the polarity to the valve, it will not effect the physical operation of the valve.




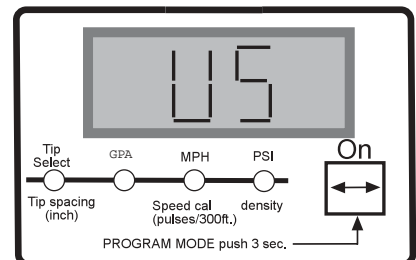
Press the  key to save this parameter and to return to the normal working mode.

APPLICATION UNITS

Default = US

Select the application units to be used for regulation. If you will be using US units (GPA) press the  key to advance to the next step. If you will be using **trf** units (G/1000 ft²) use the  or  keys to select this value.

Once the correct units have been selected, press the  key to advance to the next step.



NORMAL WORKING MODE

INTRODUCTION

In normal working mode, the display can show four different pieces of information indicated by the LED's below the display e.g.







Tip selection

Application rate in GP(G/1000ft²)

Speed in MPH



Pressure in PSI

The usage of the keys during normal working mode is summarized as follows:

1.  key is used to power ON and to move to another information display.
2. **Auto/Man** and  key combination is used to power OFF (when not spraying).
3.  and  keys are used for changing the target application rate or for changing the tip.
4. In manual mode the  and  keys drive the regulating valve to adjust pressure.

TARGET APPLICATION RATE DISPLAY

In this display the application rate in GPA (G/1000ft²) is shown. When a "t" is shown then the target application rate is displayed, otherwise the current application rate will be displayed any time the master boom switch is in the off position.



Press the  or  keys to select another target application rate. This can be done before the spraying operation begins with the Master switch off or can be done on the go while spraying in Auto Mode.

Press the  key to advance to the speed display.

SPEED DISPLAY


In this display the speed in MPH is shown.


Press the  key to advance to pressure display.

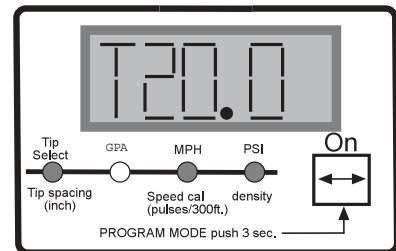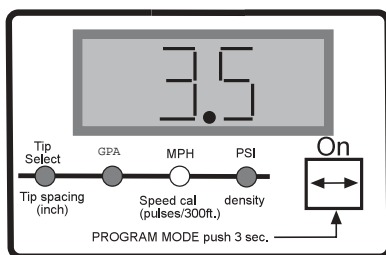

PRESSURE DISPLAY

In this display the pressure in PSI is shown.

Press the  key to advance to the tip selection display.

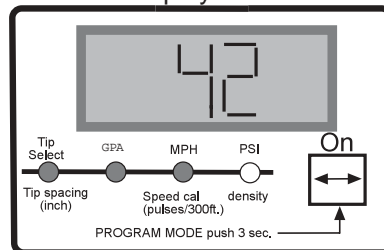


TIP SELECTION DISPLAY

This display is the tip selection display. On the display the two last digits of the VisoFlo® color coded tip are shown, e.g. an XR11004 corresponds with _04. (see Table Below) The last selection _P is a programmable selection in case the tips being used do not match one of the preprogrammed flow rates.

Press the  or  keys to select another tip.

NOTE:


The tip can only be changed with the Master switch in the OFF position and with the console in Auto mode.

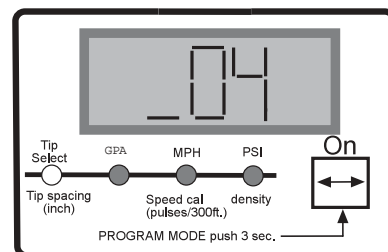



TeeJet® VisiFlo® Tip Color	Example TeeJet® Tip	Flow Rate In US GPM @ 40 PSI	TeeJet® 834 Tip Size Designation
Orange	XR11001VS	0.10	_01
Green	DG80015VP	0.15	_01.5
Tellow	TJ60-6502VS	0.20	_02
Turquoise	AI110025-VS	0.25	_02.5
Blue	TT11003VP	0.30	_03
Red	AI11004-VS	0.40	_04
Brown	TT11005VP	0.50	_05
Gray	TP11006VS	0.60	_06
White	XR8008VP	0.80	_08
Lt. Blue	TK-VS5	1.00	_10
Lt. Green	TF-VS7.5	1.50	_15

PROGRAMMABLE TIP


As mentioned above the _P section of the Tip Selection Display can be programmed to match the flow rate of the tips on the sprayer if they do not fall into one of the categories listed above. To access the programmable section, while viewing the _P display, simultaneously depress the **Auto/**



Man and  keys for three seconds.

The display will then display a flashing flow rate represented in US GPM at 40 psi. The Tip Select LED will also be flashing. Use the  and  keys to adjust this value so that it matches the flow rate of one of your tips in GPM at 40 PSI.

NOTE:

It is critical that this flow rate be referenced at 40 PSI for the controller to regulate the application rate correctly.

Press the  key to save the _P value and advance to the Tip Select display.

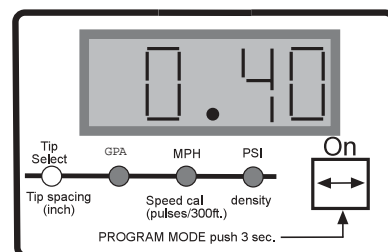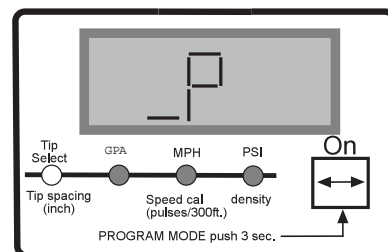

OPERATING INSTRUCTIONS

SPRAYER CHECKOUT

Before spraying check all connections related to the Sprayer Control assembly. Particular attention should be given to the speed sensor to be sure the sensor and bolts or magnets are in-line and secured.




Whenever you are working around a sprayer or farm chemicals, be sure to wear protective clothing and eyewear.

CAUTION

Partially fill the sprayer tank with water to flush the system and to make a visual check of the spray tips to be sure all tips are delivering a good spray pattern.

Follow these steps, in sequence, being sure the Master Boom Switch is in its "OFF" position:





1. Be sure the tank shut-off valve is open.
2. Start the engine, engage pump, and set the rpm to that which will be used when spraying.
3. Switch the computer on by depressing the  key on the display panel.
4. Turn "ON" the toggle switches for each of the spray booms on your sprayer.
5. Ensure that the **Auto/Man** key indicates manual mode.
6. Now, toggle the Master switch to "on."
7. Adjust the pressure with the \pm switch.

At this point, the sprayer will be activated and spray tip performance can be visually checked. The \pm switch can be used to raise or lower your spraying pressure. To stop spraying, toggle the Master switch to "OFF."



The above steps provide a quick way to checkout your sprayer and computerized control system.

THE SPRAYING OPERATION

You have filled the sprayer tank and have thoroughly mixed the chemical(s). Your application rate has been determined as well as the spray tip you will be using, with the sprayer data programmed into the computer.

1. Switch the computer on by depressing the  key on the display panel.
2. Toggle the boom switches to their "ON" position, for each of the booms on your sprayer.
3. Take notes of the "numbered" booms on each side of the sprayer, so that the appropriate boom can be toggled "OFF" as necessary.
4. While spraying with the Master switch "ON", you can scroll through the different displays using the  key until the information you want is on the display:
 - a. actual application rate in GPA (G/1000ft²)
 - b. vehicle speed in MPH
 - c. pressure in PSI
 - d. tip being used
5. Adjust the target application rate with the  and  keys.

As you enter the field to the point where you will begin spraying, turn the Master boom switch to "ON" position.


This will activate the spraying operation. Maintain your usual vehicle speed for spraying. Use the  and  keys to boost the application rate if needed. Small changes in vehicle speed are compensated by automatic rate controller while spraying in **Auto** mode.

If for any reason you need to stop, turn the MASTER BOOM SWITCH to "OFF."

AUTOMATIC POWER DOWN

The TeeJet® 834 Sprayer Monitor has an automatic power down feature. With the Main Valve switch in the "OFF" position, the Console will automatically shut down after 10 minutes of no inputs (when in normal working mode). This prevents possible battery drainage.

You can also power down the controller by then following key combination:

Press simultaneously the **Auto** and  keys and the Console will power down immediately (only with the Master switch OFF).



Do not switch off the console by removing the main cable!


ALARMS AND WARNINGS

On the 834 Console there are three LED's for indication of alarms or warnings.

Speed Alarm - LED flashes when no speed pulses are received during spraying (Master in the ON position). This indicates that there is something wrong with the speed sensor or that you are standing still while spraying.

NOTE:


When this alarm is triggered, the display will automatically switch the application display to view speed (if not currently viewing speed) and the speed display will flash off and on as well. This allows operator to immediately determine the location of the problem.

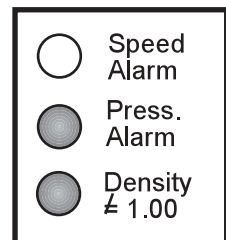


Press Alarm - LED flashes when the signal from the pressure sensor drops below 4 mA while spraying (Master in the ON position). This indicates that the pressure sensor is not working properly.

NOTE:

When this alarm is triggered, the display will automatically switch the application display to view pressure (if not currently viewing pressure) and the pressure display will flash off and on as well. This allows operator to immediately determine the location of the problem.

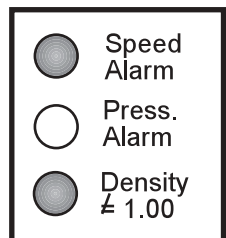

Density - LED is a warning LED and it will be lit when the density selected in the programming mode is different from 1.0 (e.g. the density of water). The LED warns the user that the console is working with a density factor different from 1.00.

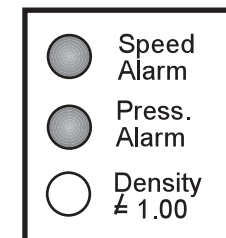

SPRAY OPERATION

SPRAY OPERATION (After Proper Setup and Calibration)

1. Add $\frac{1}{2}$ the amount of water required for the spray operation to tank using air gap filler.
2. Start engine, set engine speed below 2000 RPM, and engage pump after taking all previously described safety and operation precautions.
3. Open agitator valve.
4. Add chemicals (taking all precautions described in this manual and by the chemical manufacturer).
 - a. Liquids may be poured directly into tank.
 - b. Wettable powder chemicals must be pre-mixed with water in a container to form a slurry. The mixture is then added to the tank through the fillwell strainer.
 - c. Chemical in soluble packs are place into the fillwell strainer basket and dissolved by adding water through the basket.

The balance of the water required for the spray operation is added to the tank through the fillwell strainer, using the air gap filler. This will wash any undissolved chemical into the tank.

5. Transport to sprayer site with and agitator operating.
6. Set Engine speed between 2000-3200 RPM.
7. (Optional) Engage ground speed control.
8. Obtain desired spraying speed before activating spray with switches on spray control console.
9. The master boom switch, located on the left floorboard is used to override the master switch on the computer console of the spray systems. By pushing down it will turn on/off the booms. *For 834 Systems* the Master Switch on the computer **must be on** for the master boom control switch to work. *For the 440 System* the Master Switch on the computer **must be off** for the master boom control switch to work.



Review the capacity of nozzles being used. Total capacity of all nozzles plus agitation system must not exceed pumping system capabilities refer to *Spraying Procedure* section of this manual. FLUSH PUMP AFTER USE

Shut-Off	20GPM	40GPM	60GPM	80GPM	100GPM
120psi	100psi	80psi	60psi	30psi	10psi
100psi	95psi	76psi	52psi	26psi	5psi
80psi	75psi	62psi	45psi	21psi	-
60psi	55psi	40psi	25psi	5psi	-

To determine the correct performance data for your application, first shut off all flow on discharge side of pump and determine the shut-off pressure at the pump. Use this Shut-Off pressure to determine which line of data applies.

SPRAY OPERATION (CONTINUED)

One of the most common causes for faulty-pump performance is corrosion inside the pump. Flush the pump and entire system with a solution that will chemically neutralize the liquid pumped. Mix according to manufacturer's directions. This will dissolve most residue remaining in the pump, leaving the inside of the pump clean for the next use.

TO PREVENT CORROSION

After cleaning the pump as directed, flush it with a permanent type automobile antifreeze (Prestone, Zerex, etc.) containing a rust inhibitor. Use a 50% solution that is, half antifreeze and half water. Then coat the interior of the pump with a substance which will prevent corrosion such as Fluid Film or WD40. If unit will not be used for an extended period of time, disconnect hoses into and out of the pump, seal openings to the pump with caps or tape. Dispose of fluids according to all federal, state and local regulations.

NOTE: All chemicals and chemical residue must be removed after each use. Dispose of fluids and residue according to all federal, state and local regulations.

SPRAYER CLEANING

Empty tank and clean unit thoroughly after each use following these instructions:

1. Remove coupling and rinse inside of tank thoroughly with clean water, replace coupling.
2. Fill tank ten percent full with clean water, start pump and discharge water through spray hose or spray boom (with nozzles removed), until empty.
3. Remove drain coupling again and rinse tank interior thoroughly.
4. Rinse exterior of sprayer thoroughly with clean water.
5. Remove bowl from sprayer filter (on operators left hand side of the spray tank). Remove stainless steel screen. Wash bowl and screen thoroughly. Apply thin layer of petroleum jelly to O-ring or gasket. Replace screen and bowl, taking care to position O-ring or gasket properly. Hand tighten.

MANUAL HOSE REEL

Located at the back of the Spray Star behind the tank. Open the ball valve located near the pump to allow fluid to flow into the hose reel. Place the lockout pin in the unlocked position by pulling and turning it half a turn, this will allow you to pull out additional hose or to use the handle and wind up the hose. To prevent movement during transport or storage place the lockout pin in the locked position.

ELECTRIC HOSE REEL


Located at the back of the Spray Star behind the tank. Open the ball valve located near the pump to allow fluid to flow into the hose reel. To unwind hose just pull on the hose to get the desired amount. To wind up the hose make sure the toggle switch is in the ON position, push the momentary push button switch until you have reeled in the amount of hose desire. Turn off the safety switch when not in use.

FOAM MARKER


Located to the right of the control panel. Use lever (A) to designate which boom is to be used to dispense foam. Use dial (B) located on top of foamer to adjust pressure for the amount of foam that will be dispensed. Switch (A) also turns foamer on or off.



WIRING SCHEMATIC

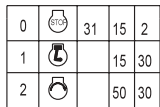

HYDRAULIC SCHEMATIC

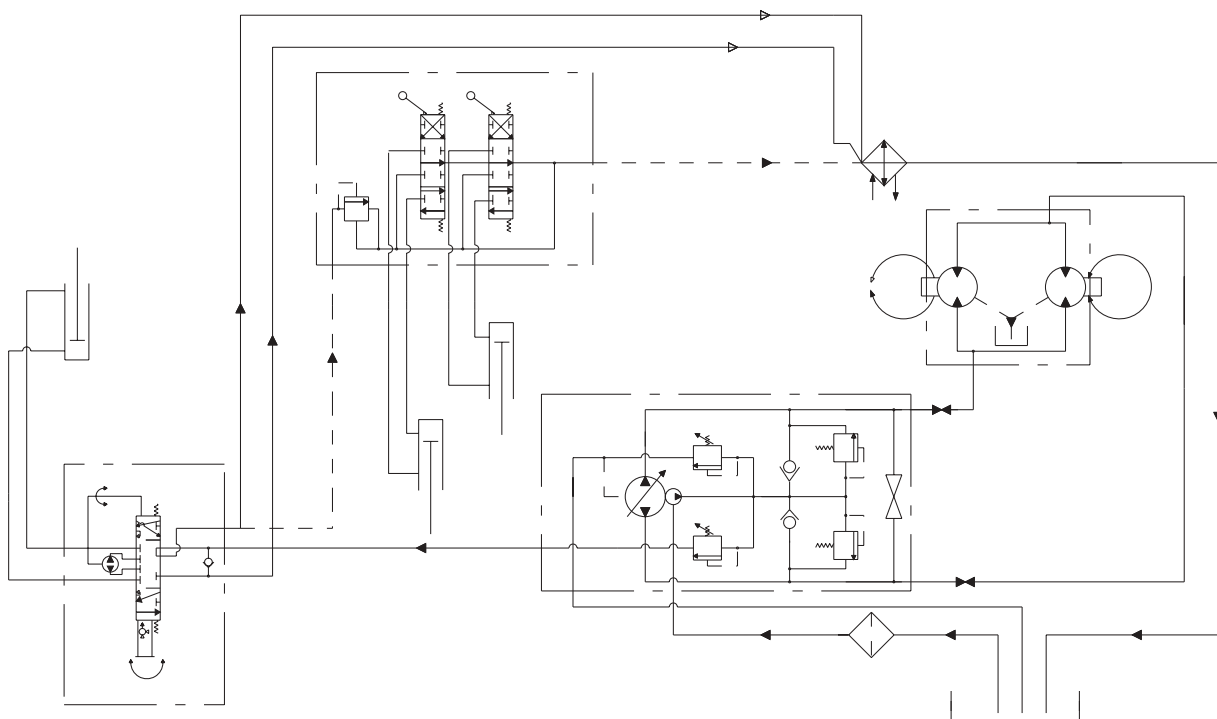

SPRAYING INTRODUCTION

This section is intended to offer practical guidelines for the distribution of liquid chemicals over an area of turfgrass such as golf courses, park land, school grounds and lawns. SMITHCO makes no representation as to the suitability of any technique or product for any particular situation. This section is suitable for self-propelled spray vehicles or sprayers mounted onto vehicles.

Boom Spraying is the most effective, accurate and efficient method of applying chemicals to large turf areas. It may be done by means of:

- A dedicated spray vehicle
- A sprayer mounted upon a utility vehicle

Sprayers are typically equipped with wide spray booms. Generally these booms are between 15 feet (4.5 m) and 20 feet (6 m) in width. They are divided into three sections, with hinges that permit the long outer sections to automatically move out of the way and reset if an obstacle such as a tree or fence is in your path.

To minimize the chance for missed areas or double application use a device to mark the outside boundaries of each spray swath. Foam markers and dye markers are advisable.

TURF MANAGEMENT

Turf management chemicals are made for four general purposes:

1. **Fungicides:** Prevent or cure fungus on turfgrass. They are made in 2 general types:
 - Systemic - Chemicals enter the plant system and protect or cure it of, fungus.
 - Contact - Kills fungus with which it comes into contact.
2. **Insecticides:** Eliminate damaging insects and worms (such as grubs, beetles, ants, etc.)
3. **Herbicides:** Control and eliminate undesirable weeds and grass from turf areas and non-turf areas such as bunkers, trails, fences, etc.
4. **Nutrients & Fertilizer:** Promote growth, beauty and color in turfgrass.

Some materials have to be applied so that they get into the soil below the plant leaves. This is called "*soil application*". In order to do this, they are best applied with a *large volume* of water. They are often then *watered-in* using the irrigation system. This type of chemical material includes systemic chemicals and chemicals designed to destroy pests which live in the thatch and the soil.

Other materials must be applied to reach a problem that is present on the plant leaves. This is called "*Foliar Application*" and requires a *lower volume* of water. Instead of irrigation water, these materials are further activated by dry air and sunshine. They include contact fungicide and many herbicides.

The user of sprayers and chemicals must follow the directions provided with the spray material. It is the only way to insure safe and effective results. It provides information on how much chemical and how much water is to be applied to the area to be sprayed.

Though there are many types and sizes of nozzles, two specific types have proven most successful in turfgrass management.

- The first type is **target-directed**. It sprays material in a direct line downwards to the target turfgrass. These are flat fan nozzles, commonly referred to as TeeJet nozzles. They are available in a wide variety of sizes for any required discharge volume rate. They are the best for many contact or foliar applied pesticides. They are spaced either 10" (25 cm) or 20" (51 cm) apart and overlap one another by about ¹/₃.
- The second type useful in turf management are **broadcast** type nozzles. They are commonly referred to as raindrop or floodjet nozzles. They spray a hollow-cone shaped pattern of much larger droplets which fall quickly to the turf under their own weight. They are best for systemic pesticides or any material requiring a large volume of water for soil application. The larger droplets are not as subject to drift from wind and are a safer, more environmentally friendly choice in many situations.

HOSE & HANDGUN SPRAYING

A handgun (hand-nozzle or hand-lance) is used to control and direct the spray pattern to the ground, shrub or tree. They must be constructed of long lasting and noncorrosive materials such as brass, stainless or aluminum. The handgun fits to a hose of any length from the sprayer allowing operator mobility. The hose should be as short as possible while still permitting operator mobility.

Liquid loses pressure due to friction as it travels through the hose, 1-3 psi (0.07-0.21 bar) for each foot (30 cm) of hose. For most operations $\frac{1}{2}$ " (1.25 cm) inside diameter hose is adequate. Trees over 40 ft (12 m) high require $\frac{3}{4}$ " (2 cm) inside diameter hose and a sprayer pump capable of delivering a volume of at least 20 gpm (75 lpm) and a pressure of at least 400 psi (28 bar).

NOZZLES

Always be alert to the possibility of a plugged or damaged nozzles. Serious misapplications may result. Check nozzle output periodically.

Modern nozzles use spring and diaphragm check valves to insure positive cutoff of chemicals without drip.

Snap-on caps make replacing and cleaning nozzles, quick, easy and fool proof with proper reinstallation.

An operator can see at a glance if all nozzles are the same size by the color code.

3 FUNCTIONS FOR A SPRAY BOOM NOZZLE

1. Regulating the flow is done through size of the orifice (opening) within the nozzle. All nozzles, regardless of type, have some point within them that regulates the flow of liquid. Obviously, the larger the opening the greater the rate of flow volume. Volume is expressed in Gallons Per Minute (gpm) or Liters Per Minute (lpm). Do not confuse the term volume with application rate, which will be covered later.

As pressure increases, the flow volume in a given nozzle also increases. For example, an average size nozzle which discharges 0.52 gpm (1.4 lpm) at 30 psi (2 bar), will discharge 0.73 gpm (2 lpm) at 60 psi (4 bar). In this example, an increase in pressure of 100% has caused an increase in discharge of 40%.

Some nozzles deliver a small volume (for example: 0.2 gpm (0.75 lpm)). Some nozzles deliver a relatively large volume (for example: 1.5 gpm (5.7 lpm)), or $7\frac{1}{2}$ times as much as the smaller nozzle in this example.

The amount of material (volume) to be applied is determined by the effect the chemical has on the turf.


2. The nozzle on a sprayer is to form the liquid into droplets. The size of the droplet is determined by two factors design and system pressure (psi/bar).

Particular applications are done best by big droplets such as systemic fungicides, insecticides and some herbicides in order to reduce drift. Other applications require small droplets like contact fungicides and some herbicides. Again, this is determined by whether the chemical is foliar applied or soil applied. Large droplets for soil applied material, small droplets for foliar applied materials that evenly cover the plant better.

Pressure also affects droplet size. More pressure at the same nozzle produces smaller droplets, more subject to drift. The general rule on pressure is to use the lowest pressure possible with just enough to form adequate spray nozzle patterns.

- Disperse the material in a specific pattern that will insure even distribution of chemical across the swath covered by the boom.

As shown (to the right) the pattern formed by flat fan (TeeJet) nozzles would show most liquid concentrated at the center, then tapering off where it begins to overlap with the next nozzle—approximately $\frac{1}{3}$. The pattern of liquid dispersed by the hollow-cone (Raindrop) is more even across its width. Each nozzle overlaps the adjoining nozzle by 100%. That is to say the area covered by each nozzle extends to the center of the two nozzles on either side.

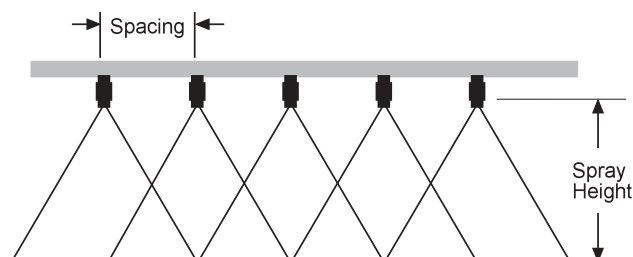

In order to properly develop their spray pattern, each nozzle must be the proper distance from the next nozzle (spacing) and the proper height above the ground.

NOZZLE SCREENS (STRAINERS)

Smaller nozzles require nozzle screens or strainers to prevent clogging.

- TeeJet type nozzles size 8001 and 80015 and RF Flat Spray Raindrop Nozzles require 100 mesh screens.
- TeeJet type nozzles from size 8002 through 8008 and RF Flat Spray Raindrop Nozzles require 50 mesh screens.
- Raindrop Hollow Cone Nozzles Size RA-2 through RA-6 require 50 mesh screens.
- Raindrop Hollow Cone Nozzles Size RA-8 and larger do not require strainers.
- Turbo Floodjet Nozzles TF-VS2 through TF-VS3 require 50 mesh screens.
- Turbo Floodjet Nozzles TF-VS4 and larger do not require screens.

SPACING

Turf spray nozzles are normally 10" (25 cm) or 20" (51 cm) apart (some cases 30" (76 cm)), depending on the type of spray boom and type of area to be sprayed.

Very fine, level areas (golf greens and tees, bowling lawns, tennis courts, etc.) may be sprayed with nozzles spaced every 10" (25 cm).

BOOM HEIGHT

Height is very important in permitting spray nozzles to develop their proper spray pattern. If nozzles are too high, excessive overlap develops. If nozzles are too low, there is not enough overlapping of nozzle spray patterns.

NOZZLE TYPE	NOZZLE SPACING	HEIGHT ABOVE THE GROUND
80° Flat Fan	20" (51 cm)	18" (45-46 cm)
65° Flat Fan	10" (25 cm)	12" (30-31 cm)
Raindrop Cone	20" (51 cm)	18" (45-46 cm)
Raindrop Flat	20" (51 cm)	12" (30-31 cm)
Turbo Floodjet	20" (51 cm)	15" (38-39 cm)
Turbo Floodjet	30" (76 cm)	16" (40-41 cm)

Improper nozzle height or spacing prevents proper application of chemical. Some areas are under treated and chemicals are ineffective. Some areas are overtreated with wasted chemical and possible turf damage.

Operating your sprayer at a desired speed and pressure on a hard, dry surface is a good method of checking spraying consistency. Observe nozzles in operation, observe if the area dries evenly. If there are alternating wet and dry streaks, raise or lower the spray boom. If the wet streaks are directly under the nozzle, the boom is too low. If the wet streaks are between the nozzles, the boom is too high.

CALIBRATION INTRODUCTION

Calibrating simply means to adjust a set of variables on the sprayer in order to deliver the desired amount of chemical to a known area of turf.

The job of calibrating the sprayer consists of balancing these variables so that your sprayer delivers the desired application rate. That is, an amount of chemical on a given area. It is expressed as:

Gallons Per Acre (gpa) (1 US gpa = 0.83 UK gpa)

or **Gallons Per 1,000 Square Feet (gpt)**

or **Liters Per Hectare (lph)** (1 US gpa = 9.35 lph)

A number of acceptable methods for calibrating a turf sprayer are widely available. The calibration method chosen must take these variables into account. They must include known ground speed (by measurement or from an accurate speedometer) and nozzle output (gpm or lpm) from a nozzle chart or from actual measurement. The variables are:

PRESSURE

Just as pressure increases the volume discharge rate, it also increases the application rate. Pressure must increase by 4 times in order to double the application rate. Small pressure changes of 10 psi (1.4 bar) or less do not greatly affect performance.

Pressure is established and maintained by a pressure control valve or by a flow control valve located on the sprayer.

NOZZLE CAPACITY (VOLUME)

We have covered the different types of spray patterns of various nozzles and made our selection of type accordingly. We now have to choose a size which will provide the correct application rate.

Sizes are available for all requirements. Consult the nozzle chart in this manual for your nozzle type in order to select the correct size.

TRAVEL SPEED

Increased travel speed decreases the application rate (gpa, gpt or lph). Travel speed must be safe and appropriate for the area to be sprayed.

Unlike pressure changes which have only a minor effect on application rate, ground speed changes have a more major and direct effect. For example: 50% decrease in ground speed means a 100% increase in application rate. If the vehicle does not have an accurate speedometer, correct speed must be determined by timing the sprayer travel over a measured distance. (Refer to the page in this manual titled, "Abbreviations and Conversions").

To calibrate a sprayer, the user must:

1. **Understand** the Variables
2. **Set** those variables using one of the proven methods available.
3. **Make** a trial run and measure the output (use water, not chemical).
4. **Determine** the output.
5. **Make** adjustments to the 3 variables until the output is at the desired level.

This covers the principles of what must be known to prepare a sprayer for operation.

NOTE: There are other acceptable and proven methods of calibrating a turf sprayer for application. Other techniques may be more suitable depending on operational needs and technical competence of the operator.

THE NOZZLE CHART METHOD OF CALIBRATION

The Nozzle Chart Method is useful when the sprayer nozzles are new or nearly new. It is also the most useful method to employ when the sprayer is equipped with an Electronic Spray Control System. The Electronic Spray Control System does most of the calibration work, it is up to the operator to select the proper combination of nozzle size and ground speed which will deliver the desired application rate.

The nozzle chart method requires the use of the appropriate nozzle charts which are found in the back of this manual (Nozzle Charts 1 through 8). Nozzle charts for other nozzles are available from the manufacturer.

CALIBRATION STEPS

1. **Determine “HOW” your sprayer is to be calibrated from the list of variables below.**

- a. **Nozzle Type** (TeeJet, Raindrop, Turbo Flood)
- b. **Spacing** (10" (25 cm) or 20" (51 cm) or 30" (76 cm))
- c. **Expression of Application Rate** (gpa or gpt or lph)

The answers to these three questions will direct you to the appropriate nozzle chart for your application. The correct nozzle chart **MUST** be used.

2. **Determine the Desired Application Rate.**

This is determined from the information on chemical labels or other technical information available from a variety of sources.

3. **Determine an Acceptable Ground Speed.**

Conditions over which the sprayer will operate generally dictate the appropriate ground speed. Within the limits of practicality and efficiency, spraying should generally be done at lowest possible speed. This increases operator safety and contributes to more precise application of chemicals. For example, golf greens and tees and hill areas would generally be sprayed in the range of 2½ to 3½ mph (4-6 kph). Larger, open and more level areas such as golf fairways and park or school grounds would be sprayed at 4½ to 6 mph (7-10 kph).

The vehicle which carries or tows the sprayer should be equipped with a precise low-speed speedometer. If it is not, exact ground speed at a given engine speed must be determined by timing the travel of the sprayer over a measured distance.

4. **Determine Nozzle Size.**

Refer to the appropriate nozzle chart in the back of this manual for your nozzle TYPE (the type of nozzle you have or type you wish to use), nozzle SPACING and CALIBRATION TYPE (gpm, gpt or lph).

You will note from the chart, that application rates from any given nozzle decrease as the ground speed increases. In other words, the faster you drive, the less material you are applying.

Application rates are shown in the columns to the right of the charts. Once the desired application rate is decided upon, it should be located, as nearly as possible in one of these columns on the appropriate chart for your operation. It could well be that the approximate rate desired would be obtained from the nozzles already installed in the boom. If this is not possible, then nozzles will need to be changed.

NOTE:

When selecting a new nozzle size refer to the “Discharge Rate Column” on the nozzle charts. The Discharge Rate (gpm or lpm) multiplied by the number of nozzles should not exceed 75% of the actual discharge volume of the sprayer pump. [i.e., if you need to use nozzles which discharge 0.8 gpm (3.0 lpm), and the spray boom is equipped with 12 nozzles, the sprayer pump would have to produce an actual discharge volume of 13 gpm (49 lpm) in order to properly supply these nozzles.] If the collective volume of the spray boom nozzles exceeds the actual discharge volume of the pump, inadequate pressure and poor nozzle distribution patterns may result.

Once nozzle type and size have been determined, those nozzles are installed in the sprayer boom. Nozzles should be expected to be replaced after 15-20 hours of actual sprayer operation. After nozzles are installed, make trial application of water over a known area to check application rate.

THE NOZZLE CHART METHOD OF CALIBRATION (CONTINUED)

5. For Sprayer with Electronic Spray Control Systems.

On sprayers equipped with Electronic Spray Control Systems such as those manufactured by Raven Ind., Micro-Trak Co. and Dickey-John Co., it is still important to select the right type and size of nozzle for the required operation. Electronic Spray Control Systems cannot function properly if the nozzles are not capable of delivering the programmed (desired) application rate. Nozzles which are too large will not develop adequate pressure or satisfactory spray patterns. Nozzles which are too small will not allow the discharge of spray material at the programmed application rate.

Further, when calibrating sprayers which are equipped with Electronic Spray Control Systems, care must be taken to use the mode of operation on the Spray Control System (Gallons per acre "US" Mode); Gallons per 1,000 Square Feet ("Turf" Mode); or Liters per Hectare (Standard International Model), which corresponds with the nozzle calibration charts (gpa, gpt or lph).

6. Using the Nozzle Charts.

Select the correct chart based on your nozzle type, nozzle spacing and desired expression of application rate (gpa, gpt or lph). If the desired operating speed is not found on the nozzle chart, it is simple to determine application rate at different speeds by estimating from the known facts.

Example 1: If the desired speed is $2\frac{1}{2}$ MPH (4 kph) on a sprayer using Raindrop nozzles (Chart 5). The average between the application rates for 2 MPH and 3 MPH may be assumed to be the application rate for $2\frac{1}{2}$ MPH.

Example 2: The desired speed is 6 MPH. Use the application rate column for 3 MPH a divide by 2.

7. Converting Nozzle Chart Method to British Gallons.

To convert any of the Gallon Per Acre rates to Imperial Gallons per acre, (Imp gpa) multiply by 0.83. To convert any of the Liter Per Hectare rates to Imperial Gallons Per Hectare (Imp GPH), multiply by 0.22.

8. Checking the Actual Application Rate.

After the combination of ground speed, nozzle size and operating pressure has been selected, the sprayer should be operated with water only to determine if the target application rate is achieved.

THE "128" METHOD OF BOOM SPRAYER CALIBRATION

The "128" Method is useful for calibrating sprayers and also for checking the calibration of sprayer calibrated by the Nozzle Chart Method and sprayers using Electronic Spray Control Systems. The "128" is based on a convenient mathematical relationship that exists between US Gallons, liquid ounces and acres.

An ounce is 1/128th of a (US) gallon. If an area which was "1/128th of an acre" could be found, the number of ounces applied to that small area would be equal to the number of gallons applied to the acre. Thus, no mathematical computations would be required.

To determine an area which is 1/128 of an acre:

- On nozzles with 20 inch (51 cm) spacing, measure off a distance of 204 ft (62 meters). Mark a "START" and a "STOP" line. The rectangle formed by this distance and the spraying width of one nozzle 20" (51 cm) is equal to 340 square feet which is equal to 1/128 acre. Therefore, the amount of material applied to this area by one nozzle in OUNCES is the same amount of material applied to an acre in GALLONS (gpa).
- On nozzles with 10 inch (25 cm) spacing, the measure distance is 408 feet (124 meters).
- On nozzles with 30 inch (76 cm) spacing the measured distance is 136 feet (41 meters).

CALIBRATING FOR APPLICATION

1. Fill the sprayer tank with water. Run the sprayer, inspect it for leaks and make sure all systems function properly.
2. Drive the sprayer through the measured distance discussed above at normal spraying speed, record the travel time required to cover the measured distance in seconds with a stopwatch.

THE "128" METHOD OF BOOM SPRAYER CALIBRATION (CONTINUED)

The carrying or towing vehicle is to be traveling at the desired speed when it crosses the start line of the measured course.

Repeat this procedure and determine the average of the two times.

3. With the sprayer parked, run the sprayer at the required pressure level. Catch the output of each nozzle in a container which is marked or graduated in Ounces for the exact same period of time which it took the sprayer to cover the measured course in step #2. It is necessary to operate the vehicle engine at spraying speed using a hand throttle.
4. Observe the volume of water in the collection bottle. The number of OUNCES collected in the time it takes to cover the marked course. Take the average nozzle output by adding the outputs of each nozzle and then dividing that sum by the number of nozzles.

The NUMBER OF OUNCES collected in the time required to cover the SMALL AREA is equal to the NUMBER OF GALLONS applied per ACRE. For example: if an average of 40 ounces of water is collected in the time required to cover the 1/128 acre area, the application rate is 40 gallons per acre (gpa).

NOTE:

As a practical matter, if high application rates are desired (above 75 gpa), the measured course length should be reduced by half (i.e. 102 ft (31 m) for 20 inch (52 cm) spaced nozzles). The volume collected (above) is then doubled (multiplied by 2).

AVERAGE OUTPUT (Ounces) = APPLICATION RATE (gpa)

5. Observe individual nozzle output volumes. If an individual nozzle is 10% above or below the average output, check for blockages in the nozzle or in the nozzle strainer. If the nozzle is worn or damaged, replace it.
6. Compare this actual application rate with the recommended rate. If the actual rate is more than 5% higher or lower than the intended rate, adjustments must be made.
7. Minor adjustments in application rate may be made by increasing or decreasing the spraying pressure. Lowering spraying pressure decreases application rate. Increasing spraying pressure increases application rate. This procedure normally does not apply to spray systems controlled by an Electronic Spray Control System, which governs flow rate.
8. Adjustments in application rate may be made by increasing or decreasing the travel speed of the sprayer if conditions permit. Slower speeds increase application rate. Faster speeds decrease application rate.
9. Nozzle sizes can be changed to provide the correct application rate. Refer to the nozzle charts in this book for the desired nozzle type.
10. Re-calibrate the sprayer (steps 2-6) after any adjustments are made.

As previously discussed, there are other acceptable methods of Turf Sprayer Calibration. Chemical suppliers, Agricultural Extension Agents, Universities and consultants of various types offer helpful advice on this subject. Technical catalogues are available from nozzle manufacturers.

TRANSFERRING THE "128" METHOD INTO METRIC (LITERS PER HECTARE)

The same steps are used that are used when calibrating in gallons per acre. First a relationship between a measurable amount (milliliters) and the calibration amount (liter) is determined. That ratio is 1:1000.

Now an area which is 1/1000th of a hectare must be measured.

On spray booms with 51 cm (20 inch) spacing, mark off an area which is 20 meters (65.6 feet) long. The area formed by that length and the width of one spray nozzle (20 meters by 0.5 meters) is 10 square meters which is 1/1000 of a hectare. Therefore, the amount of spray material applied to this small area in milliliters is equal to the amount applied to one hectare in liters.

Then, follow the remaining steps 2-10, substituting milliliters for ounces, liters for gallons, square meters for square feet and hectares for acres.

AVERAGE OUTPUT (Milliliters) = APPLICATION RATE (LITERS/HECTARE)

NOZZLE PERFORMANCE CHART #1

Nozzle Type:		XR Teejet & DG Teejet									
Spacing:		20 inch (51cm)									
Calibration:		US Gal/Acre (GPA) & US Gal/1,000 Square Feet (GPT)									
Color	Size	Pressure psi	Nozzle Capacity (Gal/Min)	Application Rate GPA Speed MPH (KPH)				Application Rate GPT Speed MPH (KPH)			
				2 (3)	3 (5)	4 (6)	5 (8)	2 (3)	3 (5)	4 (6)	5 (8)
Orange	XR8001	20 (1.4)	0.07	10.4	6.9	5.2	4.2	0.24	0.16	0.12	0.10
		30 (2.1)	0.09	13.4	9	7	5	0.31	0.21	0.16	0.11
		40 (2.9)	0.10	14.9	10	8	6	0.34	0.23	0.17	0.14
		60 (4.3)	0.12	17.8	12	9	7	0.41	0.28	0.21	0.16
Green	XR80015 DG8002	20 (1.4)	0.11	16.3	9	8	7	0.38	0.25	0.19	0.15
		30 (2.1)	0.13	19.3	13	10	8	0.44	0.30	0.22	0.18
		40 (2.9)	0.15	22	15	11	9	0.51	0.34	0.26	0.20
		60 (4.3)	0.18	27	18	13	11	0.61	0.41	0.31	0.25
Yellow	XR8002 DG8002	20 (1.4)	0.14	21	14	10	8	0.48	0.32	0.24	0.19
		30 (2.1)	0.17	25	17	13	10	0.58	0.39	0.29	0.23
		40 (2.9)	0.30	45	30	22	18	1.02	0.68	0.51	0.41
		60 (4.3)	0.37	55	37	27	22	1.26	0.84	0.63	0.50
Blue	XR8003 DG8003	20 (1.4)	0.21	31	21	16	13	0.72	0.48	0.36	0.29
		30 (2.1)	0.26	39	26	19	15	0.89	0.59	0.44	0.35
		40 (2.9)	0.30	45	30	22	18	1.02	0.68	0.51	0.41
		60 (4.3)	0.37	55	37	27	22	1.26	0.84	0.63	0.50
Red	XR8004 DG8004	20 (1.4)	0.28	42	28	21	17	0.98	0.64	0.48	0.38
		30 (2.1)	0.35	52	35	26	21	1.20	0.80	0.60	0.48
		40 (2.9)	0.40	59	40	30	24	1.40	0.91	0.68	0.55
		60 (4.3)	0.49	73	49	36	29	1.70	1.10	0.84	0.67
Brown	XR8005 DG8005	20 (1.4)	0.35	52	35	26	21	1.70	0.80	0.60	0.48
		30 (2.1)	0.43	64	43	32	26	1.50	0.98	0.73	0.59
		40 (2.9)	0.50	74	50	37	30	1.70	1.10	0.85	0.68
		60 (4.3)	0.61	91	60	45	36	2.10	1.40	1.00	0.83
Gray	XR8006	20 (1.4)	0.42	62	42	31	25	1.40	1.00	0.72	0.57
		30 (2.1)	0.52	77	51	39	31	1.80	1.20	0.89	0.71
		40 (2.9)	0.60	89	59	45	35	2.00	1.40	1.00	0.82
		60 (4.3)	0.73	110	73	55	44	2.50	1.70	1.30	1.00
White	XR8008	20 (1.4)	0.57	85	56	42	34	1.90	1.30	0.97	0.78
		30 (2.1)	0.69	102	68	51	41	2.40	1.60	1.20	0.94
		40 (2.9)	0.80	119	79	59	48	2.70	1.80	1.40	1.10
		60 (4.3)	0.98	146	97	73	58	3.30	2.20	1.70	1.30
Steel	SS8010	40 (2.9)	1.00	144	96	72	54	3.30	2.20	1.70	1.20
		60 (4.3)	1.20	180	120	90	78	4.10	2.80	2.00	1.80

NOZZLE PERFORMANCE CHART #2

Nozzle Type:		XR Teejet & DG Teejet									
Spacing:		20 inch (51cm)									
Calibration:		Liters Per Hectare									
Color	Size	Pressure psi (bar)	Nozzle Capacity (L/Min)	Application Rate LPH Speed KPH (MPH)							
				3 (2)	5 (3)	6 (4)	8 (5)				
Orange	XR8001	20 (1.4)	0.26	97	65	5.2	4.2				
		30 (2.1)	0.34	125	83	7	5				
		40 (2.9)	0.38	140	94	8	6				
		60 (4.3)	0.45	166	112	9	7				
Green	XR80015 DG8002	20 (1.4)	0.42	152	83	8	7				
		30 (2.1)	0.49	180	122	10	8				
		40 (2.9)	0.57	206	140	11	9				
		60 (4.3)	0.68	252	193	13	11				
Yellow	XR8002 DG8002	20 (1.4)	0.53	196	131	10	8				
		30 (2.1)	0.64	234	159	13	10				
		40 (2.9)	0.76	281	187	22	18				
		60 (4.3)	0.91	346	234	27	22				
Blue	XR8003 DG8003	20 (1.4)	0.79	290	196	16	13				
		30 (2.1)	0.98	360	243	19	15				
		40 (2.9)	1.13	421	281	22	18				
		60 (4.3)	1.40	514	346	27	22				
Red	XR8004 DG8004	20 (1.4)	1.06	393	262	21	17				
		30 (2.1)	1.32	486	327	26	21				
		40 (2.9)	1.51	552	374	30	24				
		60 (4.3)	1.90	683	458	36	29				
Brown	XR8005 DG8005	20 (1.4)	1.30	486	327	26	21				
		30 (2.1)	1.70	598	402	32	26				
		40 (2.9)	1.90	692	468	37	30				
		60 (4.3)	2.30	851	561	45	36				
Gray	XR8006	20 (1.4)	1.60	580	393	31	25				
		30 (2.1)	2.00	720	477	39	31				
		40 (2.9)	2.30	832	552	45	37.5				
		60 (4.3)	2.80	1029	683	55	44				
White	XR8008	20 (1.4)	2.20	795	524	42	34				
		30 (2.1)	2.60	954	636	51	41				
		40 (2.9)	3.00	1112	739	59	48				
		60 (4.3)	3.70	1365	907	73	58				
Steel	SS8010	40 (2.9)	3.80	1348	898	72	54				
		60 (4.3)	4.50	1693	1122	90	78				

NOZZLE PERFORMANCE CHART #3

Nozzle Type: XR Teejet & DG Teejet Spacing: 10 inch (25cm) Calibration: US Gal/Acre (GPA) & US Gal/1,000 Square Feet (GPT)											
Color	Size	Pressure psi	Nozzle Capacity (Gal/Min)	Application Rate GPA Speed MPH (KPH)				Application Rate GPT Speed MPH (KPH)			
				2 (3)	3 (5)	4 (6)		2 (3)	3 (5)	4 (6)	
Orange	XR8001	20 (1.4)	0.07	21	14	10		0.48	0.32	0.24	
		30 (2.1)	0.09	27	18	13		0.62	0.40	0.30	
		40 (2.9)	0.10	30	20	16		0.68	0.46	0.34	
		60 (4.3)	0.12	36	24	18		0.92	0.54	0.41	
Green	XR80015 DG80015	20 (1.4)	0.11	32	18	16		0.78	0.50	0.39	
		30 (2.1)	0.13	39	26	20		0.99	0.60	0.44	
		40 (2.9)	0.15	44	30	22		1.02	0.68	0.52	
		60 (4.3)	0.18	54	36	27		1.22	0.82	0.61	
Yellow	XR8002 DG8002	20 (1.4)	0.14	42	28	21		0.96	0.64	0.48	
		30 (2.1)	0.17	51	34	26		1.16	0.79	0.58	
		40 (2.9)	0.30	60	40	30		1.36	0.90	0.68	
		60 (4.3)	0.37	74	50	37		1.70	1.14	0.85	
Blue	XR8003 DG8003	20 (1.4)	0.21	62	42	31		1.44	0.96	0.72	
		30 (2.1)	0.26	78	52	39		1.78	1.18	0.89	
		40 (2.9)	0.30	90	60	45		2.04	1.36	1.02	
		60 (4.3)	0.37	110	74	55		2.52	1.68	1.26	
Red	XR8004 DG8004	20 (1.4)	0.28	84	56	42		1.9	1.28	0.96	
		30 (2.1)	0.35	104	70	52		2.4	1.6	1.2	
		40 (2.9)	0.40	118	80	59		2.8	1.8	1.4	
		60 (4.3)	0.49	146	98	72		3.4	2.2	1.7	
Brown	XR8005 DG8005	20 (1.4)	0.35	104	70	52		2.4	1.6	1.2	
		30 (2.1)	0.43	128	86	64		3.0	2.0	1.4	
		40 (2.9)	0.50	148	100	74		3.4	2.2	1.7	
		60 (4.3)	0.61	182	120	91		4.2	2.8	2.1	
Gray	XR8006	20 (1.4)	0.42	124	84	62		2.8	2.0	1.4	
		30 (2.1)	0.52	154	102	77		3.6	2.4	1.8	
		40 (2.9)	0.60	178	118	89		4.0	2.8	2.0	
		60 (4.3)	0.73	220	146	110		5.0	3.4	2.5	
White	XR8008	20 (1.4)	0.57	170	112	85		3.8	2.6	1.9	
		30 (2.1)	0.69	204	136	102		4.8	3.2	2.4	
		40 (2.9)	0.80	238	158	118		5.4	3.6	2.8	
		60 (4.3)	0.98	292	194	146		6.6	4.4	3.4	
Steel	SS8010	40 (2.9)	1.00	288	192	144		6.6	4.4	3.4	
		60 (4.3)	1.20	360	240	179		8.1	5.8	4.0	

NOZZLE PERFORMANCE CHART #4

Nozzle Type:		XR Teejet & DG Teejet									
Spacing:		10 inch (51cm)									
Calibration:		Liters Per Hectare									
Color	Size	Pressure psi (bar)	Nozzle Capacity (L/Min)	Application Rate LPH Speed KPH (MPH)							
				3 (2)	5 (3)	6 (4)					
Orange	XR8001	20 (1.4)	0.26	194	130	98					
		30 (2.1)	0.34	250	166	126					
		40 (2.9)	0.38	280	188	142					
		60 (4.3)	0.45	332	224	167					
Green	XR80015 DG80015	20 (1.4)	0.4	304	186	152					
		30 (2.1)	0.5	366	244	184					
		40 (2.9)	0.6	412	280	206					
		60 (4.3)	0.7	500	386	249					
Yellow	XR8002 DG8002	20 (1.4)	0.5	392	262	196					
		30 (2.1)	0.6	468	318	264					
		40 (2.9)	0.8	562	374	281					
		60 (4.3)	0.9	692	468	346					
Blue	XR8003 DG8003	20 (1.4)	0.8	580	392	292					
		30 (2.1)	1.0	730	486	360					
		40 (2.9)	1.1	840	562	420					
		60 (4.3)	1.4	1028	692	510					
Red	XR8004 DG8004	20 (1.4)	1.1	786	524	393					
		30 (2.1)	1.3	972	654	468					
		40 (2.9)	1.5	1104	748	553					
		60 (4.3)	1.9	1366	916	683					
Brown	XR8005 DG8005	20 (1.4)	1.3	972	654	486					
		30 (2.1)	1.7	1196	804	598					
		40 (2.9)	1.9	1384	936	692					
		60 (4.3)	2.3	1702	1122	851					
Gray	XR8006	20 (1.4)	1.6	1160	786	580					
		30 (2.1)	2.0	1440	954	720					
		40 (2.9)	2.3	1664	1104	832					
		60 (4.3)	2.8	2058	1366	1029					
White	XR8008	20 (1.4)	2.2	1590	1048	795					
		30 (2.1)	2.6	1908	1272	954					
		40 (2.9)	3.0	2224	1478	1104					
		60 (4.3)	3.7	2730	1814	1365					
Steel	SS8010	40 (2.9)	3.8	2692	1796	1346					
		60 (4.3)	4.5	3366	2244	1683					

NOZZLE PERFORMANCE CHART #5

Nozzle Type:		Raindrop 1/4"									
Spacing:		20 inch (51cm)									
Calibration:		US Gal/Acre (GPA) & US Gal/1,000 Square Feet (GPT)									
Color	Size	Pressure psi	Nozzle Capacity (Gal/Min)	Application Rate GPA Speed MPH (KPH)				Application Rate GPT Speed MPH (KPH)			
				2 (3)	3 (5)	4 (6)	5 (8)	2 (3)	3 (5)	4 (6)	5 (8)
Yellow	RA-2	20 (1.4)	0.14	21	14	10.5	8.4	0.48	0.32	0.24	0.19
		30 (2.1)	0.17	26	17	13	10.3	0.60	0.39	0.30	0.24
		40 (2.9)	0.20	29.8	19.8	14.9	11.9	0.69	0.46	0.34	0.27
		50 (3.6)	0.22	33.2	22.2	16.6	13.3	0.76	0.51	0.38	0.31
Red	RA-4	20 (1.4)	0.28	42	28	21	16.8	0.97	0.64	0.48	0.39
		30 (2.1)	0.35	52	34	26	20	1.20	0.78	0.60	0.46
		40 (2.9)	0.40	60	40	30	24	1.38	0.92	0.69	0.55
		50 (3.6)	0.45	66	44	33	27	1.51	1.00	0.75	0.63
Brown	RA-5	20 (1.4)	0.35	52	35	26	21	1.20	0.80	0.60	0.48
		30 (2.1)	0.44	64	42	32	26	1.47	0.97	0.74	0.60
		40 (2.9)	0.50	74	50	37	30	1.70	1.15	0.85	0.69
		50 (3.6)	0.56	84	56	42	33	1.93	1.29	0.97	0.76
Gray	RA-6	20 (1.4)	0.43	64	42	32	25	1.47	0.97	0.74	0.57
		30 (2.1)	0.52	78	52	39	31	1.79	1.20	0.90	0.71
		40 (2.9)	0.60	90	60	45	36	2.07	1.38	1.04	0.83
		50 (3.6)	0.67	100	66	50	40	2.30	1.52	1.15	0.92
White	RA-8	20 (1.4)	0.57	84	56	42	34	1.93	1.29	0.97	0.78
		30 (2.1)	0.70	102	68	51	41	2.34	1.56	1.17	0.94
		40 (2.9)	0.80	118	80	59	48	2.71	1.84	1.36	1.10
		50 (3.6)	0.90	132	88	66	53	3.03	2.02	1.52	1.22
Tan	RA-10	20 (1.4)	0.71	106	70	53	42	2.44	1.61	1.22	0.97
		30 (2.1)	0.87	128	86	64	51	2.94	1.98	1.47	1.17
		40 (2.9)	1.00	148	100	74	59	3.40	2.30	1.70	1.40
		50 (3.6)	1.10	166	110	83	66	3.82	2.53	1.91	1.52
Lt Blue	RA-15	20 (1.4)	1.10	158	106	79	63	3.63	2.44	1.82	1.45
		30 (2.1)	1.30	192	128	96	77	4.41	2.94	2.21	1.77
		40 (2.9)	1.50	222	148	111	89	5.10	3.40	2.50	2.55
		50 (3.6)	1.70	250	166	125	100	5.75	3.82	2.87	2.30

NOZZLE PERFORMANCE CHART #6

Nozzle Type:		Raindrop 1/4"									
Spacing:		20 inch (51cm)									
Calibration:		Liters Per Hectare									
Color	Size	Pressure psi (bar)	Nozzle Capacity (L/Min)	Application Rate LPH Speed KPH (MPH)							
				3 (2)	5 (3)	6 (4)	8 (5)				
Yellow	RA-2	20 (1.4)	0.53	196	131	98	79				
		30 (2.1)	0.64	243	159	122	96				
		40 (2.9)	0.76	279	185	139	111				
		50 (3.6)	0.83	310	208	155	124				
Red	RA-4	20 (1.4)	1.06	393	261	196	157				
		30 (2.1)	1.32	486	319	243	187				
		40 (2.9)	1.51	561	374	280	224				
		50 (3.6)	1.70	617	411	308	252				
Brown	RA-5	20 (1.4)	1.36	486	327	243	196				
		30 (2.1)	1.66	598	392	299	243				
		40 (2.9)	1.89	691	467	345	280				
		50 (3.6)	2.12	785	523	392	308				
Gray	RA-6	20 (1.4)	1.63	598	392	299	233				
		30 (2.1)	1.97	729	486	364	289				
		40 (2.9)	2.27	841	561	420	336				
		50 (3.6)	2.53	935	617	467	374				
White	RA-8	20 (1.4)	2.15	785	523	392	317				
		30 (2.1)	2.65	953	635	476	383				
		40 (2.9)	3.02	1103	748	551	440				
		50 (3.6)	3.40	1234	822	617	495				
Tan	RA-10	20 (1.4)	2.68	991	654	495	392				
		30 (2.1)	3.29	1196	804	598	476				
		40 (2.9)	3.78	1383	935	691	551				
		50 (3.6)	4.16	1552	1028	776	617				
Lt Blue	RA-15	20 (1.4)	4.16	1477	991	738	589				
		30 (2.1)	4.91	1795	1196	897	719				
		40 (2.9)	5.70	2075	1383	1037	832				
		50 (3.6)	6.43	2337	1552	1168	935				

NOZZLE PERFORMANCE CHART #7

Nozzle Type:		Turbo Floodjet									
Spacing:		30 inch (76cm)									
Calibration:		US Gal/Acre (GPA) & US Gal/1,000 Square Feet (GPT)									
Color	Size	Pressure psi	Nozzle Capacity (Gal/Min)	Application Rate GPA Speed MPH (KPH)				Application Rate GPT Speed MPH (KPH)			
				3 (5)	4 (6)	5 (8)	6 (10)	3 (5)	4 (6)	5 (8)	6 (10)
Red	TF-VS2	20 (1.4)	0.28	19	14	11	9	0.40	0.30	0.25	0.20
		30 (2.1)	0.35	23	17	14	11	0.50	0.40	0.30	0.25
Brown	TF-VS2.5	20 (1.4)	0.35	23.4	17.6	14	11.7	0.54	0.40	0.32	0.27
		30 (2.1)	0.43	28.6	21.4	17.2	14.3	0.66	0.49	0.40	0.33
Gray	TF-VS3	20 (1.4)	0.42	28	21	16.8	14	0.64	0.48	0.39	0.32
		30 (2.1)	0.52	34.4	25.8	21	17.2	0.79	0.59	0.48	0.40
White	TF-VS4	20 (1.4)	0.57	37.4	28	22	18.7	0.86	0.64	0.51	0.43
		30 (2.1)	0.69	46	34.4	28	23	1.06	0.79	0.64	0.53
Blue	TF-VS5	20 (1.4)	0.71	46	35	28	23	1.06	0.80	0.64	0.53
		30 (2.1)	0.87	56	44	35	28	1.29	1.01	0.80	0.64
Green	TF-VS7.5	20 (1.4)	1.10	70	52	43	35	1.61	1.20	1.00	0.80
		30 (2.1)	1.30	86	64	52	43	2.00	1.47	1.25	1.00
Black	TF-VS10	20 (1.4)	1.40	94	70	56	47	2.20	1.70	1.60	1.10
		30 (2.1)	1.70	114	86	68	57	2.62	1.98	1.56	1.31

NOZZLE PERFORMANCE CHART #8

Nozzle Type:		Turbo Floodjet									
Spacing:		30 inch (76cm)									
Calibration:		Liters Per Hectare									
Color	Size	Pressure psi (bar)	Nozzle Capacity (L/Min)	Application Rate LPH Speed KPH (MPH)							
				5 (3)	6 (4)	8 (5)	6 (10)				
Red	TF-VS2	20 (1.4)	1.06	178	131	103	84.2				
		30 (2.1)	1.32	215	159	131	103				
Brown	TF-VS2.5	20 (1.4)	1.32	219	165	131	109				
		30 (2.1)	1.63	267	200	161	134				
Gray	TF-VS3	20 (1.4)	1.59	262	196	157	131				
		30 (2.1)	1.97	322	241	196	161				
White	TF-VS4	20 (1.4)	2.16	350	262	206	175				
		30 (2.1)	2.61	430	322	262	215				
Blue	TF-VS5	20 (1.4)	2.69	430	327	262	215				
		30 (2.1)	3.29	524	411	327	262				
Green	TF-VS7.5	20 (1.4)	4.16	655	486	402	327				
		30 (2.1)	4.92	804	598	486	402				
Black	TF-VS10	20 (1.4)	5.30	879	655	524	439				
		30 (2.1)	6.43	1066	804	636	533				

ABBREVIATIONS AND CONVERSIONS

gpm	Gallons per minute	cm	Centimeters
lit/min	Liters per minute	dm	Decimeters
dl/min	Deciliter per minute	m	Meter
psi	Pounds per square inch	mm	Millimeters
km	Kilometers	mph	Miles per hour
gpa	Gallon per acre	km/h	Kilometers per hour
lit/ha	Liters per hectare	us	Volume per ACRE
ml/ha	Milliliter per hectare	Si	Volume per hectare
gpk	Gallons per 1,000 sq ft	TU	Volume per 1,000 sq ft

AREA & SPEED

Distance (feet) x 0.68 = Travel Speed (MPH) Travel Time (seconds)

Time Required in Seconds to Travel a Distance of:

Speed (MPH)	100 Ft	200 Ft	300 Ft
1.0	68	136	205
1.5	46	92	136
2.0	34	68	103
2.5	27	54	82
3.0	23	46	68
3.5	20	40	58
4.0	17	34	52
4.5	15	30	46
5.0	13	28	41

LIQUID/VOLUME

1 US Gallon x 128 = Fluid Ounces

1 US Gallon x 3.785 = Liters

1 US Gallon x 0.83267 = Imperial Gallons

1 US Gallon x 8.34 = Pounds (Water)

1 Gallon Per Acre = 2.9 Fluid Ounces per 1,000 Square Feet = 9.35 Liters Per Hectare

1 Gallon Per 1,000 Square Feet = 43.56 Gallons Per Acre

1 Gallon = 128 Fluid Ounces = 8 Pints = 4 Quarts = 3.79 Liters = 0.83 Imperial Gallons

$$\text{gpa} = \frac{5940 \times \text{GPM (per nozzle)}}{\text{MPH} \times \text{Nozzle Spacing Width (inches)}}$$

MPH x Nozzle Spacing Width (inches)

$$\text{GAL. 1,000 Square Feet} = \frac{136 \times \text{GPM (per nozzle)}}{\text{MPH} \times \text{Nozzle Spacing Width (inches)}}$$

LENGTH/DISTANCE

1 millimeter (mm) = 0.039 inch

1 centimeter (cm) = 0.393 inch

1 meter (m) = 3.281 feet

1 kilometer (km) = 0.621 mile

1 inch = 25.4 millimeters; 2.54 centimeters

1 mile = 5280 Feet = 1610 Meters = 1.609 Kilometers

EC DECLARATION OF CONFORMITY

according to Directive 89/392/EEC

We SMITHCO INC.
(Name of supplier)

34 West Ave. Wayne, PA 19087 USA

(Full address of the manufacture - authorized representative established in the Community must also give the business name and address of the manufacture)

declare under our sole responsibility, that the product

Spray Star 1000 \ 10-100-A

(Make, Model)

to which this declaration relates corresponds to the relevant basic safety and health requirements of the Directive 89/392/EEC,

(if applicable)

and to the requirements of the other Directives:

EN292-1

EN292-2

EN294

EN349

92/59

89/392

(Title and/or number and date of issue of the other Directives)

(if applicable)

For the relevant implementation of the safety and health requirements mentioned in the Directives, the following standard(s) and/or technical specification(s) has (have) been respected:

ISO 37-1983

PREN 836

ISO 1219-1976

SAE HS-2800


SAE J1362

(Title and/or number and date of issue of standard(s) and/or technical specification(s))

Cameron, Wisconsin USA

March 19, 1995

(Place and date of issue)

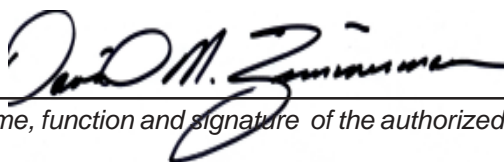

(Name, function and signature of the authorized person)

LIMITED WARRANTY

SMITHCO warrants this product to be free from defects in material and workmanship under normal use for one year from the date of purchase by the original user. (60 days if product is used for rental purposes.) All warranty claims must be handled through a SMITHCO authorized dealer or by SMITHCO, INC. All transportation charges must be paid by the purchaser.

There is no further express warranty. All implied warranties, including those of merchantability and fitness for a particular purpose, are limited to one year, (60 days if product is used for rental purposes) from the date of purchase by the original user, and to the extent permitted by law any and all implied warranties are excluded and disclaimed after the expiration of such period.

All incidental and consequential damages, including pickup and delivery of the unit, communication, mileage charges and/or rental of a replacement unit during repair, are not covered under this warranty, nor is any loss of income and/or other loss resulting from the failure of the product to function due to a warranty defect.

The following items are not covered under the SMITHCO warranty, and are warranted by their respective manufacturer.

- (a) Engine and engine parts, including starters, generators, alternators and filters.
- (b) Transaxle, differentials, gear boxes and mechanical pumps.
- (c) Hydrostatic transmissions, hydraulic pumps and motors.
- (d) Batteries.
- (e) Wheels and tires.

A copy of the warranty for the above items is furnished if necessary with each SMITHCO product.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.

Federal law now requires disclosure of the warranty which applies to this product prior to the sale to a customer. Please leave this statement attached to the product and allow the buyer to remove it after purchase.

SMITHCO

Wayne, Pennsylvania 19087

