


Parts & Service

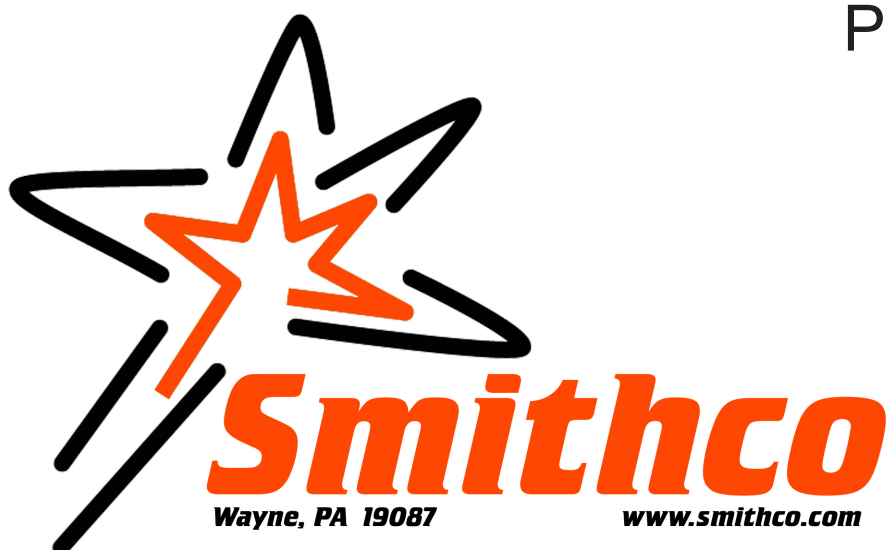

Spray Star 1008J
10-100-F w/ TeeJet Radion 8140
SN: 100684

February 2020

Product Support:

Hwy 55 & Poplar Ave; Cameron WI 54822

1-800-891-9435 productsupport@smithco.com

CONTENTS

Introduction

Introduction.....	1-3
Safe Practices	2
Specification	3
Optional Equipment	3

Service

Service.....	4-9
Maintenance	4-6
Storage	6
Service Chart	7
End User's Service Chart	8
Adjustments	9

Diagrams

Diagrams	10-13
Wiring Diagram	10-11
Hydraulic Diagram	12-13
Fitting Torque Charts	13

Parts

Parts.....	14-43
Body and Frame	14-15
Control Panel	16-17
Front Axle	18-19
Seat Console and ROPS	20-21
Fuel Tank	22-23
Oil Tank-Oil Filter-Oil cooler	24-25
Foot Pedal Linkage	26-27
Pump	28-29
Engine and Spray Pump	30-31
Park Brake	32-33
Rear Axle	34-35
Spray Tank	36-37
Turbo-Quad Agitator	36-37
15-301 Orbitrol	38-39
45-373 DDC20 Piston Pump	40-41
16-998 Hypro® Pump	42
10-510 Wheel Motor	43

Accessories

Accessories 44-109

1010 Plumbing (Manual Valve).....	44-45
1002 Plumbing (TeeJet® 744).....	46-47
1008 Plumbing (TeeJet® Radion 8140).....	48-49
1002 Controls (TeeJet® 744).....	50
1008 Controls (TeeJet® Radion 8140)	51
TeeJet® DynaJet Plumbing	52-55
TeeJet® DynaJet Module Mounts.....	56-57
TeeJet® Control Mounts	58-59
TeeJet® Aeros Wiring	60
TeeJet® DynaJet Wiring	61
16-524 Motorized Control Valve	62
15-737/14-628 Flanged Strainer.....	63
10-648 3-Way Manual Valve.....	64-65
15-743 Manifold Ball Valve	66
20-785 Regulator Valve	67
14-801 Agitator Strainer.....	68
17-585 18' Heavy Duty Boom.....	70-73
17-585 Plumbing	74-75
17-601 15' Heavy Duty Boom.....	76-79
17-601 Plumbing	80-81
QJS Nozzle Drawing	82
QJS Bottom mounted Nozzle Assembly.....	83
Nozzle Assembly	84
10-370/10-365 Water Fill Meter Kit.....	85
16-906 Electric Hose Reel.....	86-87
16-129 Hose Reel.....	88
10-422 Hose Reel Mount (for HD Super Booms).....	89
Hose Reel Plumbing.....	90-91
Electric Hose Reel Wiring.....	92
Hose Reel Adjustments	93
10-740 Foam Marker Kit	94-99
14-291Foamer	100-101
30-006 Fresh Water Wash Tank -Rear Mount	102
10-653 Fresh Water Wash Tank -Front Mount	103
10-417 Chemical Cleanload®.....	104-105
15-620 Chemical Cleanload® Eductor	106-107
Chemical Cleanload Instructions	108
15-835 Tank Rinsing System.....	109

Reference 110-112


Decal List.....	110
Quick Reference Replacement Parts	112

Reference

Thank you for purchasing a **Smithco** product.

Read this manual and all other manuals pertaining to the Spray Star 1000 carefully as they contain safety, operating, assembly and maintenance instructions. Failure to do so could result in personal injury or equipment damage.

Keep manuals in a safe place after operator and maintenance personnel have read them. Right and left sides are from the operator's seat, facing forward.


WARNING:

Engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

For more information visit
www.P65Warning.ca.gov

WARNING

Failure to follow cautious operating practices can result in serious injury to the operator or other persons. The owner must understand these instructions, and must allow only trained persons who understand these instructions to operate this vehicle.



All **Smithco** machines have a Serial Number and Model Number. Both numbers are needed when ordering parts. The serial number plate on the Spray Star 1000 is located on the right front bumper. Refer to engine manual for placement of engine serial number. Refer to engine manual for placement of engine serial number.

For product and accessory information, help finding a dealer, or to register your product please contact us at www.Smithco.com.

Information needed when ordering replacement parts:

1. Model Number of machine
2. Serial Number of machine
3. Name and Part Number of part
4. Quantity of parts

For easy access record your Serial and Model numbers here.

<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="text-align: left;">  <p>WAYNE, PENNSYLVANIA 19087 USA 610-688-4009 Fax 610-688-6069</p> </div> <div style="text-align: right;">  </div> </div>		
SERIAL NO. <input style="width: 90%;" type="text"/>	kW/hp <input style="width: 90%;" type="text"/>	DATE OF MFG. <input style="width: 90%;" type="text"/>
MODEL NO. <input style="width: 90%;" type="text"/>	lb/kg Empty <input style="width: 90%;" type="text"/>	lb/kg Full <input style="width: 90%;" type="text"/>

SMITHCO CUSTOMER SERVICE 1-800-891-9435

SAFE PRACTICES

1. It is your responsibility to read this manual and all publications associated with this machine.
2. Never allow anyone to operate or service the machine or its optional equipment without proper training and instructions. Never allow minors to operate any equipment.
3. Learn the proper use of the machine, the location and purpose of all the controls and gages before you operate the equipment. Working with unfamiliar equipment can lead to accidents.
4. Wear all the necessary protective clothing and personal safety devices to protect your head, eyes, ears, hands and feet. Operate the machine only in daylight or in good artificial light.
5. Inspect the area where the equipment will be used. Pick up all debris you can find before operating. Beware of overhead obstructions and underground obstacles. Stay alert for hidden hazards.
6. Never operate equipment that is not in perfect working order or without decals, guards, shields, or other protective devices in place.
7. Never disconnect or bypass any switch.
8. Carbon monoxide in the exhaust fumes can be fatal when inhaled, never operate a machine without proper ventilation.
9. Fuel is highly flammable, handle with care.
10. Keep engine clean. Allow the engine to cool before storing and always remove the ignition key.
11. Disengage all drives and set park brake before starting the engine.
12. Never use your hands to search for oil leaks. Hydraulic fluid under pressure can penetrate the skin and cause serious injury.
13. This machine demands your attention. To prevent loss of control or tipping of the vehicle:
 - A. Use extra caution in backing up the vehicle. Ensure area is clear.
 - B. Do not stop or start suddenly on any slope.
 - C. Reduce speed on slopes and in sharp turns. Use caution when changing directions on slopes.
 - D. Stay alert for holes in the terrain and other hidden hazards.
14. Before leaving operator's position:
 - A. Disengage all drives.
 - B. Set park brake.
 - C. Shut engine off and remove the ignition key.
 - D. If engine has to run to perform any maintenance keep hands, feet, clothing and all other parts of body away from moving parts.
15. Keep hands, feet and clothing away from moving parts. Wait for all movement to stop before you clean, adjust or service the machine.
16. Keep the area of operation clear of all bystanders.
17. Never carry passengers.
18. Stop engine before making repairs/adjustments or checking/adding oil to the crankcase.
19. Use parts and materials supplied by **Smithco** only. Do not modify any function or part.
20. Use caution when booms are down as they extend out beyond the center line of the machine.
21. The tank is a confined space, take precaution.

These machines are intended for professional maintenance on golf courses, sports turf, and any other area maintained turf and related trails, paths and lots. No guaranty as to the suitability for any task is expressed or implied.

SPECIFICATIONS SPRAY STAR 1000

WEIGHTS AND DIMENSIONS

Length	112" (285 cm)
Width	70" (178 cm)
Height With 18' Boom	110" (240 cm)
Height	75" (191 cm)
Wheel Base	53" (135 cm)
Weight Empty	1480lbs (675 kg)
Weight Full	2248 lbs (1025 kg)

SOUND LEVEL (DBA)

At ear level	85 dba
At 3 ft (0.914 m)	83 dba
At 30 ft (9.14 m)	72 dba

ENGINE

Make	Briggs & Stratton
Model#	386447
Type / Spec#	0058 G1
Horsepower	23HP (17 kw)
Fuel	Unleaded 87 Octane Gasoline Minimum
Cooling System	Air Cooled
Lubrication System	Full Pressure
Alternator	25 Amp

WHEELS & TIRE

Front:	Two 20 x 10.00 x 10 NHS Multi-Rib; 20psi (1.4 bar)
Rear:	Two 24 x 13.00 x 12 NHS Multi-Trac; 20 psi (1.4 bar)
	Hand Operated Lever, Discs on Rear Axle

PARK BRAKE

SPEED

Forward Speed	0-8 mph (0-12.8 kph)
Reverse Speed	0-3 mph (0-4.8 kph)

BATTERY

	Automotive type 24F-12 Volt
BCI Group	Size 24
Cold Cranking Amps	575 minimum
Ground Terminal Polarity	Negative (-)
Maximum Length	10.25" (26 cm)
Maximum Width	6.88" (17 cm)
Maximum Height	10" (25 cm)

FLUID CAPACITY

Crankcase Oil	See Engine Manual
Fuel	6 gallon (22.7 liters)
Hydraulic Fluid	5 gallon (19 liters)
Grade of Hydraulic Fluid	SAE 10W-40 API Service SJ or higher Motor Oil

OPTIONAL EQUIPMENT

10-417	Chemical Clean-load Safe Fill System	1002	TeeJet 744 Spray System
10-419	Fresh Water Tank Front Mount	1008	Radion 8140 Spray System
17-601	15' Heavy Duty Boom	1010	3-Way Manual System
15-835	Tank Rinsing System	1011/1012	DynaJet/Radion Spray System
17-585	18' Heavy Duty Boom	1015/1016	DynaJet/Aeros Spray System
10-370	Water Meter Kit (liters)	10-XXX	16 Gal. Wash System
10-365	Water Meter Kit (gallons)	10-XXX	Foam Marker
10-422	Hose Reel Mount Kit	30-006	Fresh Water Tank - Rear mount
16-129	Manual Rewind Hose Reel, 200-foot/61-meter capacity		
16-906	Electric Rewind Hose Reel, 200-foot/61-meter capacity		



MAINTENANCE

⚠ CAUTION

Before servicing or making adjustments to machine, stop engine and remove key from ignition.


⚠ IMPORTANT

Use all procedures and parts prescribed by the manufacturer's. Read the engine manual before operation.

LUBRICATION

Use No. 2 General purpose lithium base grease and lubricate every 100 hours. The Spray Star 1000 has 7 lube points.

- A. One on the rod end of hydraulic cylinder.
- B. One on each the right and left spindles.
- C. One on the reverse pedal.
- D. One on each end of tie rod.
- E. One on the forward pedal.

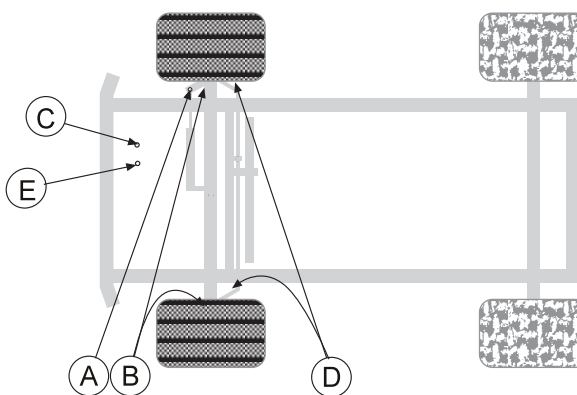

ELECTRICAL CONNECTIONS

Use dielectric grease on all electrical connections.

AIR CLEANER

1. Loosen cover retaining snaps and remove cover.
2. Remove pre-cleaner from paper element.
3. Check paper element. Replace element as necessary.
4. Wash pre-cleaner in warm water with detergent. Rinse pre-cleaner thoroughly until all traces of detergent are eliminated. Squeeze out excess water (do not wring). Allow pre-cleaner to air dry.
5. Saturate pre-cleaner with new engine oil. Squeeze out all excess oil.
6. Reinstall pre-cleaner over paper element.
7. Reinstall air cleaner cover. Secure cover with cover retaining knob.

WHEEL MOUNTING PROCEDURE

1. Set park brake. Turn machine off and remove key.
2. Block wheel on opposite corner.
3. Loosen nuts slightly on wheel to be removed.
4. Jack up machine being careful not to damage underside of machine.
5. Place wheel on hub lining up bolt holes.
6. Torque to 64-74 ft/lb (87-100Nm) using a cross pattern. Re-torque after first 8 hours and every 250 hours thereafter.
7. Lower machine to ground and remove blocks and jack.


TIRE PRESSURE

Caution must be used when inflating a low tire to recommended pressure. Over inflating can cause tires to explode. All tires should be 20 psi (1.4bar). Improper inflation will reduce tire life considerably.

ENGINE OIL

Change and add oil according to chart below. Do not overfill. Engine oil capacity is 2 quarts. We recommend high-quality detergent oils classified for service SF, SG, SH, SJ or higher. Do not use special additives. Outdoor temperatures determine the proper oil viscosity for the engine. Use the chart to select the best viscosity for the outdoor temperature range expected

SAE VISCOSITY GRADES

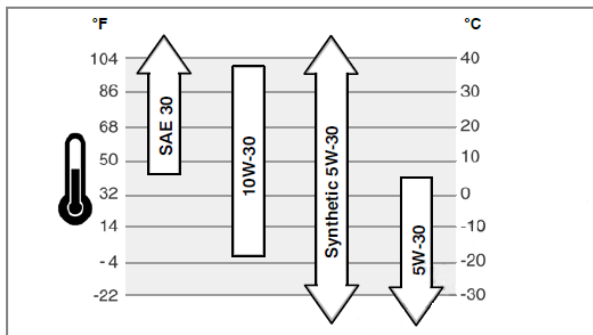

Use of multi-viscosity oils (10W-30, etc.) above 80° F (27° C) will result in high oil consumption and possible engine damage. Check oil level more frequently if using these types of oils.

SAE 30 oil, if used below 40° F (4° C), will result in hard starting and possible engine bore damage due to inadequate lubrication.

HYDRAULIC OIL

1. Use SAE 10W-40 API Service SJ or higher motor oil.
2. For proper warranty, change oil every 500 hours or annually, whichever is first. Change the filter after the first 50 hours, then every 250 hours thereafter.
3. Oil level should be 2-2½" (5-6.4cm) from top of the tank when fluid is cold. Do not overfill.
4. After changing oil, run the machine for a few minutes. Check oil level and for leaks.
5. Always use extreme caution when filling hydraulic oil tank or checking level to keep system free of contaminants. Check and service more frequently when operating in extremely cold, hot or dusty conditions.
6. If the natural color of the fluid has become black or smells burnt, it is possible that an overheating problem exists.
7. If fluid becomes milky, water contamination may be a problem.
8. If either of the above conditions happen, change oil immediately after fluid is cool and find the cause. Take fluid level readings when the system is cold.
9. In extreme temperatures you can use straight weight oil. We recommend SAE 30W API Service SG when hot (above 90°F (33°C)) and SAE 10W API Service SJ or higher when cold (below 32°F (0°C) ambient temperature. Use either motor oil or hydraulic oil, but do not mix.
10. Oil being added to the system must be the same as what is already in the tank. Mark the tank fill area as to which type you put in.

MAINTENANCE

BATTERY

Batteries normally produce explosive gases which can cause personal injury. Do not allow flames, sparks or any ignited object to come near the battery. When charging or working near battery, always shield your eyes and always provide proper ventilation.

Battery cable should be disconnected before using "Fast Charge".

Charge battery at 15 amps for 10 minutes or 7 amps for 30 minutes. Do not exceed the recommended charging rate. If electrolyte starts boiling over, decrease charging.

Always remove grounded (-) battery clamp first and replace it last. Avoid hazards by:

1. Filling batteries in well-ventilated areas.
2. Wear eye protection and rubber gloves.
3. Avoid breathing fumes when electrolyte is added.
4. Avoid spilling or dripping electrolyte.

WARNING


Battery Electrolyte is an acidic solution and should be handled with care. If electrolyte is splashed on any part of your body, flush all contact areas immediately with liberal amounts of water. Get medical attention immediately.

WARNING

Use of booster battery and jumper cables. Particular care should be used when connecting a booster battery. Use proper polarity in order to prevent sparks.

TO JUMP START (NEGATIVE GROUNDED BATTERY):

1. Shield eyes.
2. Connect ends of one cable to positive (+) terminals of each battery, first (A) then (B).
3. Connect one end of other cable to negative (-) terminal of "good" battery (C).
4. Connect other end of cable (D) to engine block on unit being started (NOT to negative (-) terminal of battery)

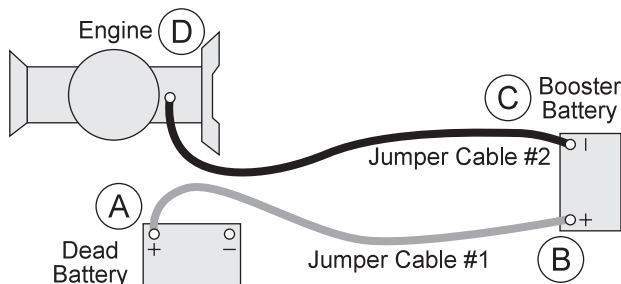

To prevent damage to other electrical components on unit being started, make certain that engine is at idle speed before disconnecting jumper cables.

STORAGE

If the engine will be out of service for two or more months, use the following storage procedure.

1. Clean the exterior surfaces of the engine.
2. Change the oil and filter while the engine is still warm from operation.
3. The fuel system must be completely emptied, or the gasoline must be treated with a stabilizer to prevent deterioration.

If you choose to use a stabilizer, follow manufacturers recommendations, and add the correct amount for the capacity of fuel system. Fill fuel tank with clean, fresh gasoline. Run engine for 2-3 minutes to get stabilized fuel into carburetor. Close fuel shut-off valve when unit is being stored or transported.

To empty the system, drain fuel tank and carburetor, or run engine until tank and system are empty.

4. Remove the spark plugs. Add one tablespoon of engine oil into each spark plug hole. Install plugs, but do not connect the plug leads. Crank the engine two or three revolutions.
5. Store machine in a clean, dry place.

SERVICE CHART

⚠ CAUTION

Before servicing or making adjustments to the machine, stop engine, set park break, block wheels and remove key from ignition.

⚠ IMPORTANT

Follow all procedures and **ONLY** use parts prescribed by the manufacturer. Read the engine manual before maintenance.

Maintenance Service Interval	Maintenance Procedure
After the first 8 operating hours	Torque the wheel lug nuts. (64-74 ft/lb (87-100 Nm))
	Change the engine oil filter.
Before each use daily	Check the engine oil level.
	Clean area around muffler and controls.
	Check the hydraulic fluid level.
	Check the tire pressure.
	Check condition of hydraulic hoses and fittings.
	Inspect and clean the machine.
After the first 50 hours	Change Hydraulic Oil Filter.
Every 100 hours	Clean or change air filter. ¹
	Clean pre-cleaner. ¹
	Change engine oil and filter.
	Replace spark plug .
	Lubricate machine.
	Clean or change remote air cleaner.
	Check the battery fluid level and cable connections..
	Check muffler and spark arrestor.
	Check belt tension .
Every 250 hours	Check engine valve clearance and adjust if necessary.
	Check idle speed.
	Clean battery terminals.
	Change hydraulic oil filter.
	Torque the wheel lug nuts. (64-74 ft/lb (87-100 Nm))
Every 500 hours or yearly	Change fuel filter.
	Change hydraulic oil and filter.
	Clean oil cooler fins. ¹
	Clean air cooling system. ¹
	Check safety filter in remote air cleaner.
1 In dusty conditions or when airborne debris is present, clean more often.	

END USER'S SERVICE CHART


Duplicate this page for routine use

[illegible]

WHEEL CREEP

"Creep" is when the engine is running and hydrostatic transmission is in neutral, but due to inadequate alignment, wheels still move. Do the following procedure to stop this motion.

1. Lift up and support machine so rear wheels are off the ground and can turn freely.
2. On top of the pump there is a Creep arm. Loosen bolt (Ref A) on creep arm.
3. With engine running, adjust the 'creep arm' side to side so centering arm centers on the swash plate.
4. Tighten all fasteners and test by using foot pedal linkage to see that 'creep' is removed.
5. Turn engine off and lower machine.

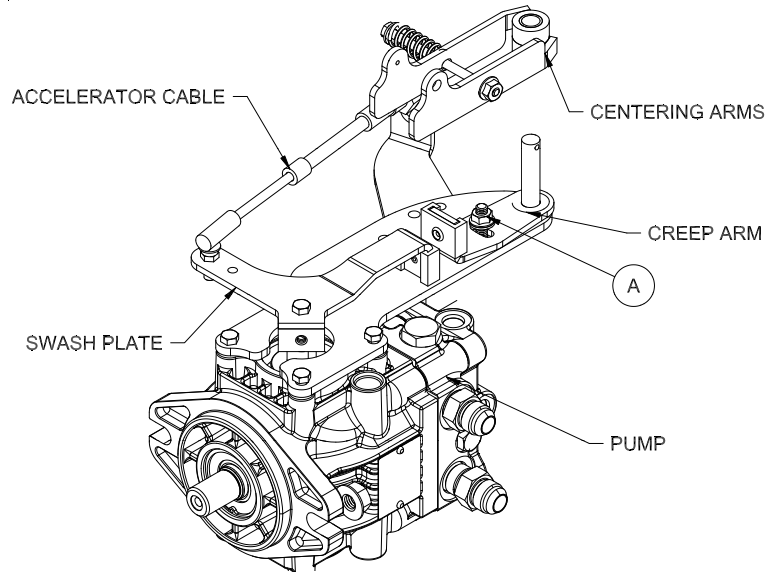

PARK BRAKE

Turn knob clockwise on end of park brake to tighten. Turn it counter clockwise to loosen. If finer adjustment is needed turn clevis on brake cable to adjust length of cable.




SPRAY PUMP

Located to the rear and right of the engine. Should have approximately $\frac{1}{2}$ " (13mm) of deflection in the center of the top strand. Loosen two $\frac{9}{16}$ x $1\frac{3}{4}$ bolts. Slide pump to the rear to desired tension. Tighten two $\frac{3}{8}$ x $1\frac{1}{2}$ bolts.


MASTER BOOM SWITCH (FOOT SWITCH)

The master boom switch, located on the left floorboard is used to override the master switch on the computer console of the Radion 8140 spray system. By pushing down it will turn on/off the booms.

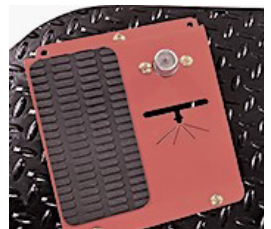


SPRAY BOSS CONTROL HANDLE (ORANGE)

This lever located on the left side of the seat engages and disengages the speed boss. Forward is engage and all the way back is disengage. When the lever is engaged it sets a stop for the accelerator. The accelerator pedal must be used to maintain this speed. To adjust speed use the knob on the end of the lever, counter clockwise increases speed and clockwise decreases speed. Disengage the lever and you will have full accelerator pedal range.

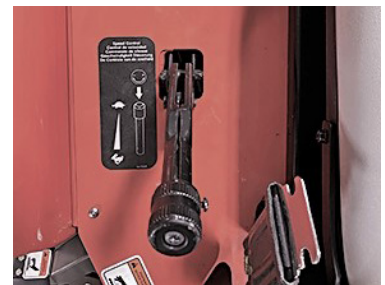

WIRING DIAGRAM

Use dielectric grease on all electrical connections.

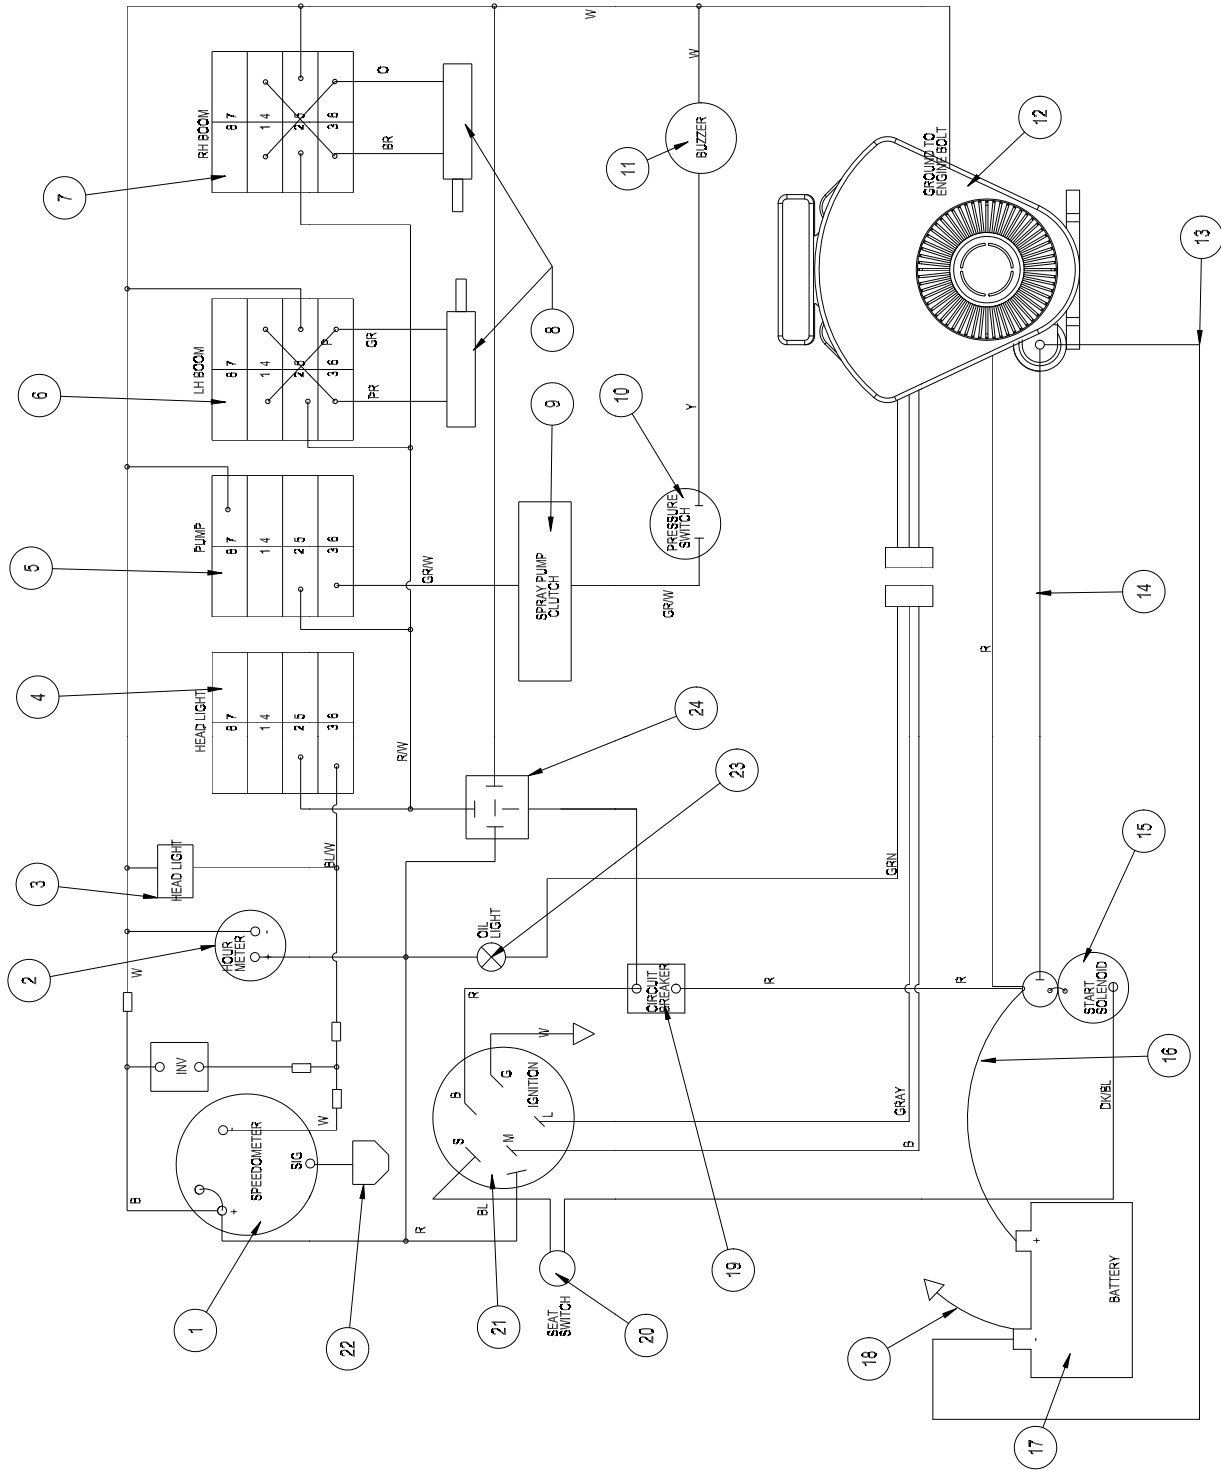


WIRING PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	20-730	GPS Speedometer	1
	8874	Female Bullet	1
	8875	Male Bullet	2
	8963	Heat Shrink	3
2	12-804	Hour Meter	1
3	10-732	LED Head Light	2
4	Head Light		
	15-725	Mount Panel End	1
	15-727	Rocker, No Light	1
	15-782	Non-Lighted Switch	1
5	Pump		
	15-729	Mount Panel Middle	1
	15-726	Lighted Switch	1
	15-731	Rocker, Amber	1
6	Left Boom		
	15-729	Mount Panel Middle	1
	15-727	Rocker, No Light	1
	15-728	Centering Switch Momentary, On-Off-On	1
7	Right Boom		
	15-725	Mount Panel End	1
	15-727	Rocker, No Light	1
	15-728	Centering Switch Momentary, On-Off-On	1
8	30-214	KYB Electric/Hydraulic Actuators	2
9	16-998	Hypro Pump With Electric Clutch	1
10	33-480	Pressure Switch	1
11	77-207	Buzzer	1
	8874	Female Bullet	1
	8875	Male Bullet	1
	8963	Heat Shrink	2
12	10-575	Briggs, 23HP Engine	1
13		Black Cable	1
14	22-017	Starter Cable	1
15	13-750	Solenoid w/ Connector	1
16	75-518	Red Battery Cable	1
17	33-216	Battery	1
18	76-327	Ground Battery Cable	1
19	77-261	Circuit Breaker	1
	8977	Circuit Breaker Boot	1
20	14-292	Seat Switch	1
21	13-488	Ignition Switch	1
22	20-730-01	Antenna (comes with Speedometer)	1
23	50-359	Oil Warning Light	1
	8853	Slide On Connector	1
	8958	Male Spade	1
	8963	Heat Shrink	2
24	9016	Weather Pack	1
	9017	Terminal	2
	9018	Seal	2
	10-573	Wire Harness	1

To reset circuit breaker on ball valve, you must disconnect power to computer.

HYDRAULIC DIAGRAM

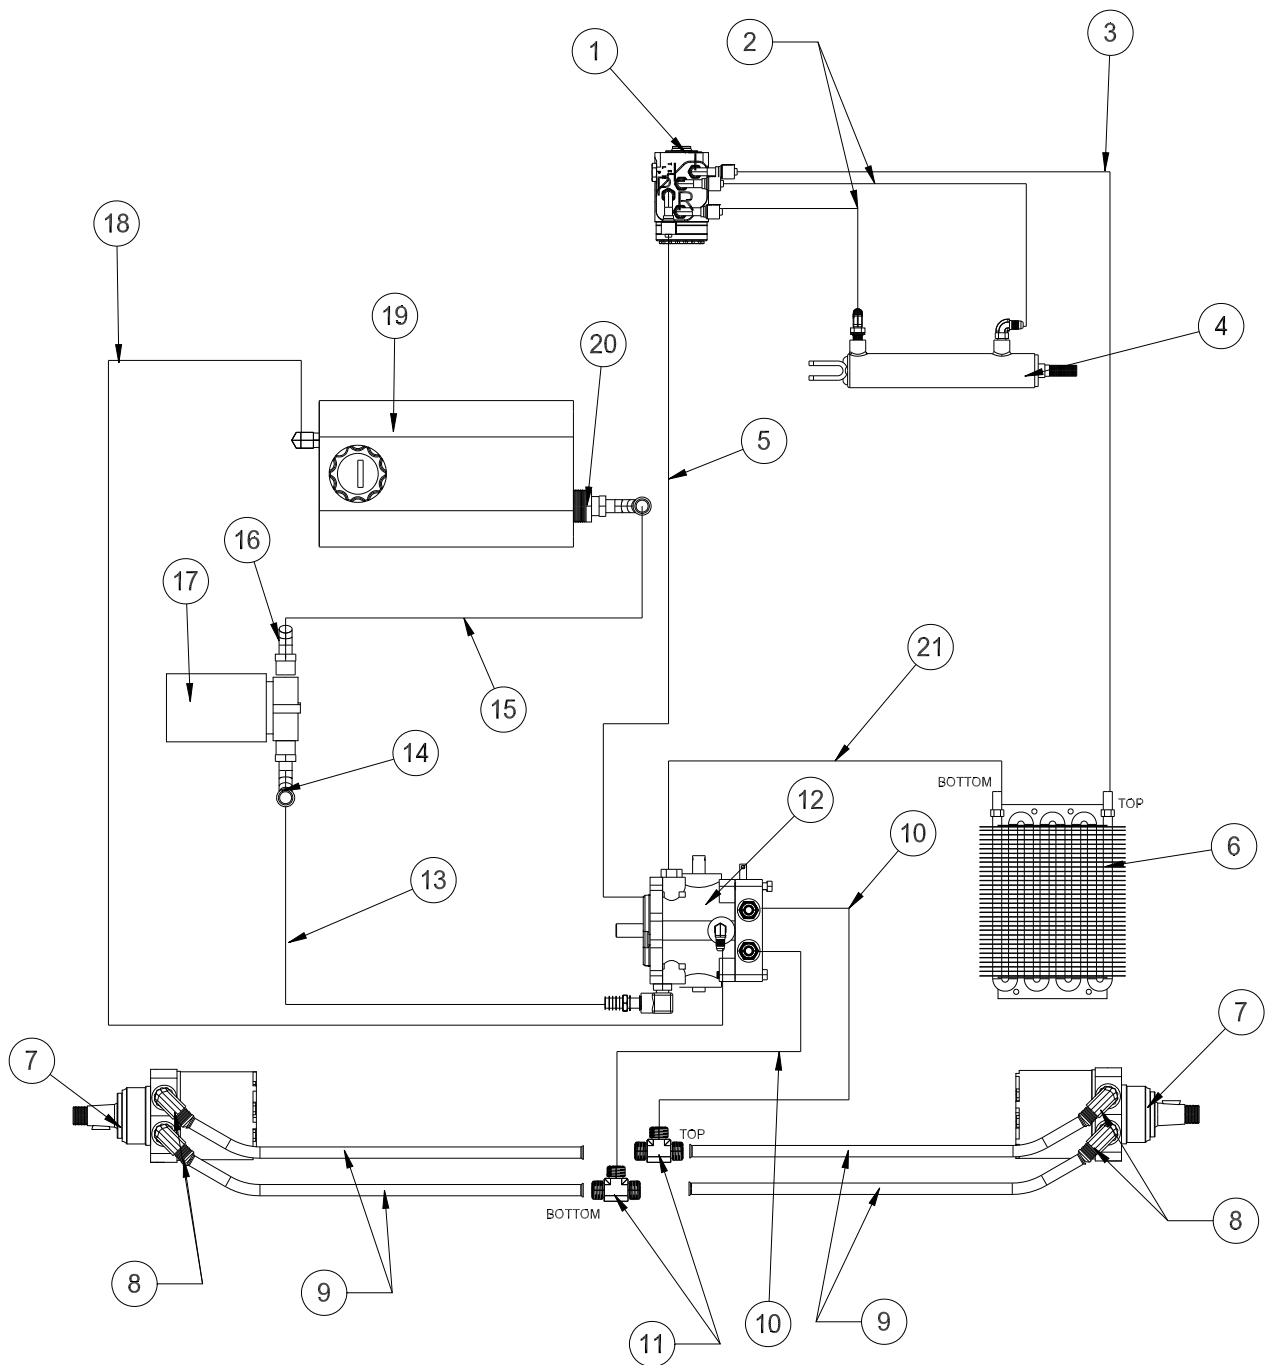

HYDRAULIC DIAGRAM PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	15-301	Orbitrol	1
	18-169	$\frac{3}{8}$ Adapter Fitting	4
2	10-671	Hydraulic Hose x 65"	2
3	10-669	Hydraulic Hose x 59"	1
4	77-263	Hydraulic Cylinder	1
	18-168	$\frac{3}{8}$ Street Elbow	2
5	10-670	Hydraulic Hose x 102"	1
6	45-382	Oil Cooler	1
7	10-510	Wheel Motor	2
8	34-122	Short Elbow	4
9	20-656	Hydraulic Tube Assembly	4
10	10-667	Hydraulic Hose x 20.5"	2
11	34-057	Tee, 1"	2
12	45-373	DDC Piston Pump	1
13	8832-24	$\frac{3}{4}$ " Suction Hose x 24"	1
	18-040	Hose Clamp	2
14	34-123	Elbow	1
15	8832-22	$\frac{3}{4}$ " Suction Hose x 22"	1
	18-040	Hose Clamp	2
16	18-508	45° Barb Elbow	1
17	23-006	Oil Filter	1
	23-031	Filter Element, 25 Micron	1
18	10-668	Hydraulic Hose x 39"	1
19	60-473	Oil Tank	1
20	60-213	Strainer	1
21	10-672	Hydraulic Hose x 35.5"	1


FITTING TORQUE CHARTS

SAE Straight Thread O-ring Plugs (Steel)					
Fitting Size	SAE Port Thread	Hollow Hex Head Plug (HP50N) Assembly Torque		Hex Head Plug (P50N) Assembly Torque	
		in. lbs.	ft. lbs.	in. lbs.	ft. lbs.
2	5/16 - 24	35 ± 5	3 ± .5	90 ± 5	7.5 ± .5
3	3/8 - 24	60 ± 5	5 ± .5	170 ± 10	14 ± 1
4	7/16 - 20	135 ± 10	11 ± 1	220 ± 15	18 ± 1
5	1/2 - 20	180 ± 10	15 ± 1	260 ± 15	22 ± 1
6	9/16 - 18	220 ± 10	18 ± 1	320 ± 20	27 ± 2
8	3/4 - 16	550 ± 20	46 ± 2	570 ± 25	48 ± 2
10	7/8 - 14	900 ± 50	75 ± 5	1060 ± 50	90 ± 5
12	1 1/16 - 12	1020 ± 50	85 ± 5	1300 ± 50	110 ± 5
14	1 3/16 - 12	1550 ± 75	130 ± 6	1750 ± 75	145 ± 6
16	1 5/16 - 12	1600 ± 75	135 ± 6	1920 ± 75	160 ± 6
20	1 5/8 - 12	2700 ± 150	225 ± 12	2700 ± 150	225 ± 12
24	1 7/8 - 12	3000 ± 150	250 ± 12	3000 ± 150	250 ± 12
32	2 1/2 - 12	3900 ± 200	325 ± 15	3900 ± 200	325 ± 15

Seal-Lok Straight and Adjustable Fitting (Steel)			
Fitting Size	SAE Port Thread Size	Assembly Torque (2)	
		in. lbs.	ft. lbs.
4	7/16 - 20	190 ± 10(1)	16 ± 1.0
6	9/16 - 18	420 ± 15	35 ± 1.0
8	3/4 - 16	720 ± 25	60 ± 2.0
10	7/8 - 14	1260 ± 50	105 ± 5.0
12	1 1/16 - 12	1680 ± 75	140 ± 6.0
16	1 5/16 - 12	2520 ± 100	210 ± 8.0
20	1 5/8 - 12	3100 ± 150	260 ± 12.0
24	1 7/8 - 12	3800 ± 150	315 ± 12.0

Over tightened fittings will result in crushing the cone which will create a leak.
Charts Developed by Parker Hennipin

MAIN BODY DRAWING

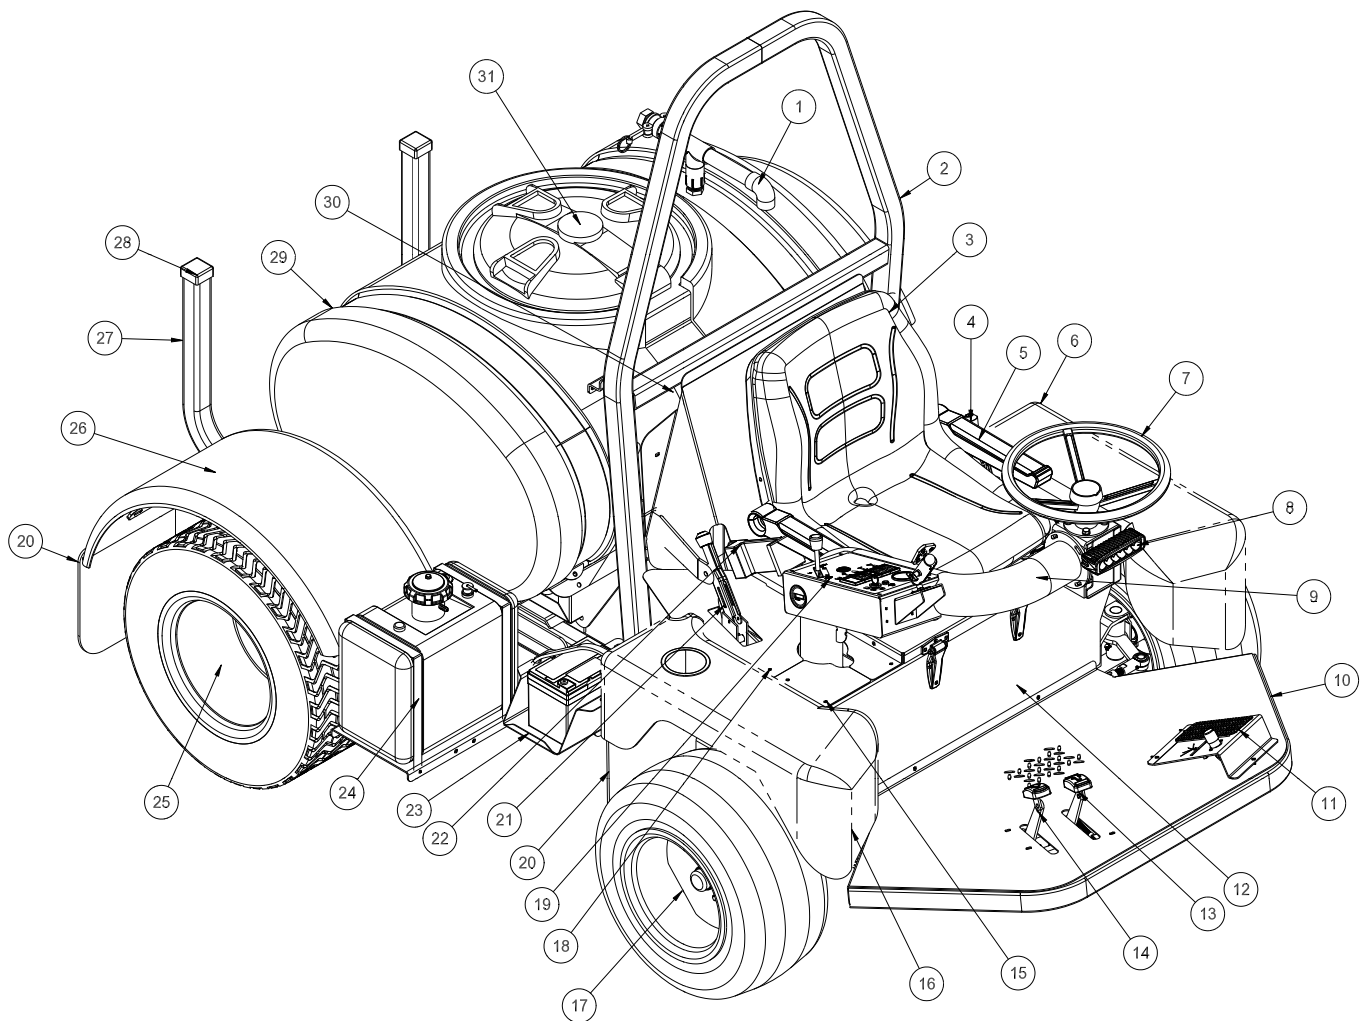



Parts

MAIN BODY PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	10-254	Air Gap Filler	1
2	10-700	Roll Bar	1
3	14-294	Seat Kit	1
	14-292	Seat Switch	1
	HB-516-18-125	Hex Bolt, $\frac{5}{16}$ - 18 x $1\frac{1}{4}$	4
	HW-516	Flat Washer, $\frac{5}{16}$	4
	HWL-516	Lock Washer, $\frac{5}{16}$	4
	HN-516-18	Hex Nut, $\frac{5}{16}$ - 18	4
4	10-120	Spray Boss Handle	1
5	10-706	Arm Rest Kit	1
6	10-662	Left Front Fender	1
7	20-057	Steering Wheel	1
	20-129	Center Cap	1
8	10-732	LED Head Light	1
9	10-683	Side Console Arm	1
10	10-675	Main Frame	1
11	10-705	Foot Rest	1
	45-132	Foot Rest Grip	1
12	10-680	Seat Frame	1
13	10-678	Reverse Pedal	1
	45-074	Molded Foot Pedal	1
14	10-677	Forward Pedal	1
	45-074	Molded Foot Pedal	1
15	10-694	RH Panel Cover	1
16	10-663	RH Front Fender	1
	15-781	Drink Cup Holder	1
17	16-857	Tire and Wheel	2
	16-857-01	Tire, 20 x 10 - 10NHS 4 Ply	2
	42-161-02	Wheel	2
18	10-695	RH Control Panel	1
19	10-684	Control Panel	1
20	20-659	Mud Flap	4
21	60-106	Park Brake Handle	1
22	76-198-03	Seat Belt	1
23	10-679	Battery Box	1
	33-216	Battery	1
24	15-838	Fuel Tank	1
	78-456	Gas Tank Strap	2
	10-400	Gas Tank Bracket	1
25	78-221	Tire and Wheel	2
	78-221-01	Tire, 24-13-12NHS	2
	78-221-02	Wheel	2
26	10-168	Rear Fender	2
	HBCL-516-18-100	Low Carriage Bolt, $\frac{5}{16}$ - 18 x 1	8
	HNFL-516-18	Flange-Loc Nut, $\frac{5}{16}$ - 18	8
27	17-615	Universal Boom Tube	2
28	16-557	Square Caps	2
29	10-111	110 Gallon Poly Tank	1
30	10-699	Back Panel	1
	9023	Heat Reflective Matting (18 x 25.5)	$\frac{1}{4}$ Sheet
31	14-532	Lid (comes with tank)	1
	16-169	Strainer Basket	1





CONTROL PANEL DRAWING

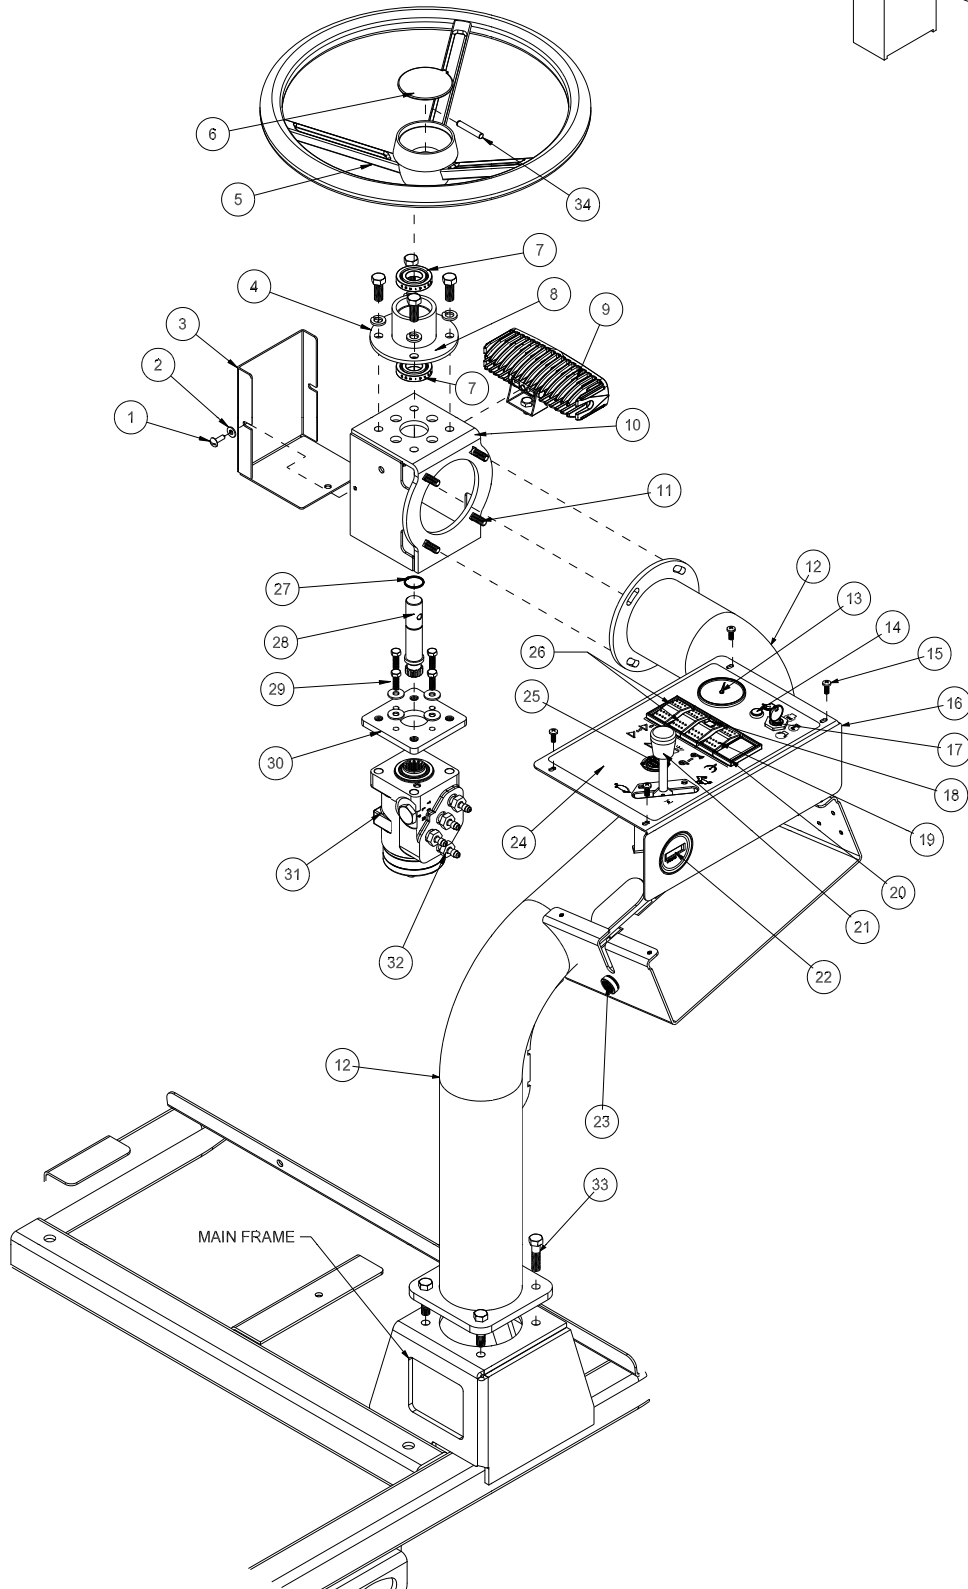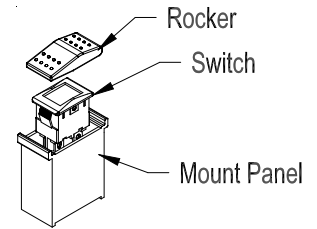

CONTROL PANEL PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	HSM-10-32-063	Machine Screw, #10 -32 x 5/8	2
2	HW-10	Flat Washer, #10	2
3	10-704	Steering Box Cover	1
4	HB-38-16-100	Hex Bolt, $\frac{3}{8}$ -16 x 1	4
	HWL-38	Lock Washer, $\frac{3}{8}$	4
5	20-057	Steering Wheel	1
6	20-129	Steering Wheel Cap	1
7	10-711	Ball Bearing	2
8	10-698	Steering Column	1
9	10-732	LED Head Light	1
10	10-682	Steering Box	1
11	HBCL-516-18-100	Carriage Bolt, $\frac{5}{16}$ - 18 x 1	4
	HNFL-516-18	Flange-Loc Nut, $\frac{5}{16}$ - 18	4
12	10-683	Side Control Arm	1
13	10-495	Hole Cap	1
	8875	Male Bullet	1
	8874	Female Bullet	1
14	50-359	Oil Warning Indicator Light	1
	8853	Female Spade Connector	1
	8958	Male Spade Connector	1
15	HSM-10-32-100	Machine Screw, #10 -32 x 1	4
	HNFL-10-32	Flange-Loc Nut, #10- 32	4
16	10-684	Control Panel	1
17	13-488	Ignition Switch	1
18	LED Head Light		
	15-731	Amber Rocker	1
	15-729	Panel Mount Middle	1
	15-726	Lighted Switch	1
19	Spray Pump		
	15-727	Rocker	1
	15-729	Panel Mount Middle	1
	15-782	Switch, On-None-Off	1
20	15-730	Panel Mount Plug	1
	15-725	Panel Mount End	1
21	45-118	Throttle Cable	1
22	12-804	Hour Meter	1
23	77-207	Buzzer	1
	8875	Male Bullet	1
	8874	Female Bullet	1
24	10-657	Decal, Control Panel	1
25	32-576	Dual USB Power Charger	1
26	RH and LH Booms		
	15-725	Panel Mount End	1
	15-729	Panel Mount Middle	1
	15-727	Rocker	2
	15-728	Centering Switch, On-Off-On	2
27	HRR-075	Retaining Ring, $\frac{3}{4}$ "	1
28	10-708	Splined Steering Shaft	1
29	HBM-6-1-16	Metric Bolt, #6 - 1 x 16	4
	HWLM-6	Metric Lock Washer, M6	4
30	10-689	Orb Adapter	1
31	15-301	Orbtrol	1
32	18-169	$\frac{3}{8}$ Adapter Fitting	4
33	HB-38-16-100	Hex Bolt, $\frac{3}{8}$ -16-100	4
	HNFL-38-16	Flange-Loc Nut, $\frac{3}{8}$ -16	4
34	HRP-14-150	Roll Pin, $\frac{1}{4}$ x $1\frac{1}{2}$	1
35	10-721	Short Ram Mount	1

FRONT AXLE DRAWING

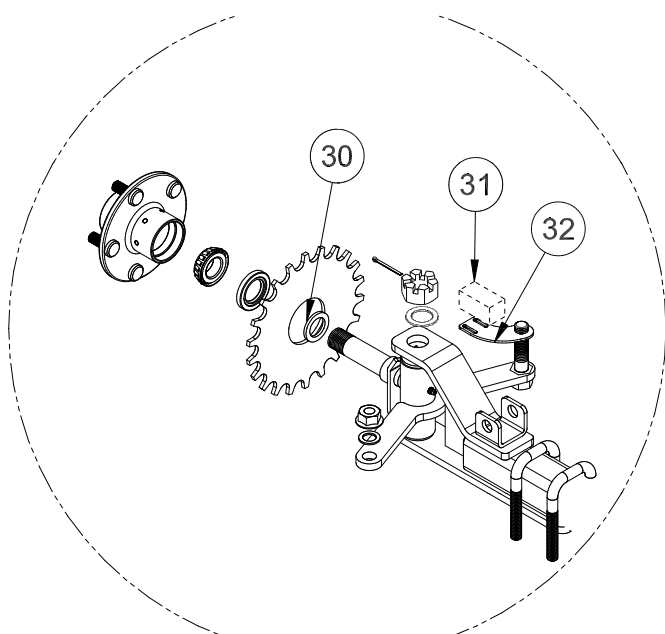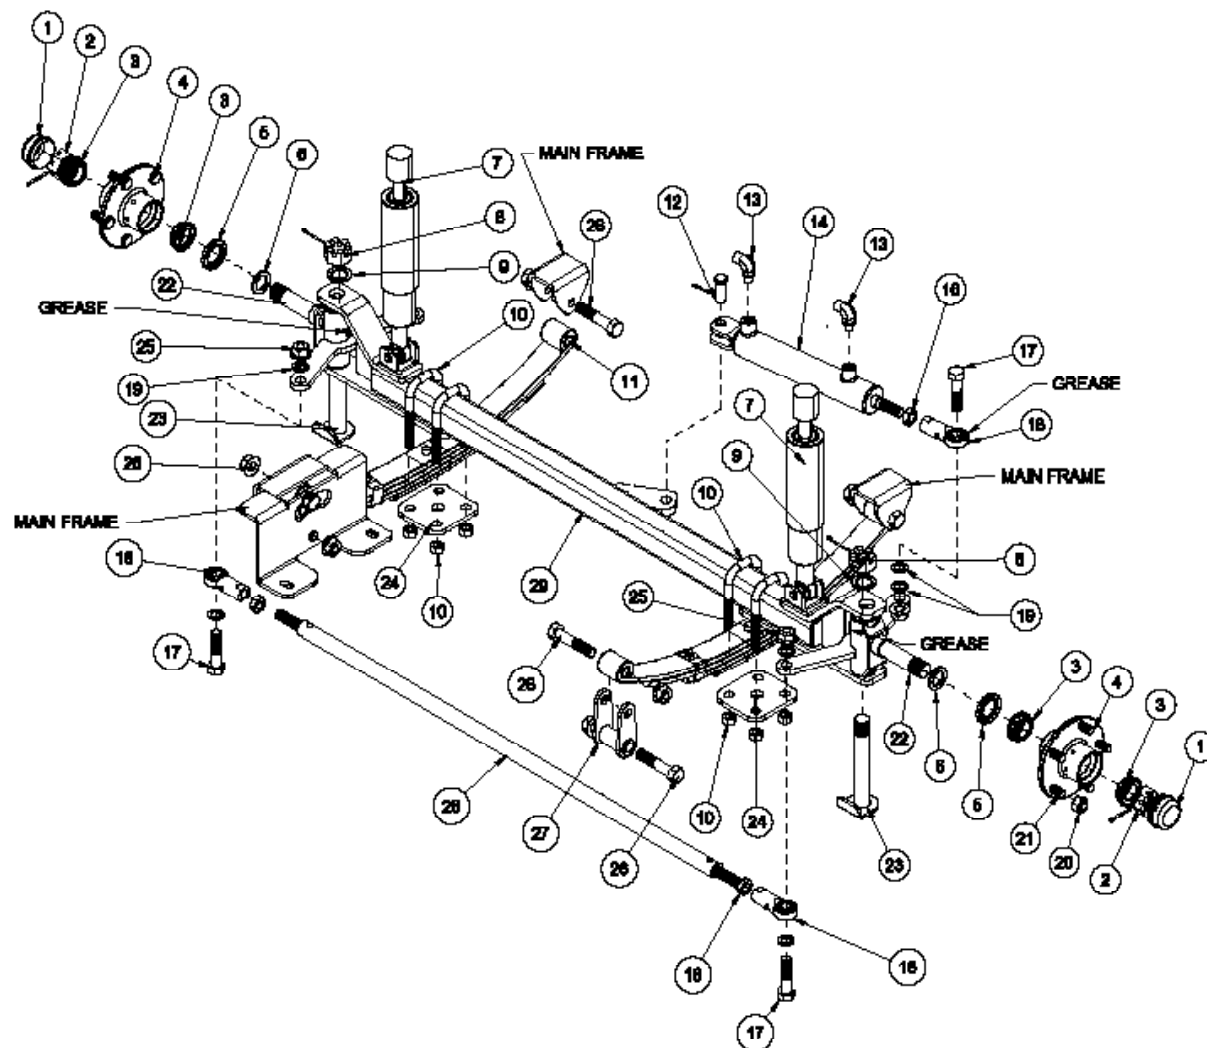


FRONT AXLE PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1*	33-073-02	Dust Cap	2
2	HNAR-100-14	Slotted Jam Nut, 1 - 14	2
	HP-18-150	Cotter Pin, $\frac{1}{8}$ - $1\frac{1}{2}$	2
3*	11-043	Bearing	4
4	80-019	Hub (includes * items)	2
5*	11-041	Oil Seal	2
6	HMB-100-10	Machine Bushing, 1 x 10GA	2
7	20-617	Shock Absorbers	2
8	HNA-100-14	Slotted Nut, 1 - 14	2
	HP-18-150	Cotter Pin, $\frac{1}{8}$ - $1\frac{1}{2}$	2
9	HMB-100-14	Machine Bushing, 1 x 14GA	2
10	20-555	U-bolt	4
	HNTL-12-13	Lock Nut, $\frac{1}{2}$ - 13	8
11	20-740	Leaf Spring	2
12	HCP-58-175	Clevis Pin, $\frac{5}{8}$ - $1\frac{3}{4}$	1
	HP-18-100	Cotter Pin, $\frac{1}{8}$ x 1	1
13	18-168	90° Elbow	2
14	77-263	Hydraulic Cylinder	1
	14-530	Seal Kit	1
16	HNJ-58-18	Jam Nut, $\frac{5}{8}$ - 18	3
17	HB-58-11-250	Bolt, $\frac{5}{8}$ - 11 x $2\frac{1}{2}$	3
18	18-154	Rod End	3
	HG-14-28-180	Grease Fitting, $\frac{1}{4}$ - 28 x 180°	3
19	HMB-58-14	Machine Bushing, $\frac{5}{8}$ x 14GA	6
20*	HNL-12-20	Lug Nut, $\frac{1}{2}$ - 20	10
21*	27-022-02	Stud, $\frac{1}{2}$ - 20 x $1\frac{7}{16}$	10
22	10-582	Spindle	2
	18-035	Bushing (part of Spindle; 2 per)	4
	HG-14-28-45	Grease Fitting, $\frac{1}{4}$ - 28 x 45°	2
23	16-076	King Pin	2
24	20-538	Spring Mount	2
25	HNTL-58-11	Lock Nut, $\frac{5}{8}$ - 11	7
26	HB-58-11-300	Hex Bolt, $\frac{5}{8}$ - 11 x 3	4
27	10-634	Shackle	2
28	10-583	Steering Link	1
29	10-629	Front Axle	1
30	10-642	Speed Sensor Sprocket only	1
31	10-496	Proximity Speed Sensor	1
	HSM-8-32-100	Machine Screw, 8 - 32 x 1	2
	HNFL-8-32	Flange Whiz-Lock Nut, 8 - 32	2
32	10-644	Speed Sensor Mount	1
	HB-12-13-125	Hex Bolt, $\frac{1}{2}$ - 13 x $1\frac{1}{4}$	1
	HNFL-12-13	Flange Whiz-Lock Nut, $\frac{1}{2}$ - 13	1



SEAT CONSOLE AND ROPS DRAWING

Parts

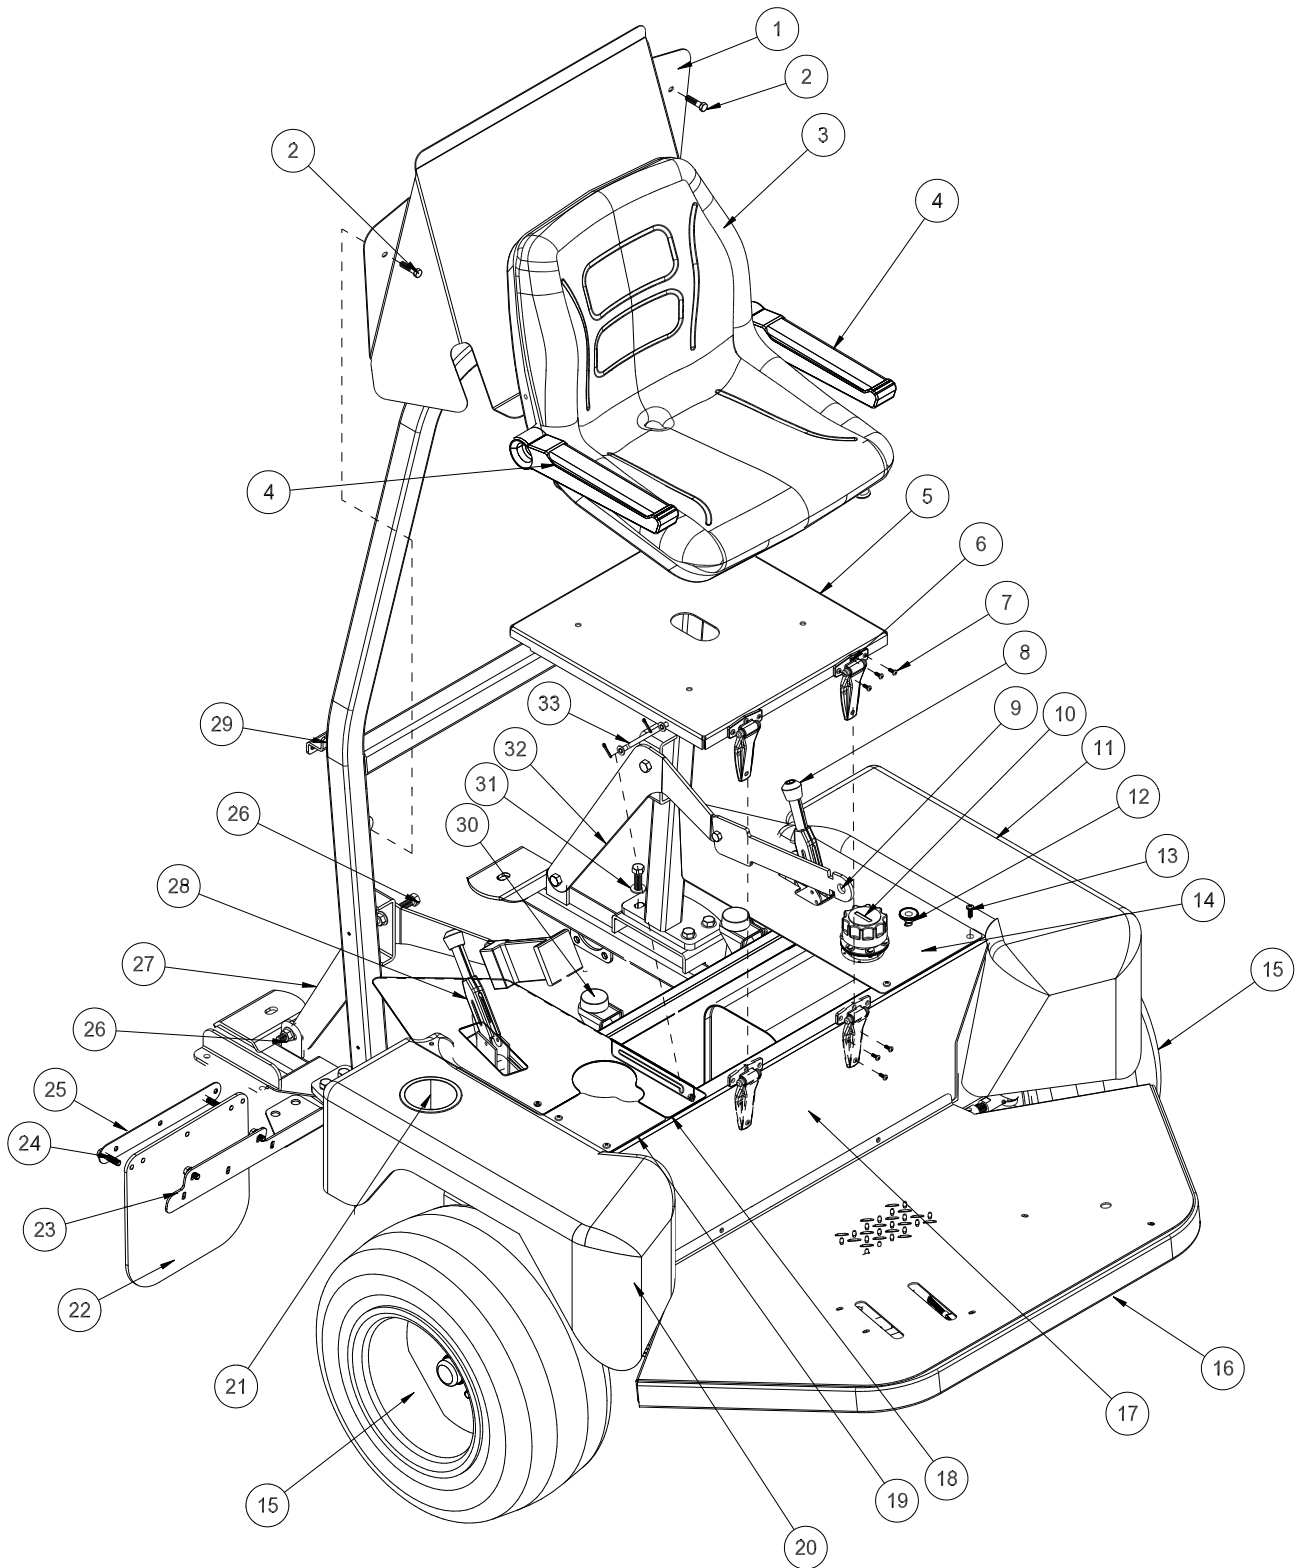


SEAT CONSOLE AND ROPS PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	10-699	Back Panel	1
	9023	Heat Reflective Matting (18 x 25.5)	1/4 Sheet
2	HSTP-516-18-075	Truss Head Screw, 5/16 - 18 x 3/4	2
	HNFL-516-18	Flange-Loc Nut, 5/16 - 18	2
3	14-294	Seat Kit	1
	14-292	Seat Switch	1
	14-800	Seat Rail	1
	HB-516-18-125	Hex Bolt, 5/16 - 18 x 1 1/4	4
	HW-516	Flat Washer, 5/16	4
	HWL-516	Lock Washer, 5/16	4
	HN-516-18	Hex Nut, 5/16 - 18	4
4	10-706	Arm Rest Kit	1
5	10-714	Seat Panel	1
6	27-055	Hinge	2
7	HSMFCS-10-32-050	Machine Screw, #10-32-1/2	12
	HNFL-10-32	Flange-Loc Nut, #10-32	12
8	10-120	Speed Boss Handle	1
9	76-198-03	Seat Belt	1
10	13-747	Filler Breather	1
	60-473	Oil Tank	1
11	10-662	LH Front Fender	1
12	80-020	Choke Cable	1
13	HSDPS-14-100	Pan Head Drill Screw, 1/4 x 1	8
14	10-696	LH Control Panel	1
15	16-857	Tire and Wheel	2
	16-857-01	Tire, 20 x 10 - 10NHS 4 Ply	2
	42-161-02	Wheel	2
16	10-675	Main Frame	1
17	10-680	Seat Frame	1
18	10-695	RH Control Panel	1
19	10-694	RH Panel Cover	1
20	10-663	RH Front Fender	1
21	15-781	Drink Cup Holder	1
22	20-659	Mud Flap	2
23	10-735	RH Fender Brace	1
	10-736	LH Fender Brace (not shown)	1
	HBCL-516-18-075	Carriage Bolt, 5/16 - 18 x 3/4	4
	HNFL-516-18	Flange-Loc Nut, 5/16 - 18	4
24	HB-14-20-075	Hex Bolt, 1/4 - 20 x 3/4	6
	HWF-14-150	Fender Washer, 1/4 x 1 1/2	6
	HNFL-14-20	Flange-Loc Nut, 1/4 - 20	6
25	20-660	Mud Flap Bracket	2
26	HB-12-13-150	Hex Bolt, 1/2 - 13 x 1 1/2	4
	HNTL-12-13	Lock Nut, 1/2 - 13	4
27	10-701	RH Seat Belt Mount	1
28	60-106	Park Brake Handle	1
29	10-700	Roll Bar	1
30	50-081	Rubber Bumper	2
	HNTL-38-16	Lock Nut, 3/8 - 16	2
31	HB-12-13-175	Hex Bolt, 1/2 - 13 x 1 3/4	8
	HW-12	Flat Washer, 1/2	8
	HNTL-12-13	Lock Nut, 1/2 - 13	4
32	10-702	LH Seat Belt Mount	1
33	10-697	Seat Prop Rod	1
	HW-38	Flat Washer, 3/8	2
	HP-18-075	Cotter Pin, 1/8 x 3/4	2

FUEL TANK DRAWING


Parts

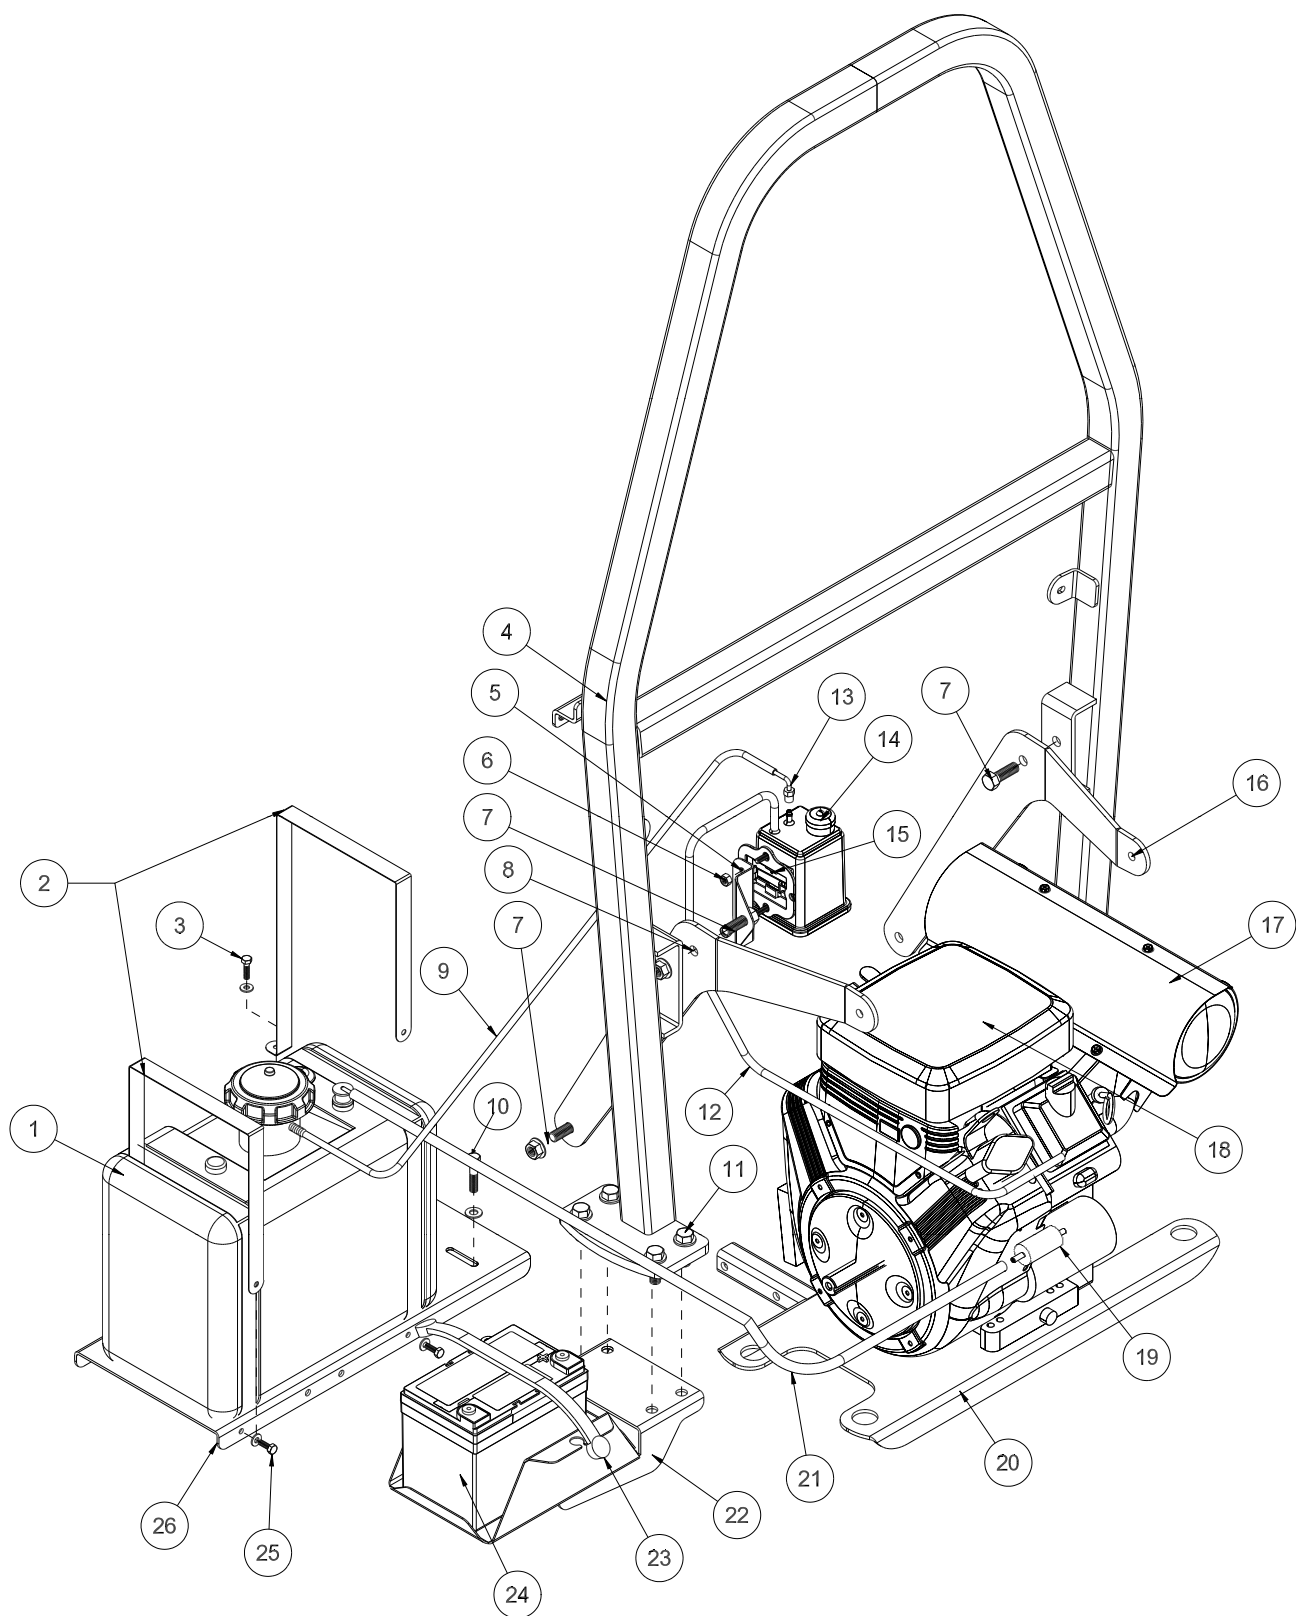

FUEL TANK PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	15-838	CARB Gas Tank	1
	15-838-01	Dial Fuel Level Gauge (replacement)	1
	73-050	Vented Cap with Gauge (replacement)	1
2	78-456	Tank Strap	2
3	HB-14-20-100	Hex Bolt, $\frac{1}{4}$ - 20 x 1	2
	HNTL-14-20	Lock Nut, $\frac{1}{4}$ - 20	2
4	10-700	Roll Bar	1
5	10-681	Canister Mount	1
7	HB-12-13-150	Hex Bolt, $\frac{1}{2}$ - 13 x $1\frac{1}{2}$	4
	HNTL-12-13	Lock Nut, $\frac{1}{2}$ - 13	4
8	10-701	RH Seat Belt Mount	1
9	8800-26	$\frac{1}{4}$ " Fuel Hose x 26"	1
	18-186	Hose Clamp	2
10	HB-12-13-125	Hex Bolt, $\frac{1}{2}$ - 13 x $1\frac{1}{4}$	2
	HW-12	Flat Washer, $\frac{1}{2}$	2
	HNFL-12-13	Flange-Loc Nut, $\frac{1}{2}$ - 13	2
11	HB-12-13-175	Hex Bolt, $\frac{1}{2}$ - 13 x $1\frac{3}{4}$	8
	HW-12	Flat Washer, $\frac{1}{2}$	8
	HNTL-12-13	Lock Nut, $\frac{1}{2}$ - 13	8
12	9025-28	$\frac{3}{16}$ " Fuel Hose x 28"	1
	18-186	Hose Clamp	2
13	8-693	Hose Connector (comes with engine)	1
14	8-689	Carbon Canister	1
15	8-688	Carbon Canister Mount	1
16	10-702	LH Seat Belt Mount	1
17	10-575-01	Muffler	1
18	10-575	Engine, B&S, 23HP	1
	10-575-02	Air Filter	1
	10-575-03	Air Filter Pre-Cleaner	1
	10-575-04	Engine Oil Filter	1
19	50-403	In-line Gas Filter (replacement)	1
	18-186	Hose Clamp	1
20	10-580	Engine Plate	1
21	8800-46	$\frac{1}{4}$ " Fuel Hose 46"	1
	18-186	Hose Clamp	2
22	10-679	Battery Box	1
23	8-603	Strap	1
24	33-216	Battery	1
25	HB-14-20-075	Hex Bolt, $\frac{1}{4}$ - 20 x $\frac{3}{4}$	2
	HNTL-14-20	Lock Nut, $\frac{1}{4}$ - 20	2
26	10-400	Gas Tank Bracket	1


OIL TANK -OIL FILTER-OIL COOLER DRAWING

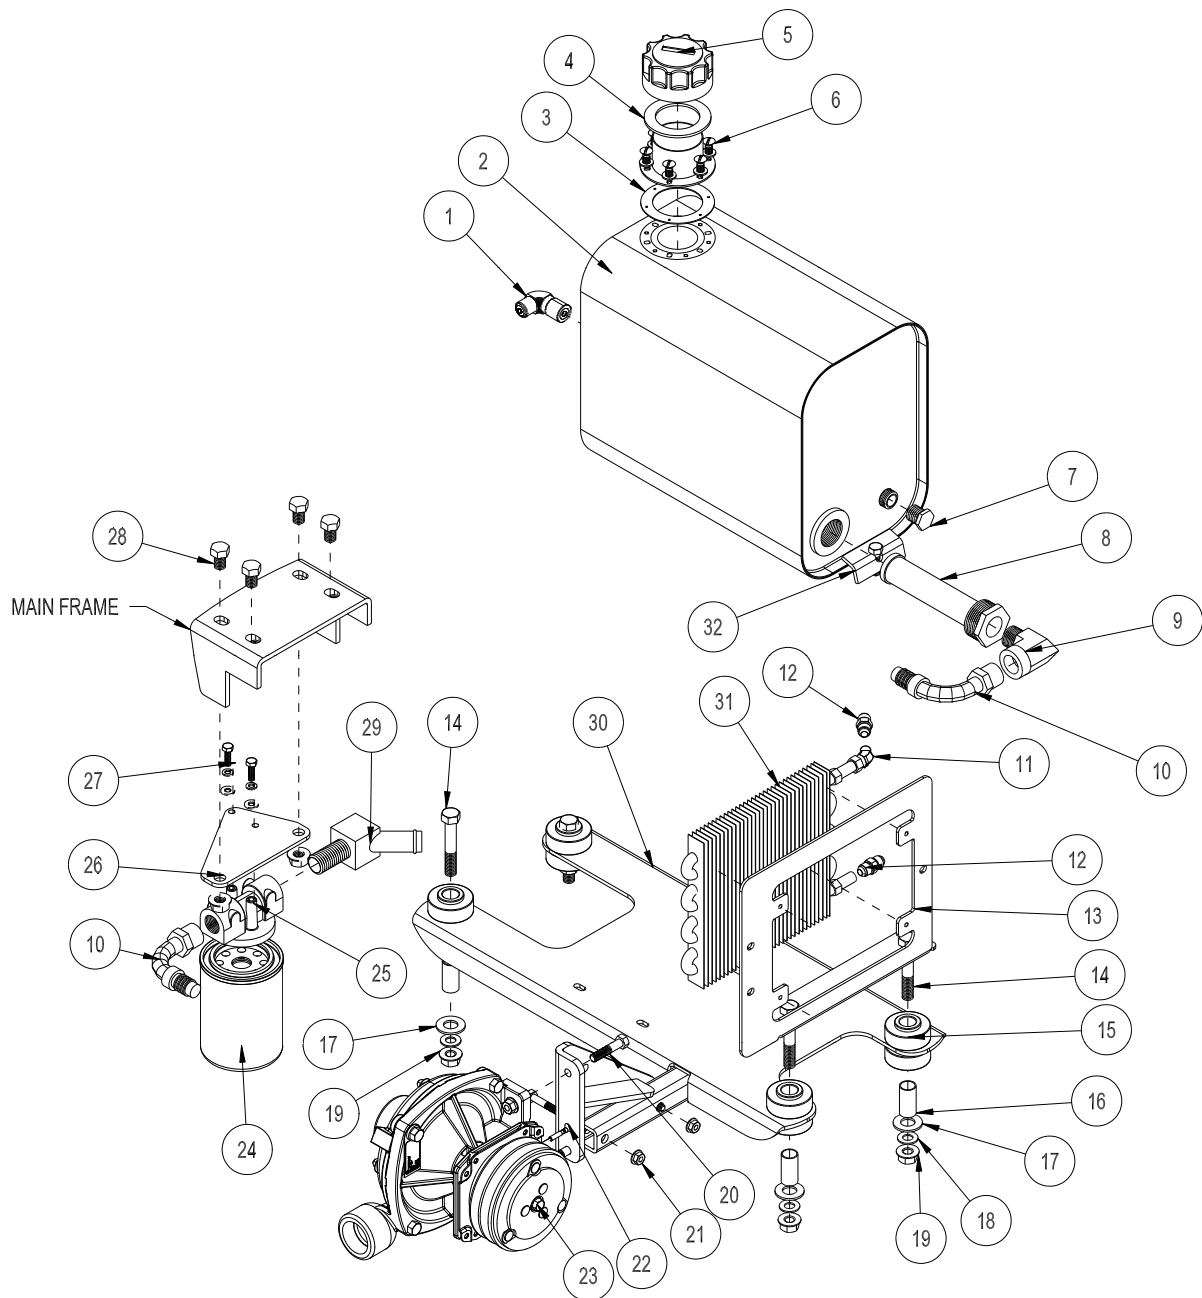

OIL TANK -OIL FILTER-OIL COOLER PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	18-246	Male Elbow	1
2	60-473	Hydraulic Oil Tank	1
3*	13-586-02	Bottom Gasket	1
4	13-586-03	Neck	1
5	13-747	Filler Breather (includes * items)	1
*	13-586-01	Cap Gasket	1
6	HSM-10-32-063	Machine Screw, 10 - 32 x 5/8	6
	HWL-10	Lock Washer, #10	6
7	18-069	Replacement Plug	1
8	60-213	Strainer	1
9	18-140	Street Elbow	1
10	34-123	Elbow	2
11	18-214	45° Elbow	1
12	18-410	Adapter	2
13	10-733	Cooler Mount	1
14	HB-12-13-300	Hex Bolt, 1/2 - 13 x 3	4
15	60-107	Rubber Bushing	8
16	60-168	Spacer	4
17	HW-58	Flat Washer, 5/8	4
18	HW-716	Flat Washer, 7/16	4
19	HNFL-12-13	Flange-Loc Nut, 1/2 - 13	4
20	HB-38-16-175	Hex Bolt, 3/8 - 16 x 1 3/4	2
	HW-38	Flat Washer, 3/8	2
	HTNL-38-16	Lock Nut, 3/8 - 16	2
21	HB-516-18-175	Hex Bolt, 5/16 -18 x 1 3/4	2
	HW-516	Flat Washer, 5/16	2
22	10-593	Hypco Pump Mount	1
23	16-998	Hypco® Pump	1
24	23-031	Replacement Filter Element, 25 Micron	1
25	23-006	Oil Filter Assembly	1
26	10-687	Oil Filter Mount	1
27	HB-14-20-075	Hex Bolt, 1/4 - 20 x 3/4	2
	HW-14	Flat Washer, 1/4	2
	HWL-14	Lock Washer, 1/4	2
28	HB-12-13-175	Hex Bolt, 1/2 - 13 x 1 3/4	8
	HW-12	Flat Washer, 1/2	8
	HNTL-12-13	Lock Nut, 1/4 - 13	8
29	18-508	Barb Elbow	1
30	10-580	Engine Plate	1
31	45-382	Oil Cooler w/ Mount Kit	1
32	75-792	Tank Hold-down	1
	HB-516-18-150	Hex Bolt, 5/16 -18 x 1 1/2	1
	HW-516	Flat Washer, 5/16	1
	HNTL-516-18	Lock Nut, 5/16 -18	1

FOOT PEDAL LINKAGE DRAWING

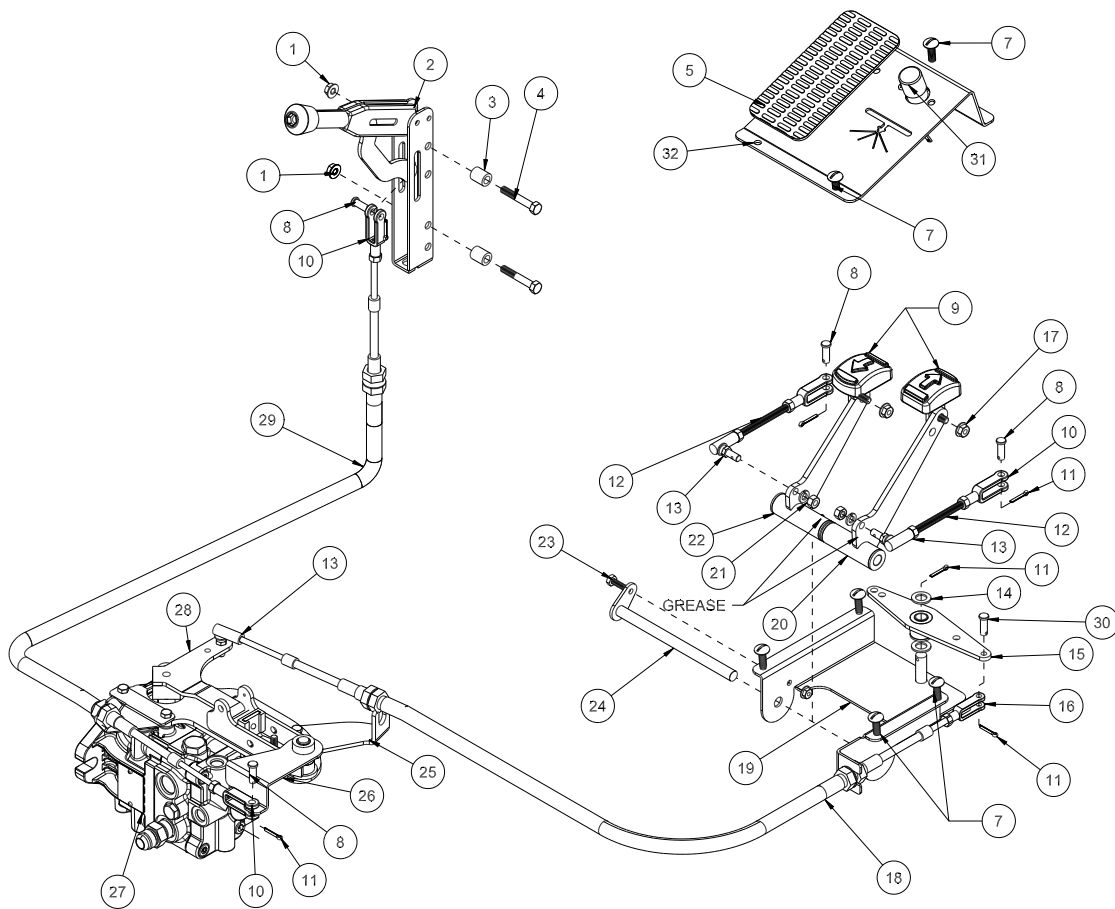

PARTS



FOOT PEDAL LINKAGE PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	HNTL-516-18	Lock Nut, $\frac{5}{16}$ - 18	2
2	10-120	Spray Boss Handle	1
3	10-134	Handle Spacer	2
4	HB-516-18-200	Hex Bolt, $\frac{5}{16}$ - 18 x 2	2
5	45-132	Foot Rest Grip	1
7	HSTP-516-18-075	Truss Head Screw, $\frac{5}{16}$ - 18 x $\frac{3}{4}$	7
	HNTL-516-18	Lock Nut $\frac{5}{16}$ - 18	7
8	HCP-516-100	Clevis Pin, $\frac{5}{16}$ x 1	4
9	45-022	Molded Foot Pedal	2
10	11-100	Yoke, $\frac{5}{16}$ - 24	4
11	HP-18-100	Cotter Pin, $\frac{1}{8}$ x 1	5
12	10-598	Connector Rod	2
	HN-516-24	Hex Nut, $\frac{5}{16}$ - 24	4
13	21-462	Ball Joint, $\frac{5}{16}$ - 24	3
14	HMB-12-14	Machine Bushing, $\frac{1}{2}$ x 14GA	2
15	10-676	Pedal Relay	1
16	11-103	Yoke, $\frac{1}{4}$ - 28	1
17	HBFL-516-18-075	Flange Whiz-loc Bolt, $\frac{5}{16}$ - 18 x $\frac{3}{4}$	2
	HNFL-516-18	Flange Whiz-loc Nut, $\frac{5}{16}$ - 18	2
18	10-565	Cable	1
19	10-674	Pedal Mount	1
20	10-677	Forward Pedal Assembly	1
	76-128	Bushing	2
	HG-14-28-180	Grease Zerk	1
21	HWL-516	Lock Washer, $\frac{5}{16}$	2
	HN-516-24	Hex Nut, $\frac{5}{16}$ - 18	2
22	10-678	Reverse Pedal Assembly	1
	76-128	Bushing	2
	HG-14-28-180	Grease Zerk	1
23	HB-14-20-075	Hex Bolt, $\frac{1}{4}$ - 20 x $\frac{3}{4}$	1
	HN-14-20	Hex Nut, $\frac{1}{4}$ - 20	1
24	10-673	Pedal Pivot	1
25	10-686	Control Cable Mount	1
26	10-693	Spray Boss Arm	1
27	45-373	DDC Piston Pump	1
28	10-703	Swash Arm	1
29	10-658	Spray Boss Cable	1
30	HCP-14-075	Clevis Pin, $\frac{1}{4}$ x $\frac{3}{4}$	1
31	33-509	Spray Switch (Radion System only)	1
32	10-705	Foot Rest (Radion System only)	1



PUMP DRAWING

Parts

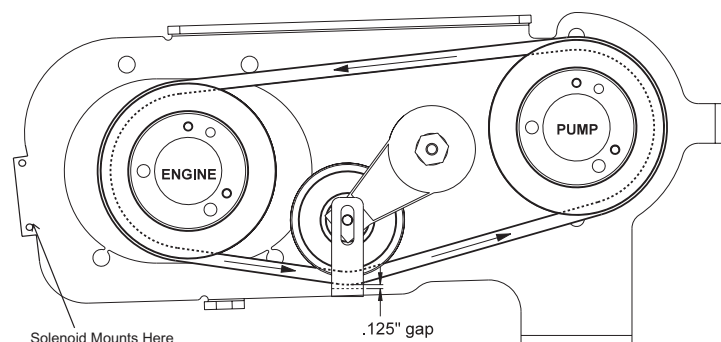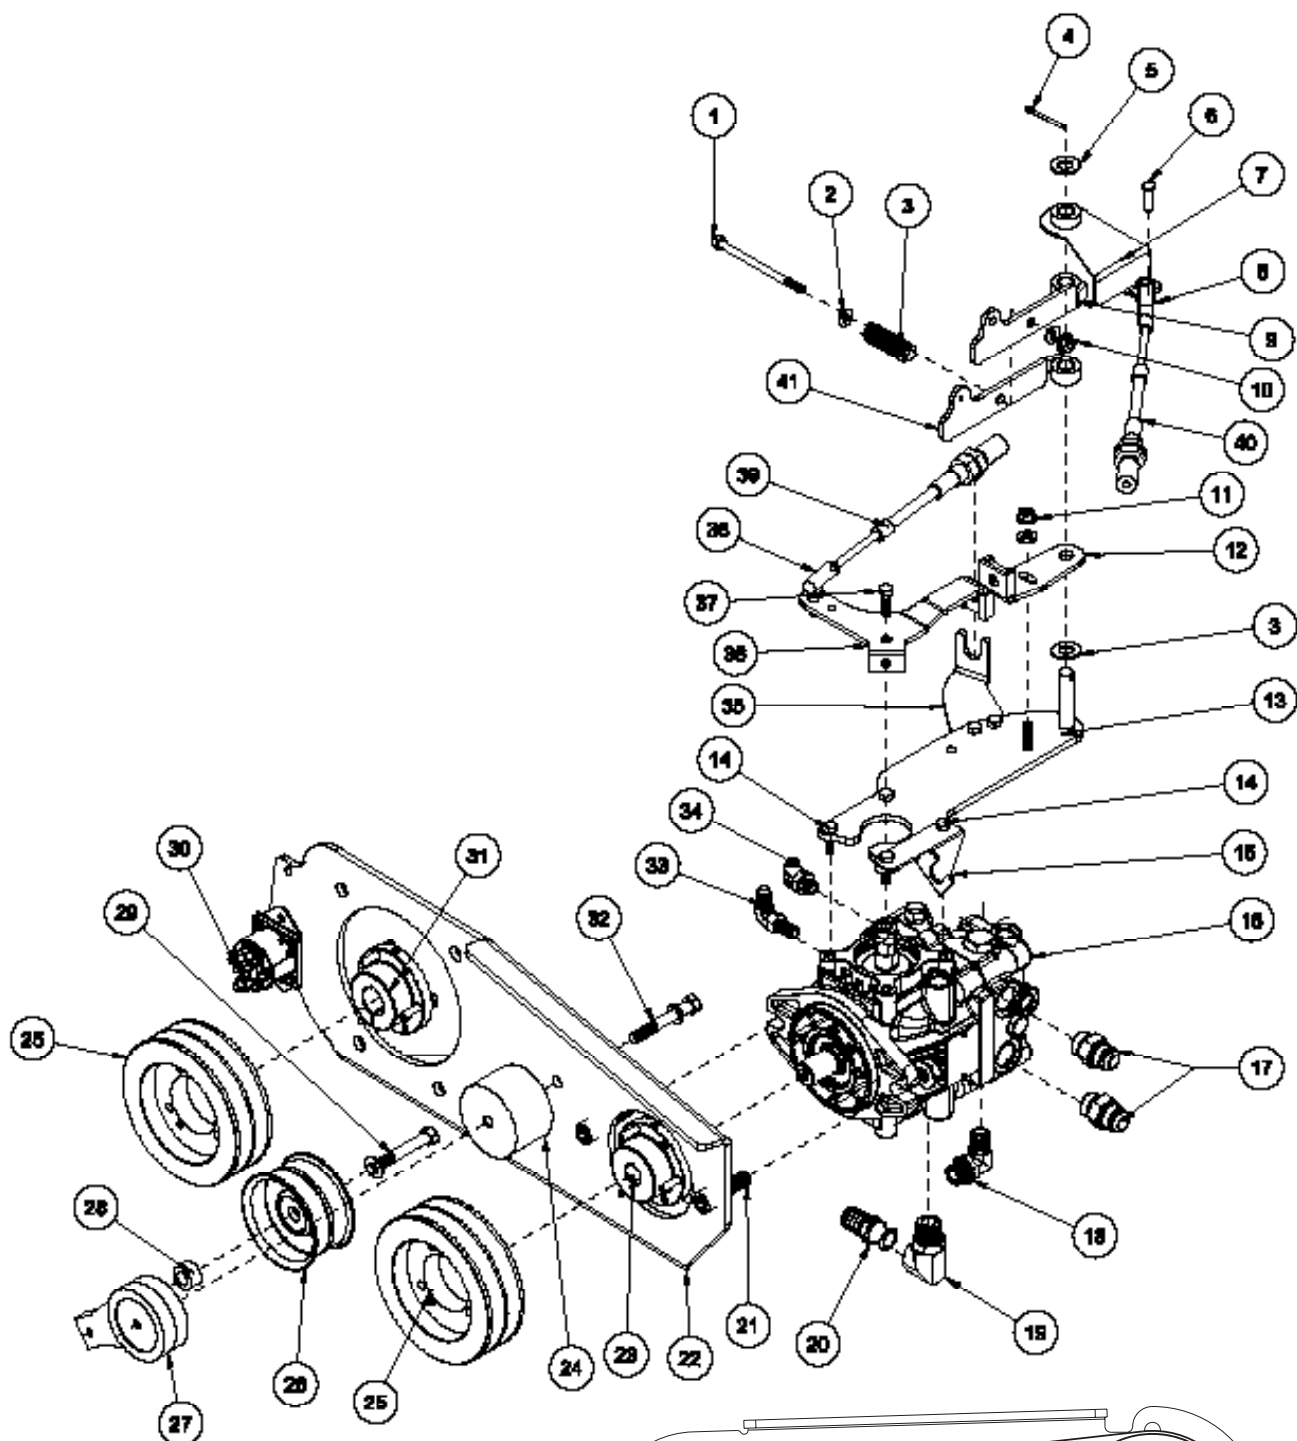


Belt Routing

PUMP PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	HB-14-20-400	Hex Bolt, $\frac{1}{4}$ - 20 x 4	1
2	HW-14	Flat Washer, $\frac{1}{4}$	2
3	10-477	Compression Spring	1
4	HP-18-075	Cotter Pin, $\frac{1}{8}$ x $\frac{3}{4}$	1
5	HMB-12-14	Machine Bushing, $\frac{1}{2}$ x 14GA	2
6	HCP-516-100	Clevis Pin, 5/16 x 1	1
7	10-693	Spray Boss Arm	1
8	11-100	Yoke, $\frac{5}{16}$ - 24	1
9	45-368	Top Centering Arm	1
10	HNTL-14-20	Lock Nut, $\frac{1}{4}$ - 20	1
11	HNTL-516-18	Lock Nut, $\frac{5}{16}$ - 18	1
	HW-516	Washer, $\frac{5}{16}$	1
12	45-327	Wheel Creep Arm	1
	8946-1	Wear Strip 1"	1
	HR-316-100	Rivet	1
	HRW-36	Rivet Washer	1
13	10-710	Control Mount	1
14	HB-38-16-100	Hex Bolt, $\frac{3}{8}$ - 16 x 1	6
	HNTL-38-16	Lock Nut, $\frac{3}{8}$ - 16	6
15	10-685	Spray Boss Cable Mount	1
16	45-373	DDC20 Piston Pump	1
17	18-505	Adapter	2
18	18-174	$\frac{1}{2}$ " Straight Elbow	1
19	23-127	Elbow	1
20	18-133	Barb Fitting, 1/2 MPT x 3/4 Barb	1
21	HSSH-12-13-175	Socket Screw, $\frac{1}{2}$ - 13 x $1\frac{3}{4}$	2
	HNFL-12-13	Flange-Loc Nut, $\frac{1}{2}$ - 13	2
22	10-709	Pump Mount	1
23	10-664	Hub, 7/8"	1
24	42-361	Tensioner Spacer	1
25	42-331	Pulley	2
26	42-358	Idler Pulley	1
27	42-327	Belt Tensioner	1
28	16-990	Spacer	1
29	HB-38-16-275	Hex Bolt, $\frac{3}{8}$ - 16 x $2\frac{3}{4}$	1
	HW-38	Flat Washer, $\frac{3}{8}$	1
	HNTL-38-16	Lock Nut, $\frac{3}{8}$ - 16	1
30	13-750	Solenoid w/ Connector	1
	22-017	Starter Cable	1
31	42-245	Hub 1"	1
32	HB-38-16-250	Hex Bolt, $\frac{3}{8}$ - 16 x $2\frac{1}{2}$	1
	HWL-38	Lock Washer, $\frac{3}{8}$	1
33	18-506	Elbow	1
34	18-188	45° Elbow	1
35	10-686	Control Cable Mount	1
36	10-703	Swash Arm	1
	8946-1	Wear Strip 1"	1
	HR-316-100	Rivet	1
	HRW-36	Rivet Washer	1
37	HBM-8-1.25-25	Metric Hex Bolt, #8 - 1.25 x 25	1
	HWL-8	Metric Lock Washer. #8	1
38	21-462	Ball Joint, $\frac{5}{16}$ - 24	1
39	10-565	Cable	1
40	10-658	Spray Boss Cable	1
41	45-367	Bottom Centering Arm	1
NS	42-359	Belt	1

ENGINE AND SPRAY PUMP DRAWING

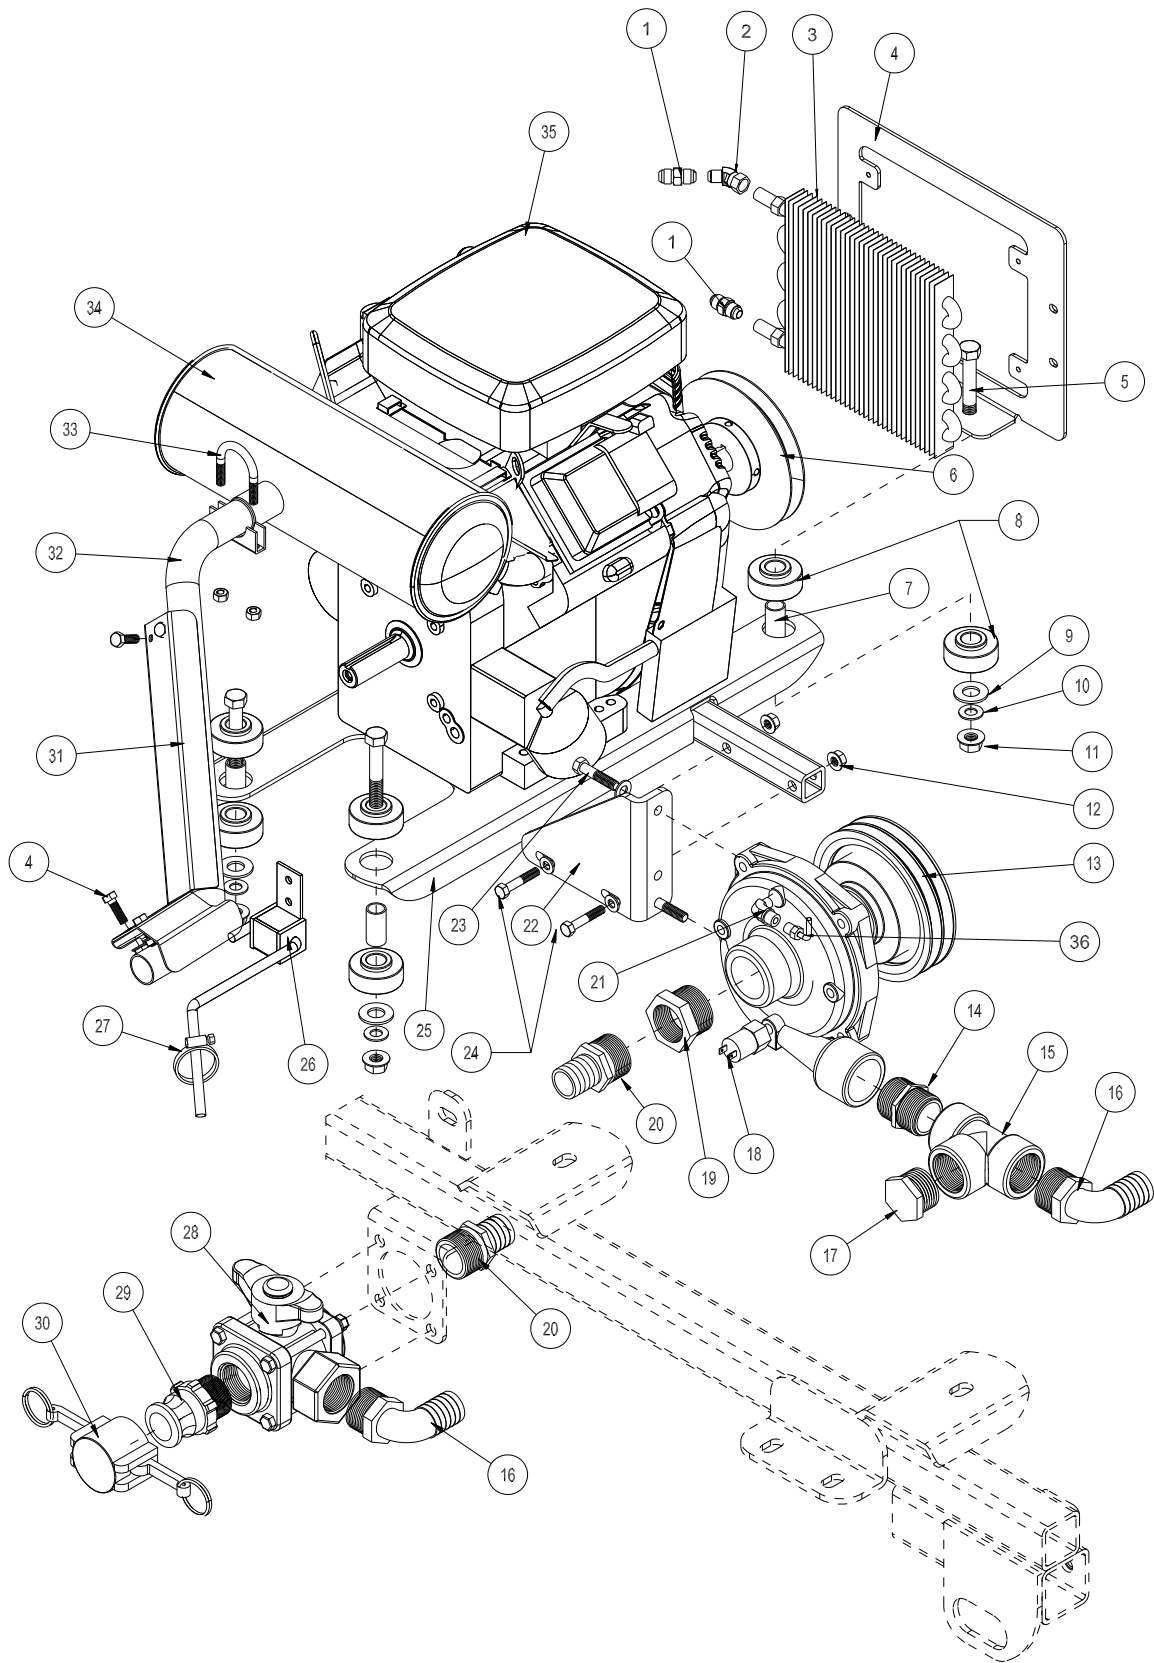


Parts

ENGINE AND SPRAY PUMP PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	18-410	Adapter	2
2	18-214	45° Elbow	1
3	45-382	Oil Cooler w/ mount kit	1
4	10-733	Oil Cooler Mount Bracket	1
5	HB-12-13-300	Hex Bolt, 1/2 - 13 x 3	4
6	10-578	Pulley	1
7	60-168	Spacer	4
8	60-107	Rubber Bushing	8
9	HW-58	Flat Washer, 5/8	4
10	HW-716	Flat Washer, 7/16	4
11	HNFL-12-13	Flange-Loc Nut, 1/2- 13	4
12	HNFL-516-18	Flange-Loc Nut, 5/16 - 18	2
13	16-998	Hypro® Pump	1
14	16-880	Close Nipple, 1 1/4"	1
15	18-390	Pipe Tee, 1 1/4"	1
16	16-156	Elbow, 1 1/4 MPT x 1 1/4 HB	2
17	10-389	Plug, 1 1/4"	1
18	33-480	Pressure Switch	1
19	16-825	Hex Bushing, 1 1/2 x 1 1/4	1
20	16-161	Fitting, 1 1/4 MPT x 1 1/4 HB	2
21	18-044	1/8" Street Elbow	1
22	10-593	Hypro Pump Mount	1
23	HB-38-16-175	Hex Bolt, 3/8 - 16 x 1 3/4	2
	HW-38	Flat Washer, 3/8	2
	HNTL-38-16	Lock Nut, 3/8 - 16	2
24	HB-516-18-175	Hex Bolt, 5/16 -18 x 3/4	2
	HW-516	Flat Washer, 5/16	2
25	10-580	Engine Plate	1
26	10-622	Exhaust Hanger	1
27	18-222	Hose Clamp	1
28	18-372	3-Way Valve	1
29	16-180	Quick Coupler, 1 1/4" Male	1
30	16-935	Quick Coupler Cap	1
31	10-476	Exhaust Shield	1
32	10-585	Exhaust	1
33	18-220	Muffler Clamp, 1 1/4"	1
34	10-575-01	Muffler (comes with engine)	1
	10-575-05	Exhaust Gasket	2
35	10-575	Briggs, 23HP Engine	1
	10-575-02	Air Filter	1
	10-575-03	Air Filter Pre-Cleaner	1
	10-575-04	Engine Oil Filter	1
	13-750	Solenoid	1
36	18-475	Male Elbow	1
NS	15-704	Belt	1

PARK BRAKE DRAWING

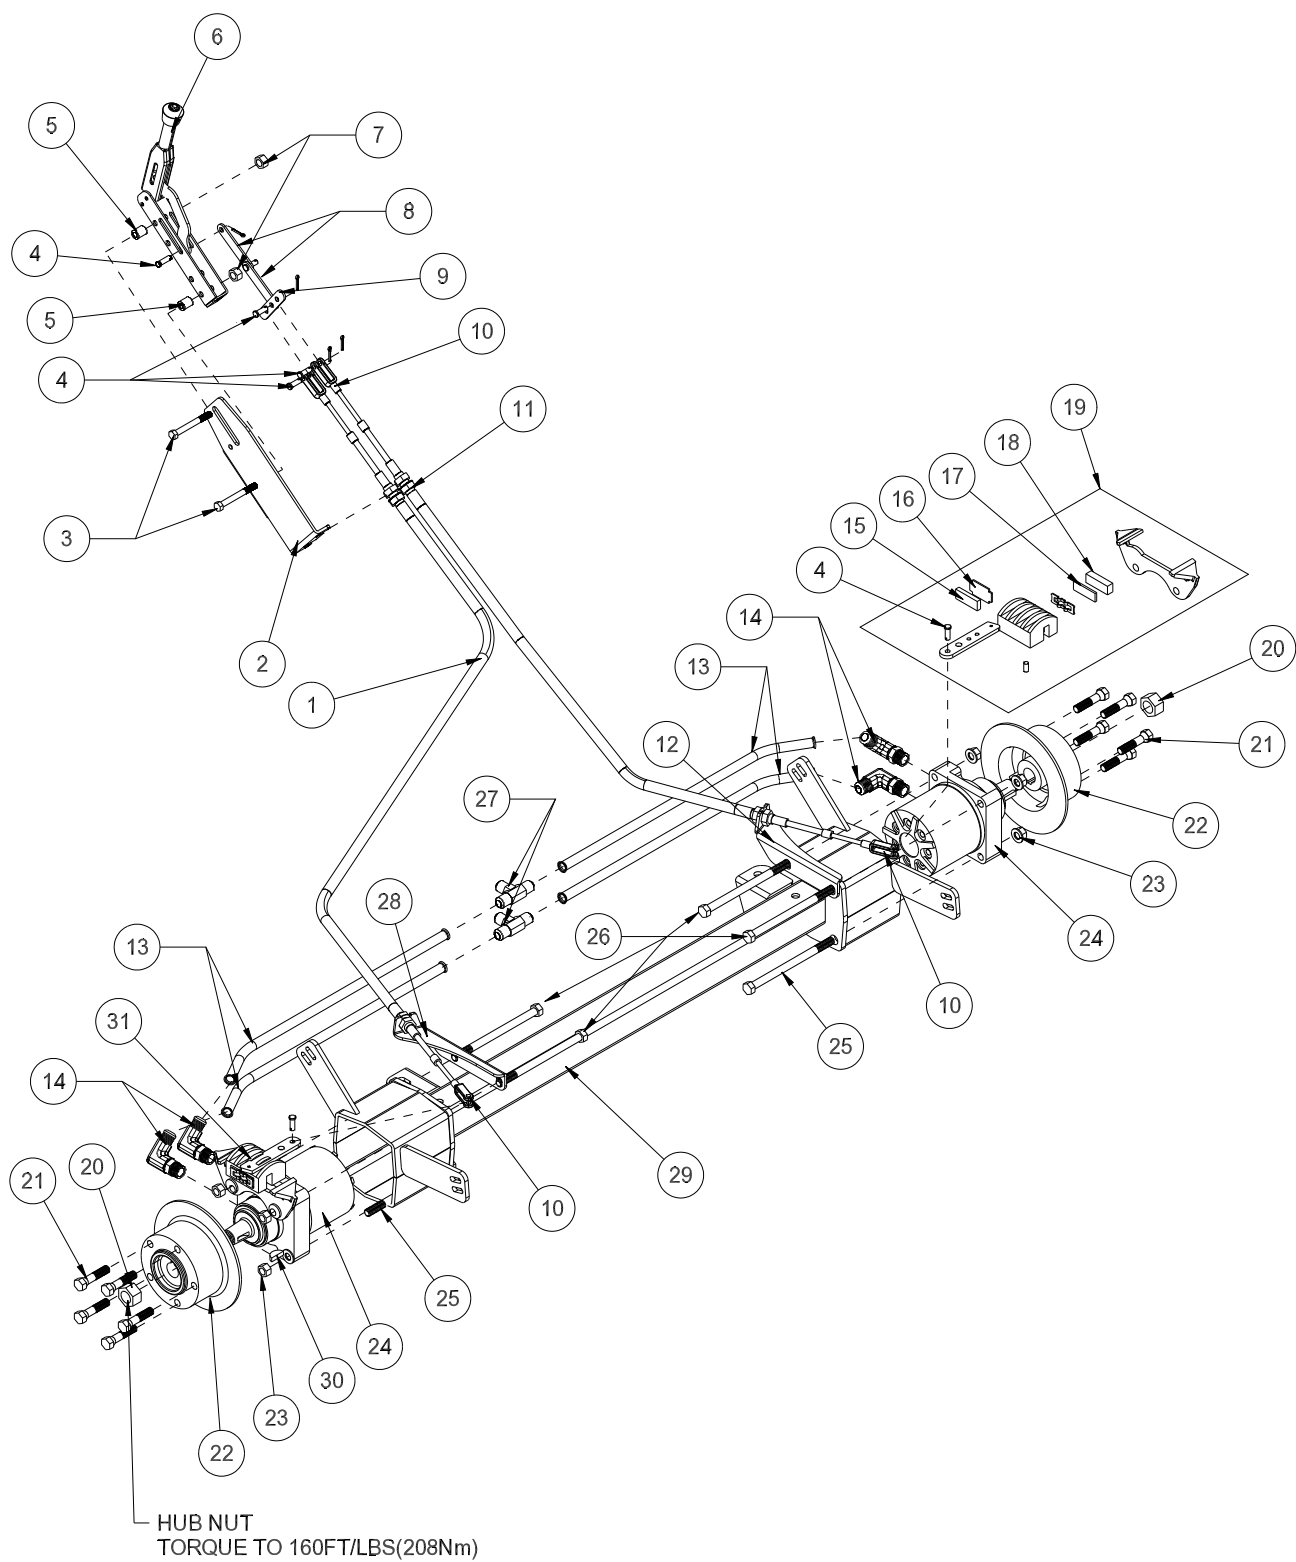


PARK BRAKE PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	10-660	LH Brake Cable	1
2	10-590	Brake Lever Mount	1
3	HB-516-18-200	Hex Bolt, $\frac{5}{16}$ - 18 x 2	2
4	HCP-516-100	Clevis Pin, $\frac{5}{16}$ x 1	6
	HP-18-100	Cotter Pin, $\frac{1}{8}$ x 1	6
5	10-134	Spacer	2
6	60-106	Park Brake Handle	1
7	HNFL-516-18	Flange-Loc Nut, $\frac{5}{16}$ - 16	2
8	45-074	Park Brake Link	2
9	10-591	Brake Equalizer	1
10	11-100	Linkage Yokes, $\frac{5}{16}$	4
	HN-516-24	Hex Nut, $\frac{5}{16}$ - 24	8
11	10-659	RH Brake Cable	1
12	10-589	RH Brake Cable Bracket	1
13	20-656	Hydraulic Tube Assembly	4
14	34-122	Short Elbow	4
15*		Carrier Side Pad	1
16*		Carrier Side Pad Support	1
17*		Cam Side Pad Support	1
18*		Cam Side Pad	1
19	76-241	Right Caliper (CW)	1
20	14-265	Nut, 1 - 20 (included with Ref# 24)	2
21	60-268	Lug Bolt, $\frac{1}{2}$ - 20 x $1\frac{5}{16}$	10
22	76-239	8" Brake Disk (5 hole)	2
23	HNFL-12-13	Flange-Loc Nut, $\frac{1}{2}$ - 13	8
24	10-510	Wheel Motor	2
25	HB-12-13-750	Hex Bolt, $\frac{1}{2}$ - 13 x $7\frac{1}{2}$	4
26	HB-12-13-800	Hex Bolt, $\frac{1}{2}$ - 13 x 8	4
27	34-057	Tee 1"	2
28	10-588	LH Brake Cable Bracket	1
29	10-473	Rear Axle	1
30	HWK-516-100	Woodruff Key, $\frac{5}{16}$ x 1 (included with Ref# 24)	2
31	76-240	Left Caliper (CCW)	1

* 34-101-02 Pad Kit with 2 Pads and Steel Backing Plates 2 Kits

REAR AXLE DRAWING

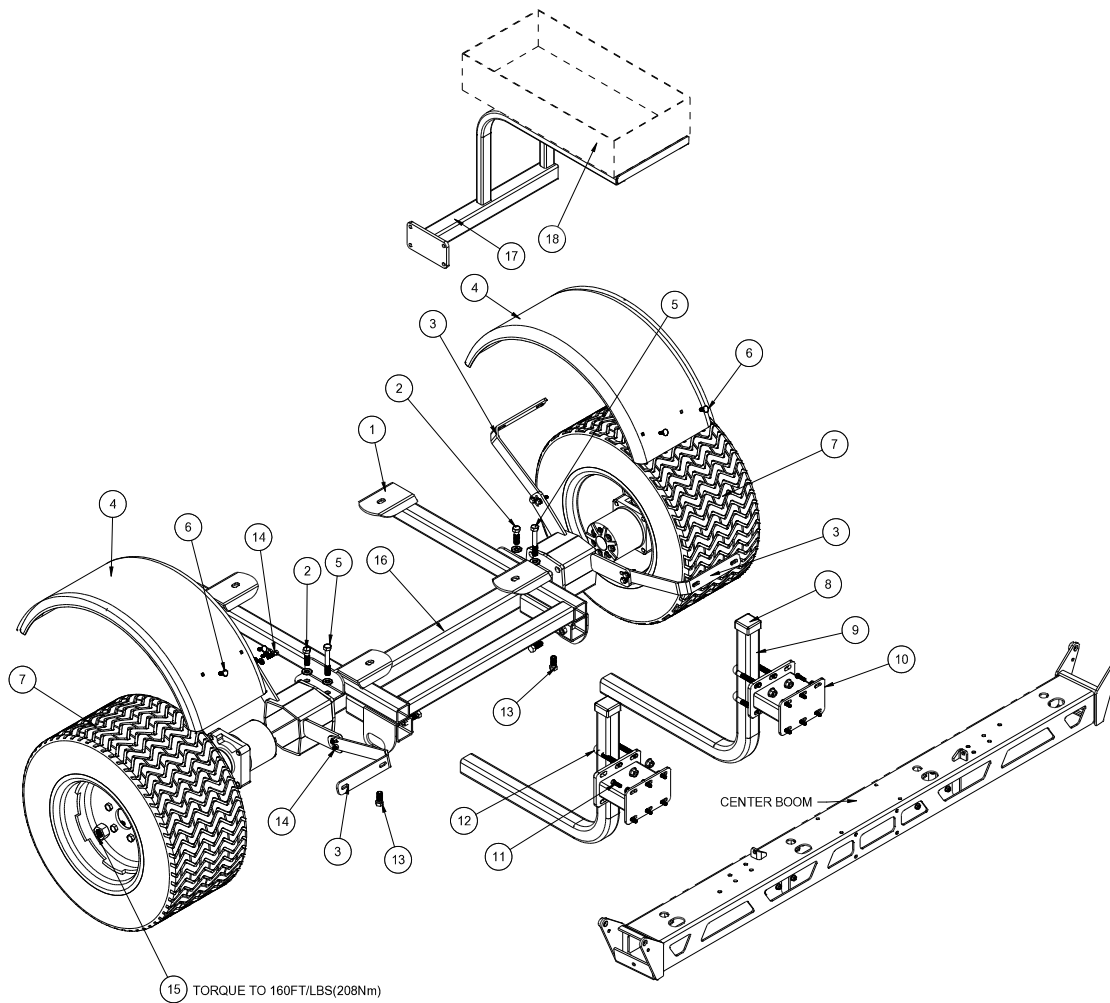


REAR AXLE PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	10-630	Main Frame	1
2	HB-12-13-175	Bolt, $\frac{1}{2}$ - 13 x $1\frac{3}{4}$	2
	HW-12	Washer, $\frac{1}{2}$	2
	HNTL-12-13	Lock Nut, $\frac{1}{2}$ - 13	2
3	10-466	Rear Fender Bracket	4
4	10-168	Rear Fender	2
5	HB-12-13-350	Bolt, $\frac{1}{2}$ - 13 x $3\frac{1}{2}$	2
	HW-12	Washer, $\frac{1}{2}$	2
	HNTL-12-13	Lock Nut, $\frac{1}{2}$ - 13	2
6	HBCL-516-18-100	Carriage Bolt, $\frac{5}{16}$ - 18-1	8
	HNFL-516-18	Flange-Loc Nut, $\frac{5}{16}$ - 18	8
7	78-221	Rear Tire and Wheel	2
	78-221-01	Tire	2
	78-221-02	Wheel	2
8	16-557	Square Cap	2
9	17-615	Boom Carrier	2
10	17-614	Boom Spacer	2
11	HB-516-18-100	Bolt, $\frac{5}{16}$ - 18 x 1	12
	HW-516	Washer, $\frac{5}{16}$	12
	HNFL-516-18	Flange-Loc Nut, $\frac{5}{16}$ - 18	12
12	20-555	U-bolt	4
	HNFL-12-13	Flange-Loc Nut, $\frac{1}{2}$ - 13	8
13	HB-12-13-125	Bolt, $\frac{1}{2}$ - 13 x $1\frac{1}{4}$	4
	HN-12-13	Nut, $\frac{1}{2}$ - 13	4
14	HB-516-18-125	Bolt, $\frac{5}{16}$ - 18 x $1\frac{1}{4}$	8
	HW-516	Washer, $\frac{5}{16}$	16
	HNTL-516-18	Lock Nut, $\frac{5}{16}$ - 18	8
15	14-265	Nut, 1 - 20	2
16	10-473	Rear Axle	1
17	10-463	Basket Mount	1
18	10-465	Basket	1




TANK DRAWING

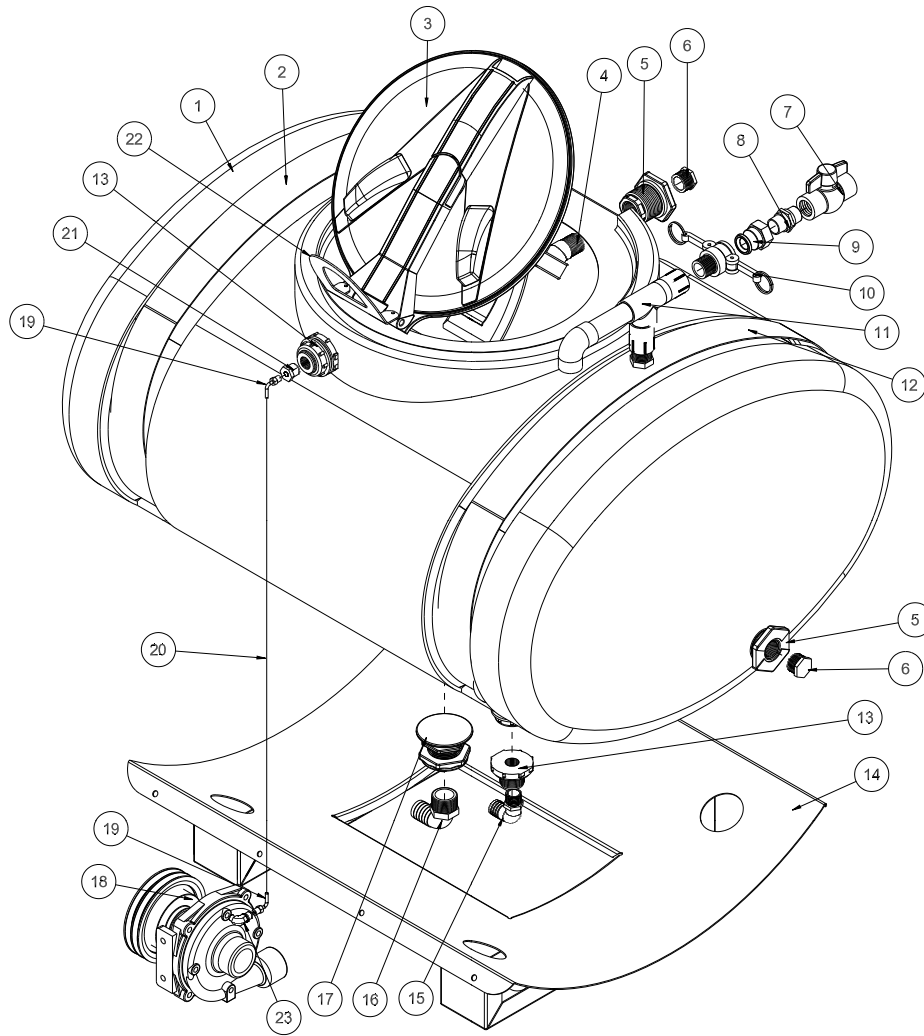

Parts

TURBO-QUAD AGITATOR DRAWING

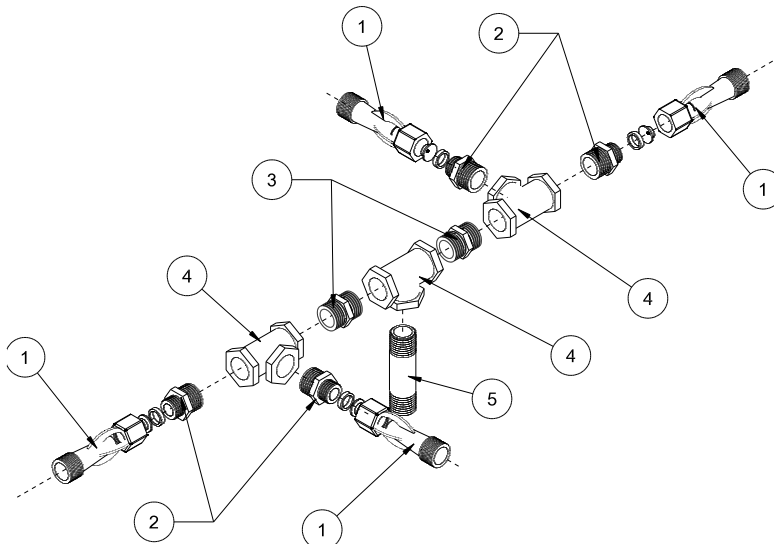

TANK PARTS LIST


REF#	PART#	DESCRIPTION	QUANTITY
1	10-111	110 Gallon Poly Tank	1
	16-169	Strainer Basket 16"	1
2	10-410	Left Tank Strap	1
	HB-38-16-400	Hex Bolt, $\frac{3}{8}$ - 16 x 4	1
	HB-38-16-100	Hex Bolt, $\frac{3}{8}$ - 16 x 1	1
	HNTL-38-16	Lock Nut, $\frac{3}{8}$ - 16	2
3*	14-532	16" Hinged Lid/Well with Gasket	1
4	16-971	45° Elbow (inside tank)	1
5	16-945	Double Head Fitting	2
6	16-162	Hex Plug 1"	2
7	18-448	1" Ball Valve	1
8	16-851	1" Nipple	1
9	16-961	Aluminum Adapter 1" Female Thread	1
10	16-962	Aluminum Coupler 1" Male Thread	1
11	10-254	Air Gap Filler	1
12	22-528	Right Tank Strap	1
	HB-38-16-400	Hex Bolt, $\frac{3}{8}$ - 16 x 4	1
	HB-38-16-100	Hex Bolt, $\frac{3}{8}$ - 16 x 1	1
	HNTL-38-16	Lock Nut, $\frac{3}{8}$ - 16	2
13*	16-150	Double Threaded Fitting, $\frac{3}{4}$	2
14	10-112	Tank Carrier	1
15	16-155	Elbow, $\frac{3}{4}$ MPT x 1 HB	1
16	16-156	Elbow $1\frac{1}{4}$ MPT x $1\frac{1}{4}$ HB	1
17*	16-194	Anti-Vortex Fitting $1\frac{1}{4}$	1
18	16-998	Hypro® Pump	1
19	18-475	Male Elbow	2
20	9038-30	$\frac{1}{4}$ " Tubing	1
	18-116	Hose Clamp	2
21	10-390	Reducer	1
22	10-639	Lid Stop	1
	HRS-36-100	Rivet, $\frac{3}{16}$ x 1	2
	HW-316	Flat Washer, $\frac{3}{16}$	2
23	18-044	$\frac{1}{8}$ " Street Elbow	1

* Comes with 110 Gallon Poly Tank (only one 16-150 Double Threaded Fitting in bottom of tank)

TURBO-QUAD AGITATOR PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	16-036	Agitator Jet (Includes one each $\frac{1}{8}$ ", $\frac{5}{53}$ ", and $\frac{3}{16}$ " orifices)	4
2	16-173	Reducer, $\frac{3}{4}$ x $\frac{1}{2}$	4
3	16-158	Close Nipple, $\frac{3}{4}$ x $\frac{3}{4}$	2
4	16-157	Female Pipe Thread Tee, $\frac{3}{4}$ x $\frac{3}{4}$ x $\frac{3}{4}$	3
5	16-172	Nylon Nipple, $\frac{3}{4}$ NPT x $3\frac{1}{2}$	1

15-301 ORBITROL DRAWING

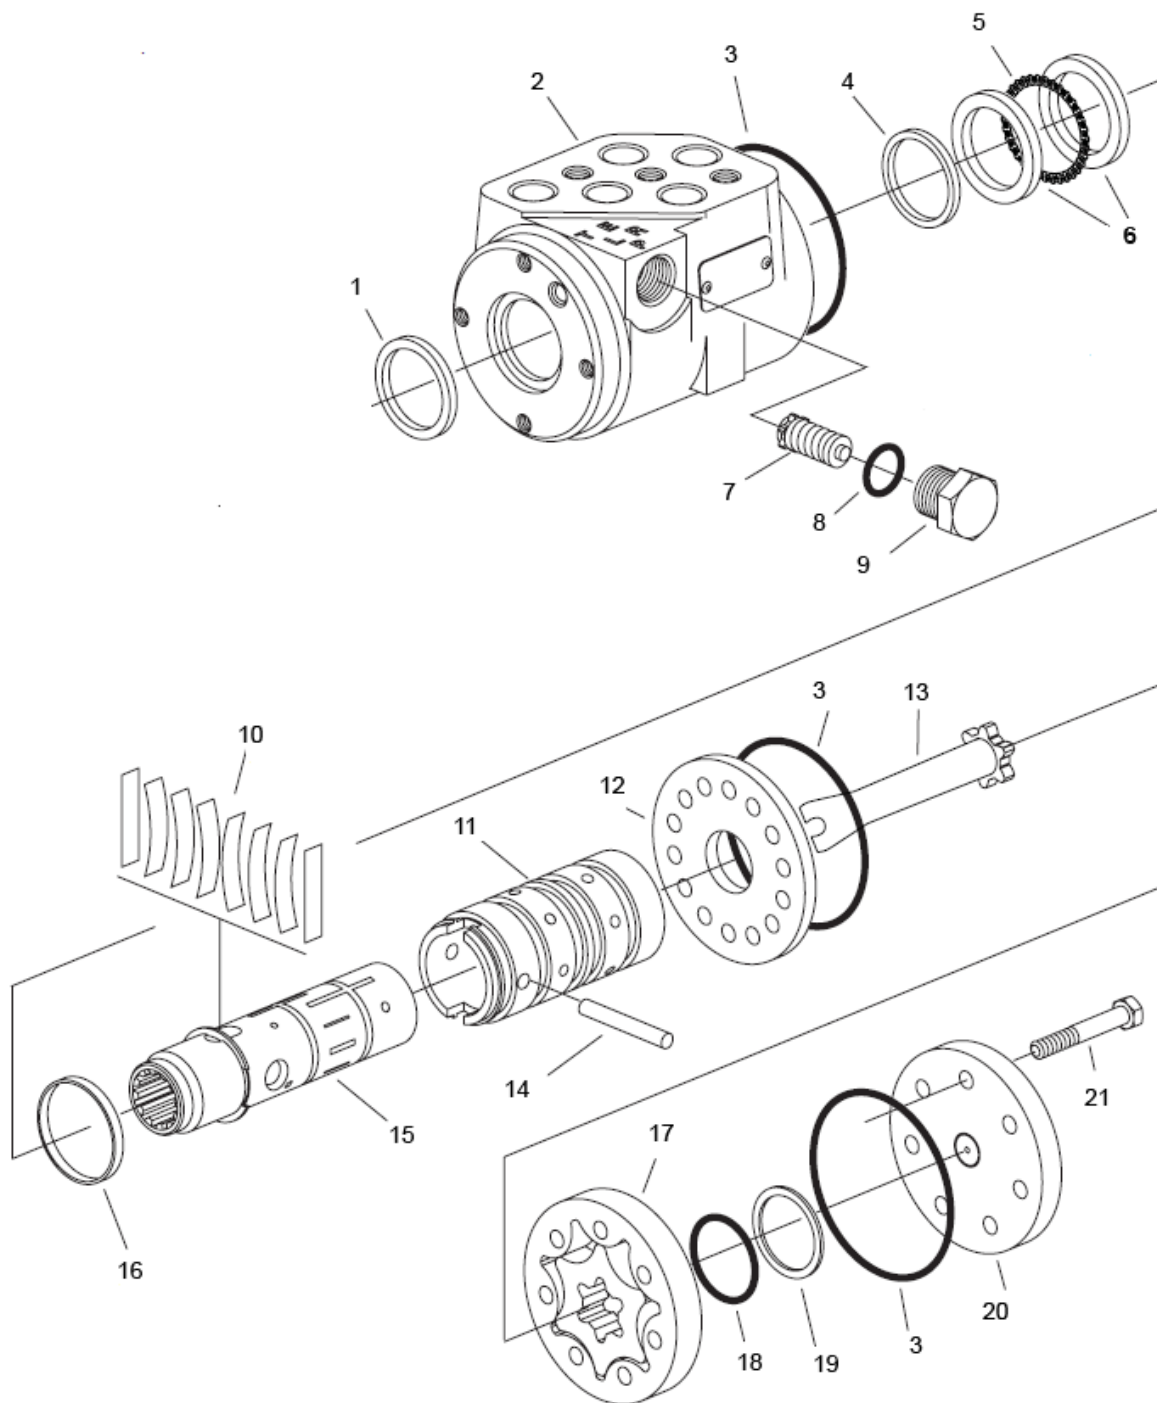

Parts


10-576 ORBITROL PARTS LIST

REF #	PART #	DESCRIPTION	QUANTITY
1	10-576-04	Dust Seal	1
2		Housing	1
3**		O-Ring Seal	3
4**		Quad Seal	1
5	10-576-03	Thrust Bearing	1
6	10-576-02	Bearing Race	2
7		Manual Steering Relief Valve	1
8**		O-ring	1
9		Plug	1
10‡		Standard Torque Centering Springs	1
11		Sleeve	1
12	15-301-06	Wear Plate	1
13	10-576-01	Drive	1
14	15-301-08	Drive Pin	1
15		Spool	1
16‡		Spring Retaining Ring	1
17	10-576-05	Gerotor	1
18**		O-Ring	1
19**		Seal Ring	1
20	15-301-03	End Cap	1
21	10-576-06	Cap Screw	7
**	15-301-01	Seal Kit	1
‡	15-301-15	Centering Spring Kit	1

15-301 ORBITROL SPECIFICATIONS

Inlet Relief Valve Setting	1020 psi (70 bar)
Nominal Flow	3 gpm (11 lpm)
Displacement	4.50 cu. in/ R (73.8 cu cm/R)
Check Valve for Manual Steering	Yes
Inlet Pressure Rating	2030 psi (140 bar)
Return Pressure Rating	145 psi (10 bar) Maximum
Fluid	SAE 10W-40 API Service SJ or higher Motor Oil
Ports	9/16 - 18 SAE O-Ring 4 Ports
Ports	Side Ported, 4 x Dash 06 Seal Tight Connector (STC)

45-373 DDC20 PISTON PUMP DRAWING

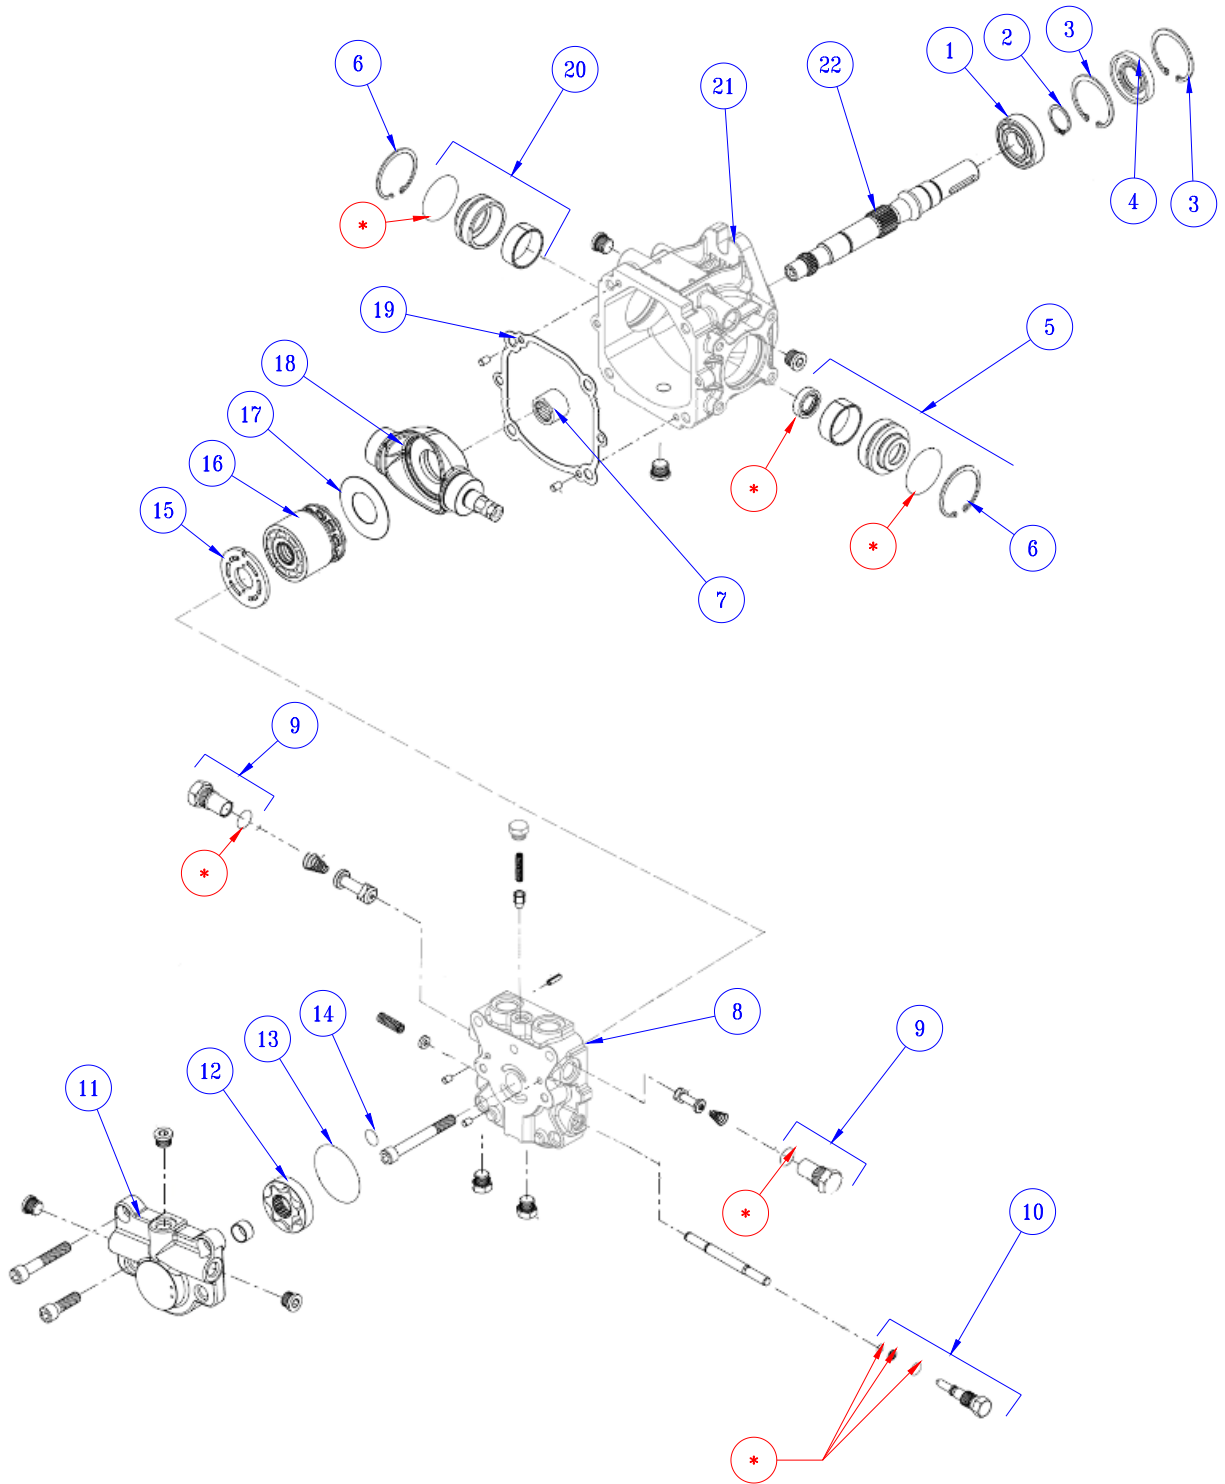


Parts

45-373 DDC PISTON PUMP PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	45-373-02	Ball Bearing	1
2	45-373-03	Retaining Ring	1
3	45-373-04	Retaining Ring	2
4*		Lip Seal	1
5	45-373-05	Journal Bearing Carrier Assembly	1
6	45-373-06	Retaining Ring	1
7	45-373-07	Needle Bearing	1
8	45-373-08	End Cap	1
9	45-373-09	Plug Assembly	2
10	45-373-10	By-Pass Valve Assembly	1
11	45-373-11	Charge Pump Housing	1
12	45-373-12	Gerotor Assembly	1
13*		O-ring	1
14*		O-ring	1
15	45-373-13	Valve Plate CCW	1
16	45-373-14	Cylinder Block kit	1
17	45-373-15	Thrust Plate	1
18	45-373-16	Swash Plate, Axial Offset	1
19*		Gasket	1
20	45-373-17	Journal Bearing Carrier Assembly	1
*	45-373-01	Overhaul Kit	

16-998 HYPRO PUMP DRAWING

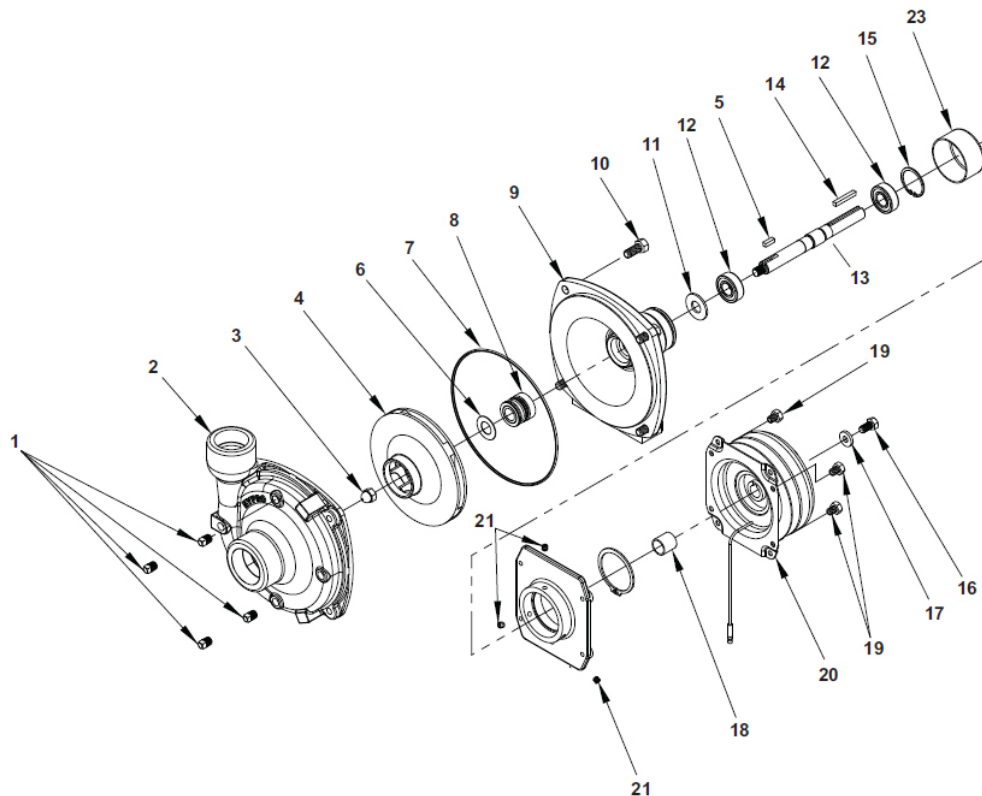


IMPORTANT

When servicing the spray pump or filter, all control valves must be shut off if there is liquid in the tank.

DESCRIPTION	QUANTITY	REF#	PART#
1	16-998-01	Drain Plug	4
2	16-998-02	Pump Casing	1
3		Impeller Nut	1
4	16-966-16	Impeller	1
5	16-966-11	Key	1
6	16-998-10	Gasket	1
7*	16-998-04	O-Ring	1
8*	16-967	Mechanical Seal (Silicon Carbide)	1
9	16-998-06	Mounting Flange	1
10	16-998-07	Bolt	
11	16-966-06	Slinger Ring	1
12	16-966-10	Ball Bearing	2
13	16-966-12	Pump Shaft	1
14	16-822-20	Key	1
15	16-966-13	Bearing Retainer	1
16	16-994-05	Bolt	1
17	16-994-06	Retaining Washer	1
18	16-994-03	Spacer	1
19		Bolt	4
20	16-994-01	Clutch	1
21	16-994-04	Set Screw	3
	16-998-12	Pump Only	
*	16-967	Silicone - Carbon Seal Kit	



10-510 WHEEL MOTOR DRAWING

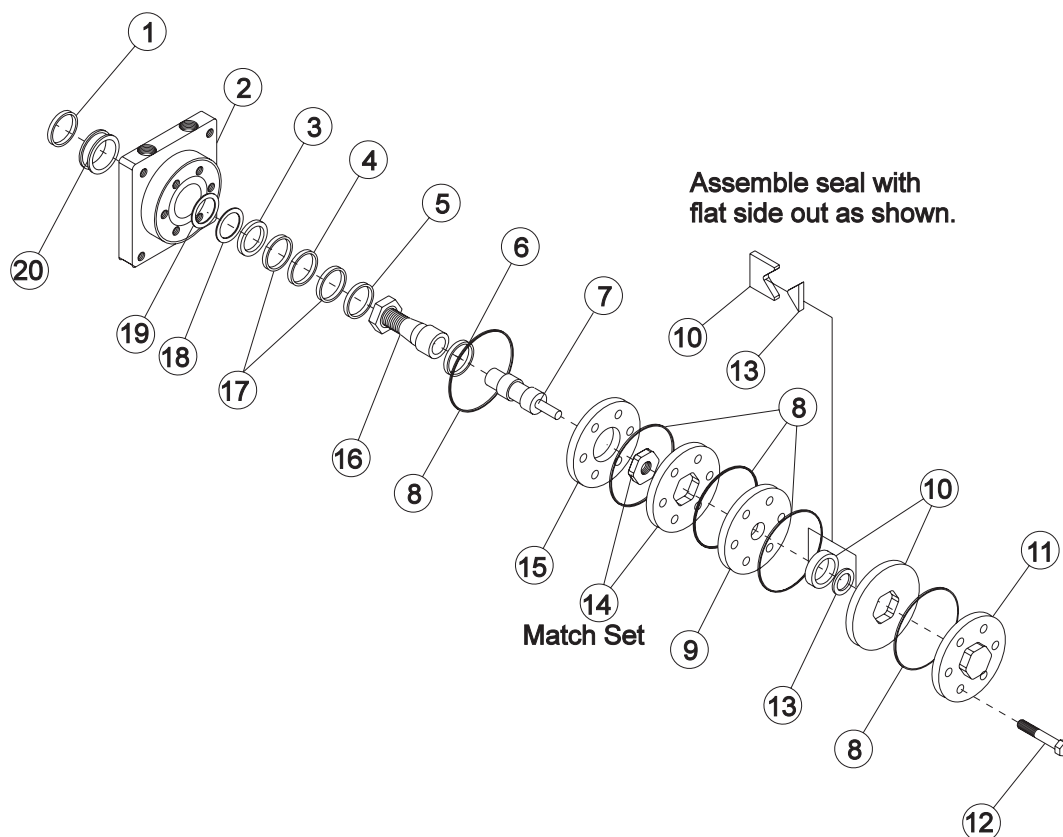


REF#	PART#	DESCRIPTION	QUANTITY
1*	13-032-39	Water & Dirt Seal	1
2	13-615-05	Service Housing Assembly (Includes Ref 4, 5, 17(2 req'd) and 20)	1
3*		Inner Seal	1
4	13-032-27	Thrust Bearing	1
5	13-032-28	Inner Bearing	1
6	13-032-29	Thrust Bearing	1
7	10-510-01	Drive Link	1
8*		Ring Seal	5
9	13-032-31	Manifold	1
10	13-032-32	Commutator Assembly (matched set)	1
11	13-032-33	End Cover	1
12	10-510-02	Special Bolt	7
13*		Commutator Seal (matches with #10)	1
14	10-510-03	Rotor Set (matched set)	1
15	10-510-04	Wear Plate	1
16	13-615-04	Coupling Shaft	1
	HWK-516-100	Woodruff Key $\frac{5}{16} \times 1$	1
	14-265	Nut 1 - 20	1
17	13-032-37	Thrust Washer	2
18*		Backup Washer	1
19*		Backup Ring	1
20	13-032-38	Outer Bearing	1
*	14-080	Seal Kit	1

1008 PLUMBING DRAWING (TEEJET® RADION 8140)

15-817 O-ring for 50 Series Clamp

15-818 O-ring for 75 Series Clamp

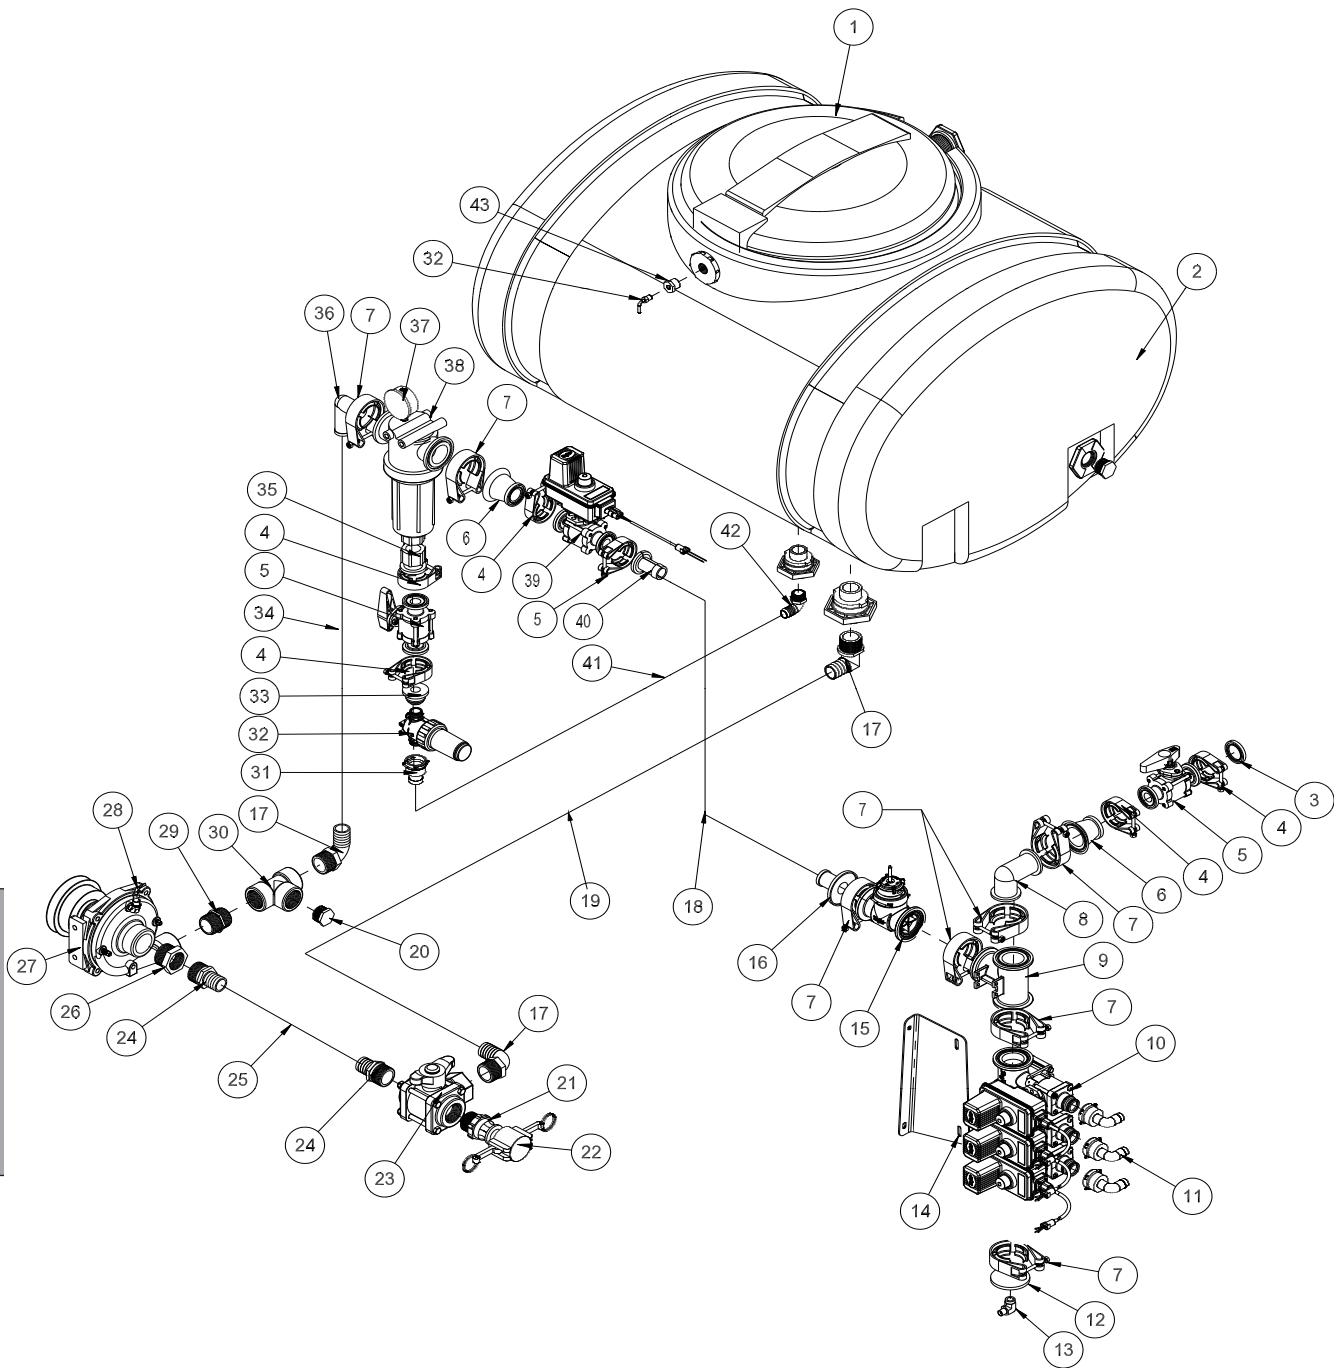


Accessories

1008 PLUMBING PARTS LIST (TEEJET® RADION 8140)

REF#	PART#	DESCRIPTION	QUANTITY
1	14-532	16" Hinged Lid/Well with Gasket	1
	16-953-01	Gasket	1
2	10-111	110 Gallon Poly Tank (includes † items)	1
	16-169	Strainer Basket 16"	1
3	15-778	Blank Gauge Port Flange	1
4	15-740	50 Series Clamp	8
5	15-738	Flanged Ball Valve	2
6	15-748	Reducer Coupling	2
7	15-741	75 Series Clamp	6
8	15-734	75 Series Elbow Coupling	1
9	10-574	Tee	1
10	15-743	Manifold Valve	1
11	15-553	3/4" -90° Hose Barb	3
	15-553-01	Clip	3
	15-553-02	O-Ring	3
	9032-118	Right Black Hose 3/4" "	1
	9032-72	Center Black Hose 3/4" "	1
	9032-108	Left Black Hose 3/4" "	1
	18-040	Hose Clamp, HS-12	6
12	15-882	#75 Gauge Port	1
13	18-007	Street Elbow	1
14	10-480	Valve Mount	1
15	20-684	#802 Flow Meter	1
16	15-744	#75 1 1/4" Hose Barb	1
17	16-156	Elbow 1 1/4" MPT x 1 1/4" HB	1
18	8897-23	Discharge Hose 1 1/4" "	1
	18-116	Hose Clamp, HS-24	2
19	8897-38	Discharge Hose 1 1/4" "	1
	18-040	Hose Clamp, HS-12	2
20	10-389	Plug 1 1/4"	1
21	16-180	Quick Coupler 1 1/4" Male	1
22	16-935	Quick Coupler 1 1/4" Cap	1
23	18-372	3-Way Valve	1
	18-372-01	T-handle	1
24	16-161	Fitting 1 1/4" MPT x 1 1/4" HB	2
25	8897-52	Discharge Hose 1 1/4" "	1
	18-040	Hose Clamp, HS-12	2
26	16-825	Stainless Steel Reducer Bushing 1 1/2" x 1 1/4"	1
27	16-998	Hypro® Pump	1
28	18-475	Male Elbow	2
	9038-30	1/4" Tubing	1
	18-116	Hose Clamp, HS-24	2
29	16-880	Close Nipple	1
30	18-390	Pipe Tee 1 1/4"	1
31	15-869	1" Hose Barb Outlet	1
	15-553-01	Clip	1
	15-553-02	O-ring	1
32	14-801	Agitator Line Strainer, 50 Mesh	1
	14-802	Replacement 50 Mesh Screen	
33	15-825	#50 Male Quick Coupler	1
34	8897-50	Discharge Hose 1 1/4" "	1
	18-116	Hose Clamp, HS-24	2
35	15-735	50 Series 1" FPT	1
36	15-739	75 Series 90° x 1 1/2" Hose Barb	2
37	16-281	Liquid Filled Gauge	1
38	15-737	Flanged Strainer	1
	16-968-05	Screen (80 mesh)	1
39	20-785	Regulator Valve	1
40	15-870	#50 1 1/4" Hose Barb	1
41	8896-40	Discharge Hose 1"	1
	18-222	Hose Clamp, 1 3/16" to 1 1/2"	2
42	16-155	Elbow, 3/4" MPT x 1 Hose Barb	1
43	10-390	Reducer	1

1008 CONTROL SYSTEM (TEEJET® RADION 8140)

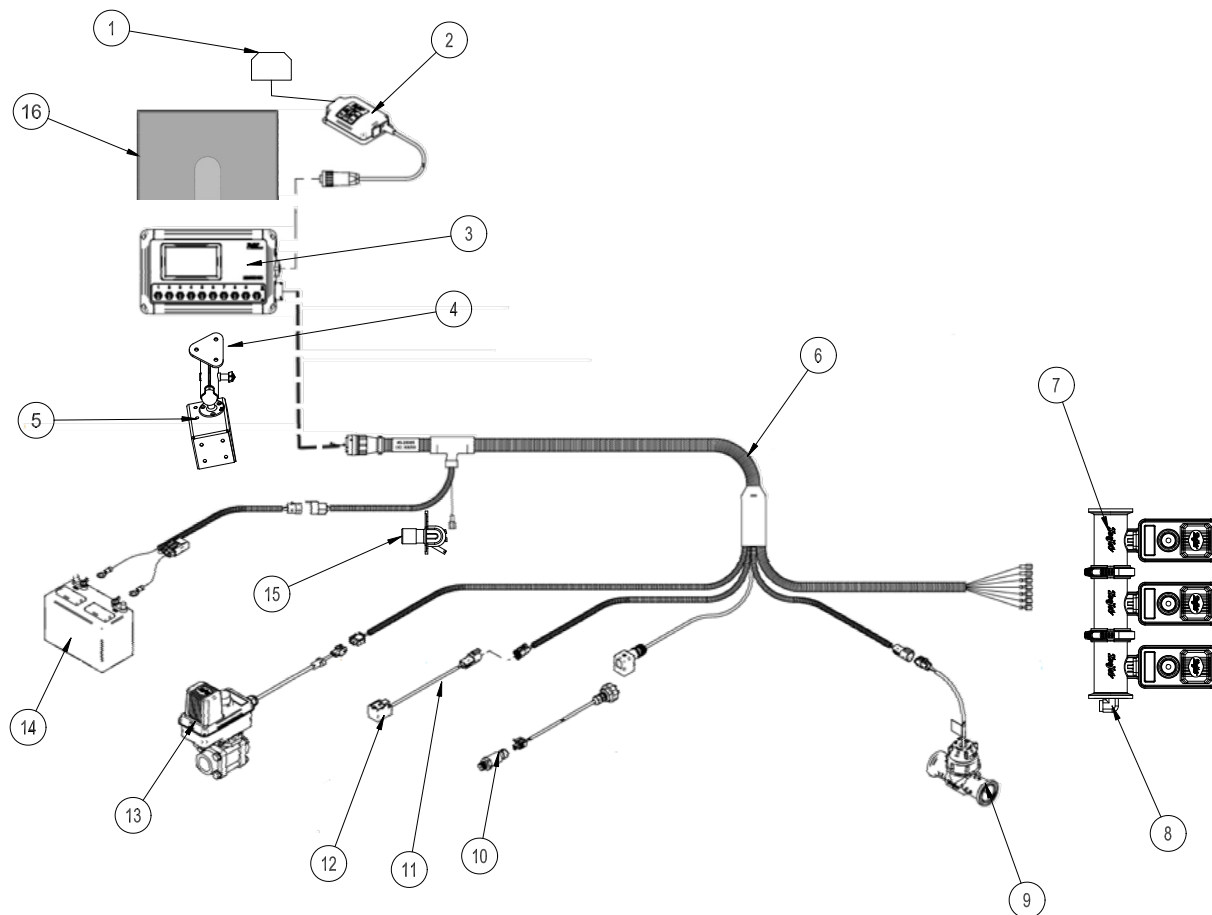


REF#	PART#	DESCRIPTION	QUANTITY
1		Antenna	1
2	20-687-02	GPS Speed Sensor	1
3	20-697-01	Radion 8140 Console	1
4		Ram Mount	1
5	10-721	Short Ram Mount	1
6		Wire Harness	1
7	15-743	Manifold Ball Valve	1
8	18-007	Elbow	1
9	20-684	Flow Meter	1
10	20-670-04	Pressure Transducer	1
11*	10-498	Wheel Speed Cable	1
12*	10-496	Proximity Speed Sensor	1
13	20-785	Regulator Valve	1
14	33-509	Master Boom Floor Switch	1
15	33-216	Battery	1
16	20-781	Radion Plastic Cover	1

* For machines with wheel sensor


Use Dielectric Grease On All Electrical Connections

15-743 MANIFOLD VALVE

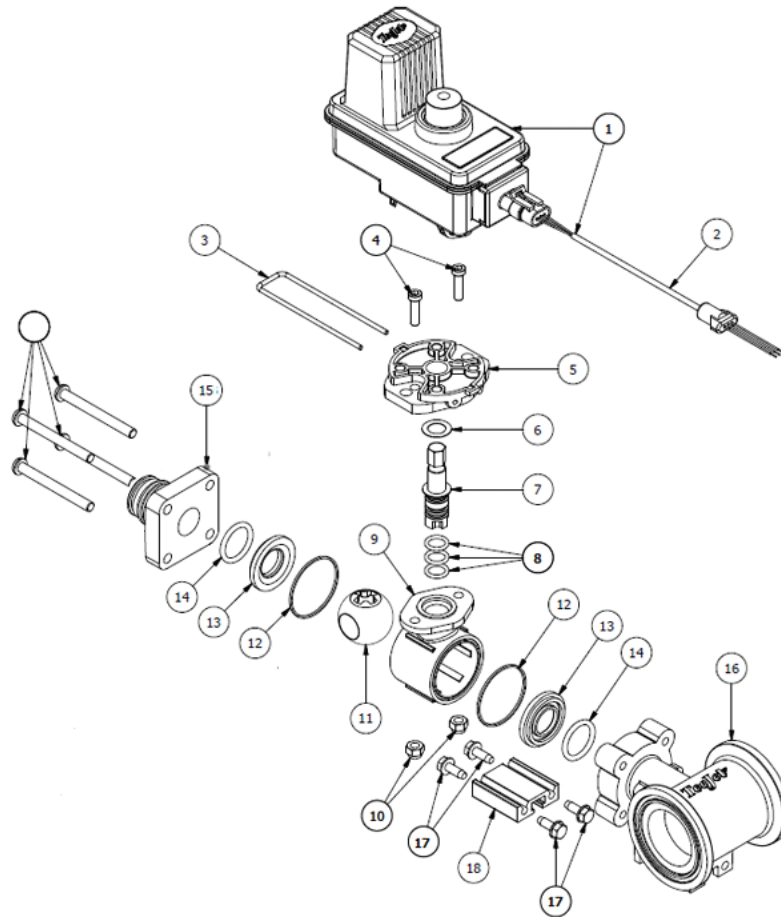

REF#	PART#	DESCRIPTION	QUANTITY
1	15-552-23	Motor	
2	15-878	Metri-Pack Cable (comes with motor)	1
3	15-552-24	Retaining Clip	1
4	15-552-25	Socket Head Cap Screw, Stainless Steel	2
5	15-552-26	Motor Adapter, Polypropylene	1
6*	15-517-11	Thrust Washer, Teflon	1
7	15-552-27	Stem, Stainless Steel	1
8*	15-552-05	O-ring, Viton	3
9	15-517-16	Body, Nylon	1
10		Lock Nut, Stainless Steel	2
11	15-743-04	Ball, Polypropylene	1
12*	15-552-13	Gasket, Viton	2
13*	15-517-19	Seal, Teflon	2
14*	15-517-20	O-ring, Viton	2
15	15-743-01	End Cap	1
16	15-743-02	#75 Tee Body	1
17	15-743-06	Screw, SS	4
18	15-743-03	Mounting Rail Aluminum	1
*	15-552-10	Spare Parts Kit (includes all * items)	
	15-743-05	Single Valve (shown)	

20-785 REGULATOR VALVE

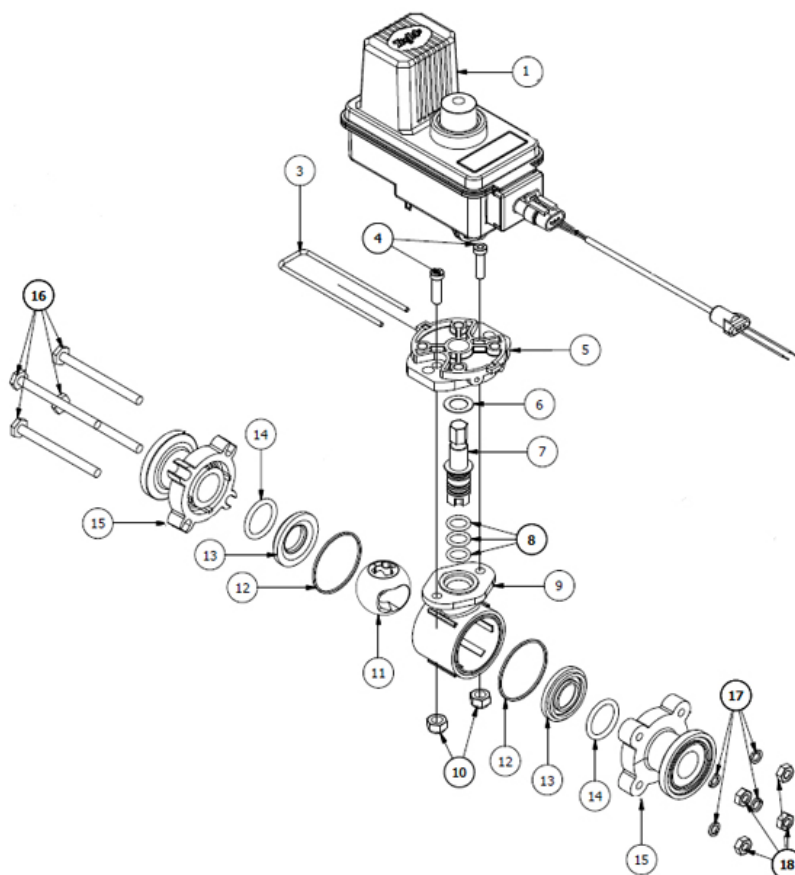


REF#	PART#	DESCRIPTION	QUANTITY
1	20-785-01	Motor, 6RPM	
3	15-552-24	Retaining Clip	1
4	15-552-25	Socket Head Cap Screw, Stainless Steel	2
5	15-552-26	Motor Adapter, Polypropylene	1
6	15-517-11	Thrust Washer, Teflon	1
7	15-552-27	Stem, Stainless Steel	1
8*	15-552-05	O-ring, Viton	3
9	15-517-16	Body, Nylon	1
10		Lock Nut, Stainless Steel	2
11		Ball, Polypropylene	1
12	15-552-13	Gasket, Viton	2
13	15-517-19	Seal, Teflon	2
14	15-517-20	O-ring, Viton	2
15	15-743-01	End Cap	1
16		SS Bolt, $\frac{1}{4}$ - 20 x 3	4
17		SS Lock Washer, $\frac{1}{4}$	4
18		SS Nut, $\frac{1}{4}$ - 20	4

20-685

Complete Regulator Valve


14-801 AGITATION STRAINER

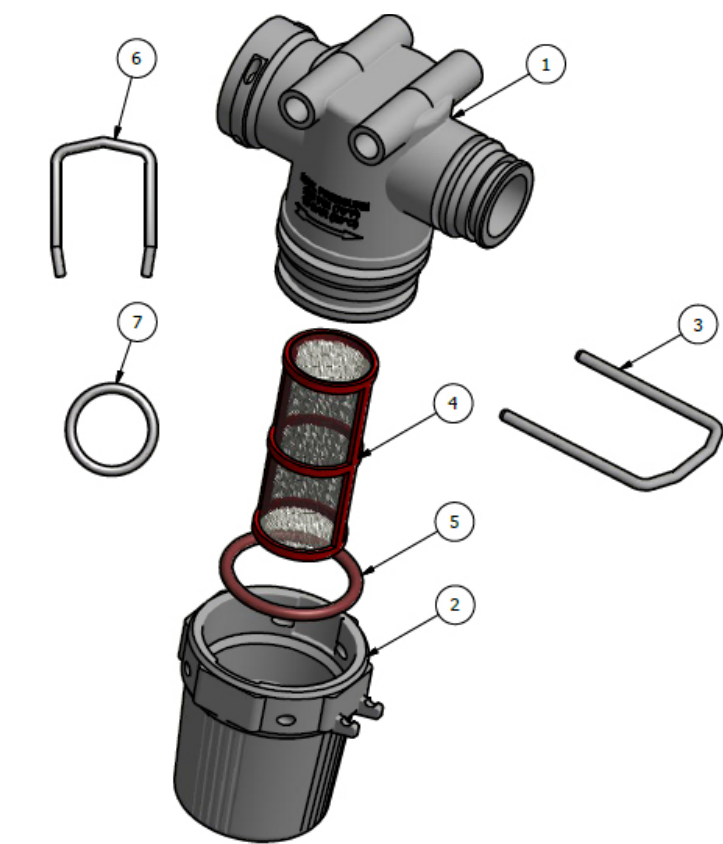

REF#	PART#	DESCRIPTION	QUANTITY
1		QC Strainer Head	1
2		Bowl	1
3		Strainer QC Retaining Clip	1
4	14-802	50 Mesh Strainer	1
5		Viton Oring	1
6	15-553-01	Retaining Clip	1
7	15-553-02	Viton Oring	1


Accessories

15-737 STRAINER DRAWING

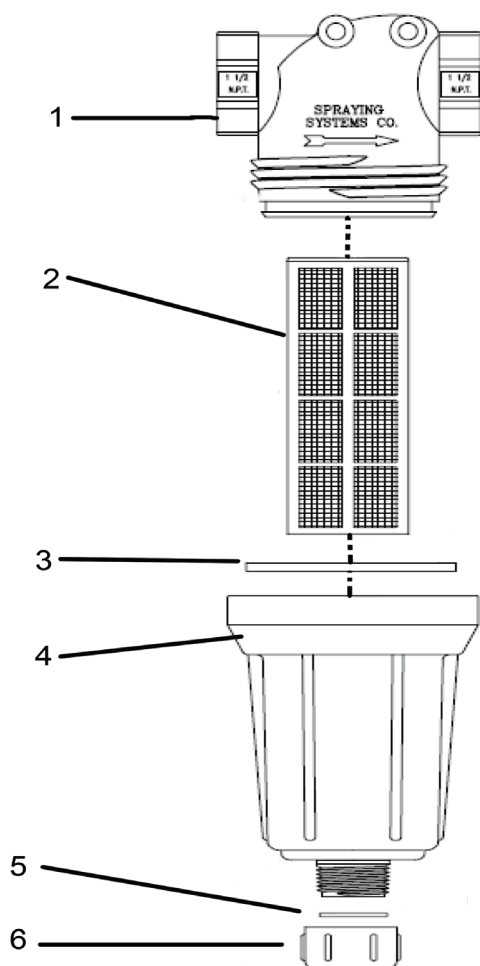

REF#	PART#	DESCRIPTION	QUANTITY
1	15-737-01	Strainer Head 75 Series	1
2	16-968-03	50 Mesh Strainer	1
3	14-521-02	EPDM Gasket	1
4	14-521-03	Bowl 1" NPT	1
5	14-521-04	EPDM Rubber gasket	1
6	14-521-05	Cap	1


17-835 BOOM DRAWING

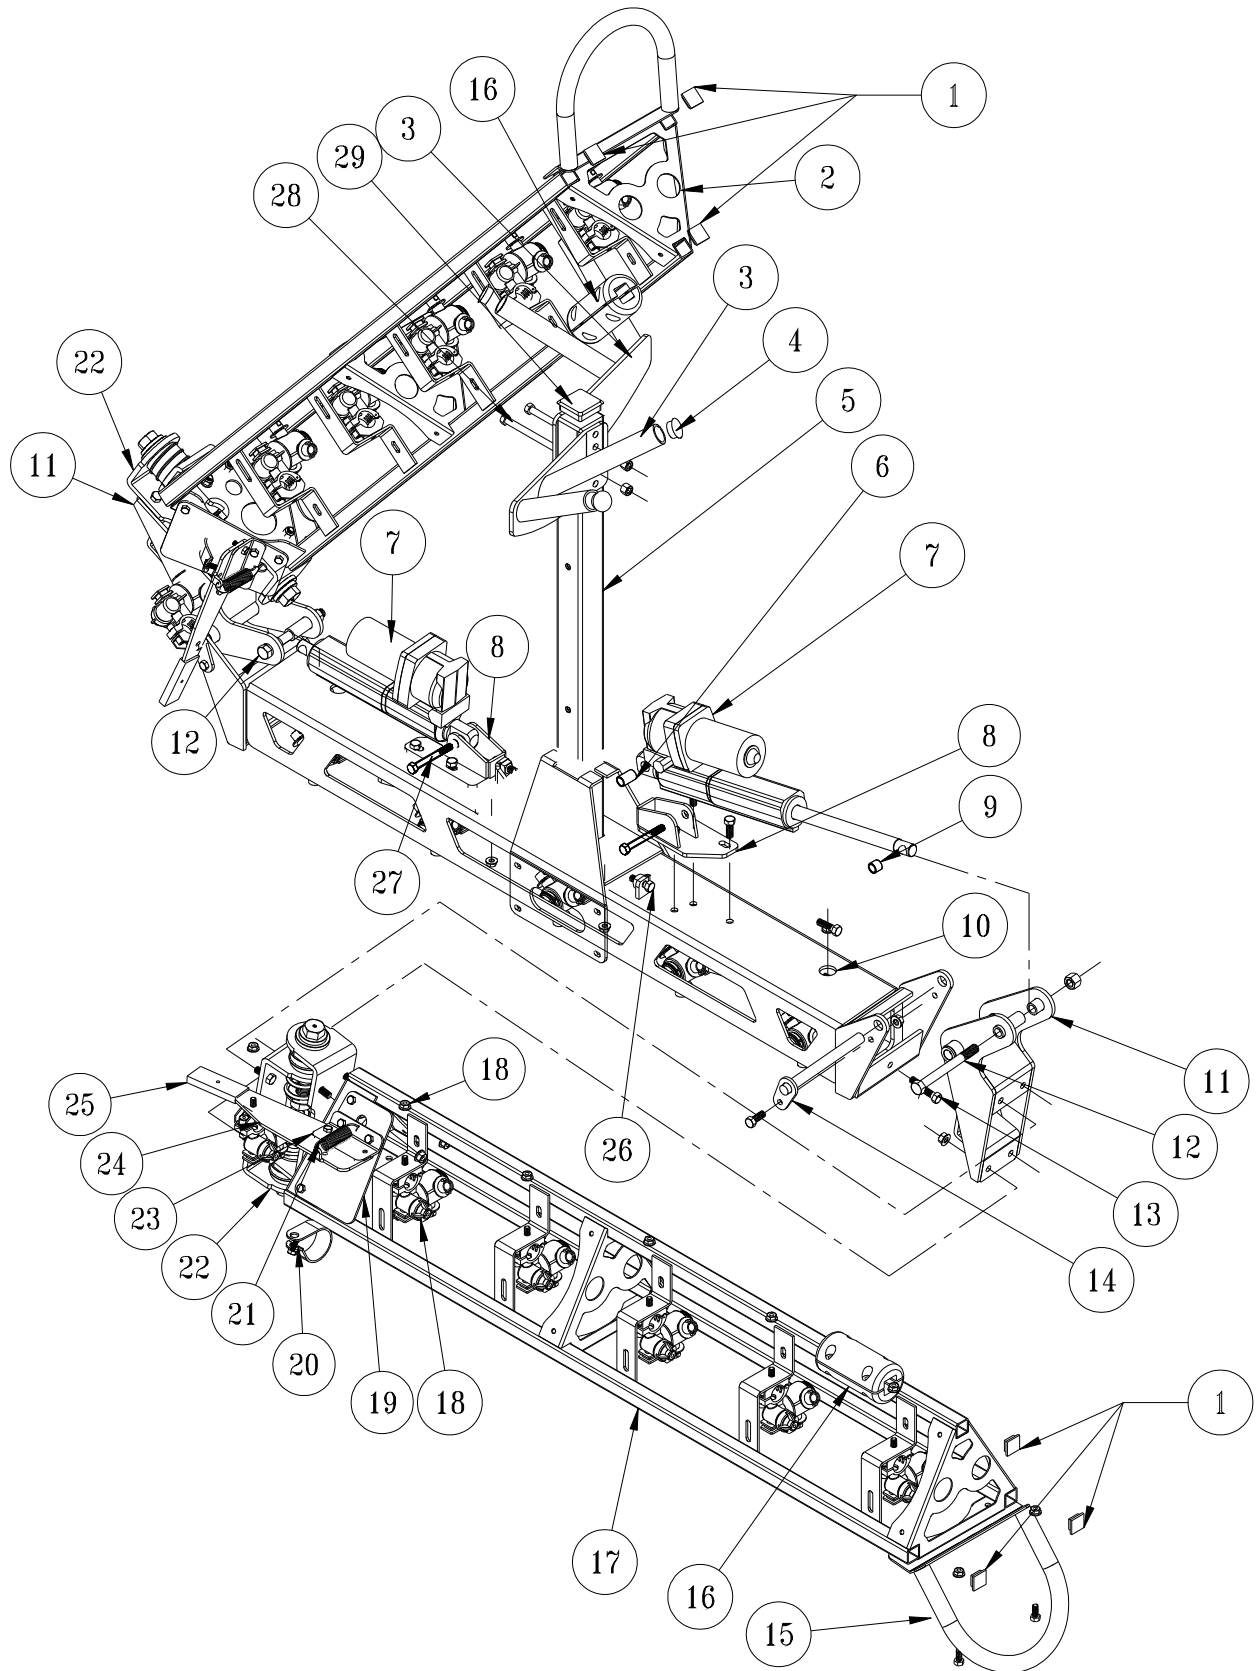

17-835 BOOM PARTS LIST


REF#	PART#	DESCRIPTION	QUANTITY
1	30-258	1" 10-14ga Ribbed Plug	10
2	17-557	Left Boom Arm	1
3	17-617	V-Boom Nest	2
4	17-619	Tube Cap	4
5	17-578	Boom Nest post	1
	HBFL-516-18-075	Flange Bolt, $\frac{5}{16}$ - 18 x $\frac{3}{4}$	8
	HNFL-516-18	Flange Lock Nut, $\frac{5}{16}$ - 18	8
6	18-036	1" Bushing (part of 30-214)	2
7	30-214	KYB Electric /Hydraulic Actuator	2
8	30-184	Ram Mount	2
	HB-38-16-100	Bolt, $\frac{3}{8}$ - 16 x 1	6
	HW-516	Washer, $\frac{5}{16}$	6
	HNFL-38-16	Flange Lock Nut, $\frac{3}{8}$ -16	6
9	18-234	$\frac{1}{2}$ " Bushing (part of 30-214)	2
10	17-556	Boom Center	1
11	30-185	Arm Pivot Hinge	2
	76-128	Bushing	4
12	HB-12-13-500	Bolt, $\frac{1}{2}$ - 13 x 5	2
	HNTL-12-13	Lock Nut, $\frac{1}{2}$ - 13	2
13	HB-38-16-250	Bolt, $\frac{3}{8}$ - 16 x $2\frac{1}{2}$	2
	HNFL-38-16	Flange Lock Nut, $\frac{3}{8}$ -16	4
14	17-596	Hinge Pin	2
	HB-516-18-100	Bolt, $\frac{5}{16}$ - 18 x 1	2
15	17-541	Boom End Guard	2
	HBFL-516-18-075	Bolt, $\frac{5}{16}$ - 18 x $\frac{3}{4}$	4
	HNFL-516-18	Flange Lock Nut, $\frac{5}{16}$ - 18	4
16	17-573	Guide Block Set	2
	HB-14-20-125	Bolt $\frac{1}{4}$ -20 x $1\frac{1}{4}$	8
	HNTL-14-20	Lock Nut $\frac{1}{4}$ - 20	8
17	17-558	Right Boom Arm	1
18	33-506	Body (see nozzle drawing)	17
	HB-516-18-075	Bolt, $\frac{5}{16}$ -18 x $\frac{3}{4}$	17
	HNFL-516-18	Flange Lock Nut, $\frac{5}{16}$ -18	17
19	17-559	Break- Away Mount	2
20	HLC-100	Loom Clamp	2
21	11-050	Spring	2
22	17-632	Boom Hinge Complete	2
	HB-38-16-100	Bolt, $\frac{3}{8}$ - 16 x 1	16
	HNFL-38-16	Lock Nut, $\frac{3}{8}$ - 16	16
23	17-560	Hinge Mount	2
24	17-561	RH Break-Away Arm	1
	17-562	LH Break-Away Arm	1
25	8946-3.5	Plastic Wear strip	2
	HRS-316-050	Steel Rivet $\frac{3}{16}$ x $\frac{1}{2}$	2
26	HSSQS-38-16-150	Square Head Set Screw , $\frac{3}{8}$ -16 x $1\frac{1}{2}$	2
27	HB-12-13-300	Bolt, $\frac{1}{2}$ - 13 x 3	2
	HNTL-12-13	Lock Nut, $\frac{1}{2}$ - 13	2
28	HB-38-16-350	Bolt, $\frac{3}{8}$ - 16 x $3\frac{1}{2}$	2
	HNTL-38-16	Lock Nut, $\frac{3}{8}$ - 16	2
29	18-297	Tube Cap	1

BOOM MOUNT TO TRUCK

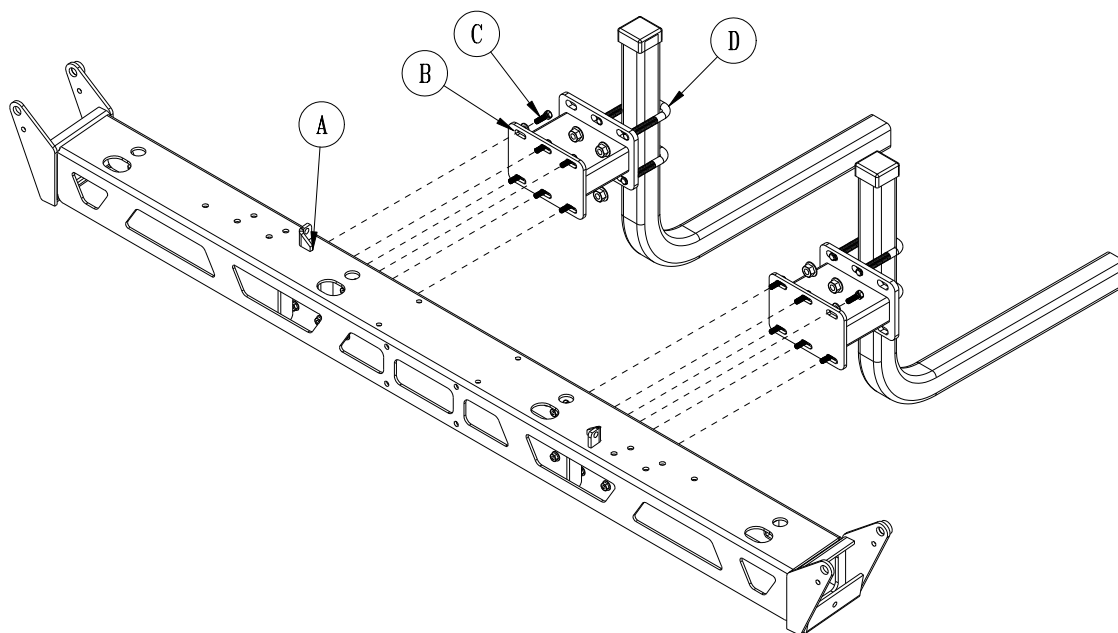


REF#	PART#	DESCRIPTION	QUANTITY
A		Center Boom Mount	1
B	17-614	Boom Spacer	2
C	HB-516-18-100	Bolt, $\frac{5}{16}$ -18 x 1	12
	HNTL-516-18	Lock Nut, $\frac{5}{16}$ -18	12
D	20-555	U-Bolt	4
	HNFL-12-13	Flange Lock Nut, $\frac{1}{2}$ - 13	8

CENTER BOOM ASSEMBLED

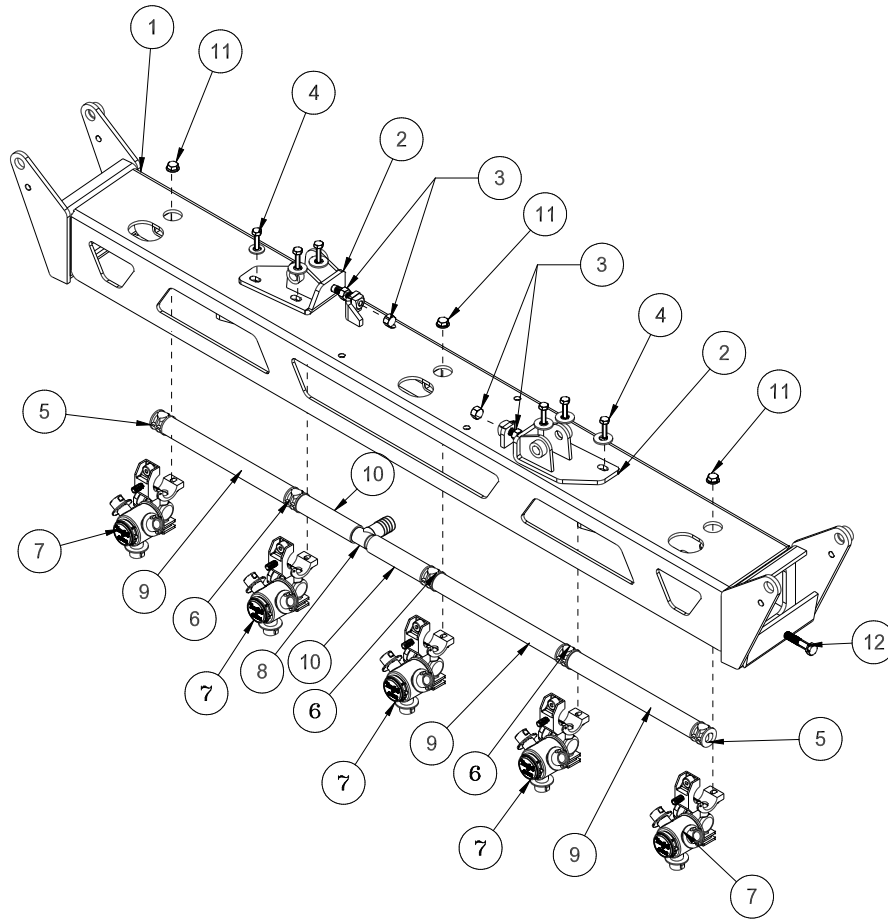


REF#	PART#	DESCRIPTION	QUANTITY
1	17-556	Center Boom	1
2	30-184	Actuator Mount	2
3	HSSQS-38-16-150	Square Head Set Screw, $\frac{3}{8}$ -16 x $1\frac{1}{2}$	2
	HNTL-38-16	Lock Nut, $\frac{3}{8}$ -16	4
4	HB-38-16-100	Bolt, $\frac{3}{8}$ - 16 x 1	6
	HW-38	Washer, $\frac{3}{8}$	6
	HNFL-38-16	Flange Lock Nut, $\frac{3}{8}$ -16	6
5	18-417	Single Barb	2
6	18-416	Double Barb	3
7	33-506	Nozzle Body (see nozzle drawing)	5
8	18-415	$\frac{3}{4}$ " T Hose Barb	1
9	9032-9	$\frac{3}{4}$ " Black Hose x 9"	3
	18-040	Hose Clamp	6
10	9032-4	$\frac{3}{4}$ " Black Hose x 4"	2
	18-040	Hose Clamp	4
11	HNFL-516-18	Flange Lock Nut, $\frac{5}{16}$ - 18	5
	HB-516-18-075	Bolt, $\frac{5}{16}$ - 18 x $\frac{3}{4}$	5
12	HB-38-16-250	Bolt, $\frac{3}{8}$ -16 x $2\frac{1}{2}$	2
	HNFL-38-16	Flange Lock Nut, $\frac{3}{8}$ -16	4

LEFT BOOM ASSEMBLED

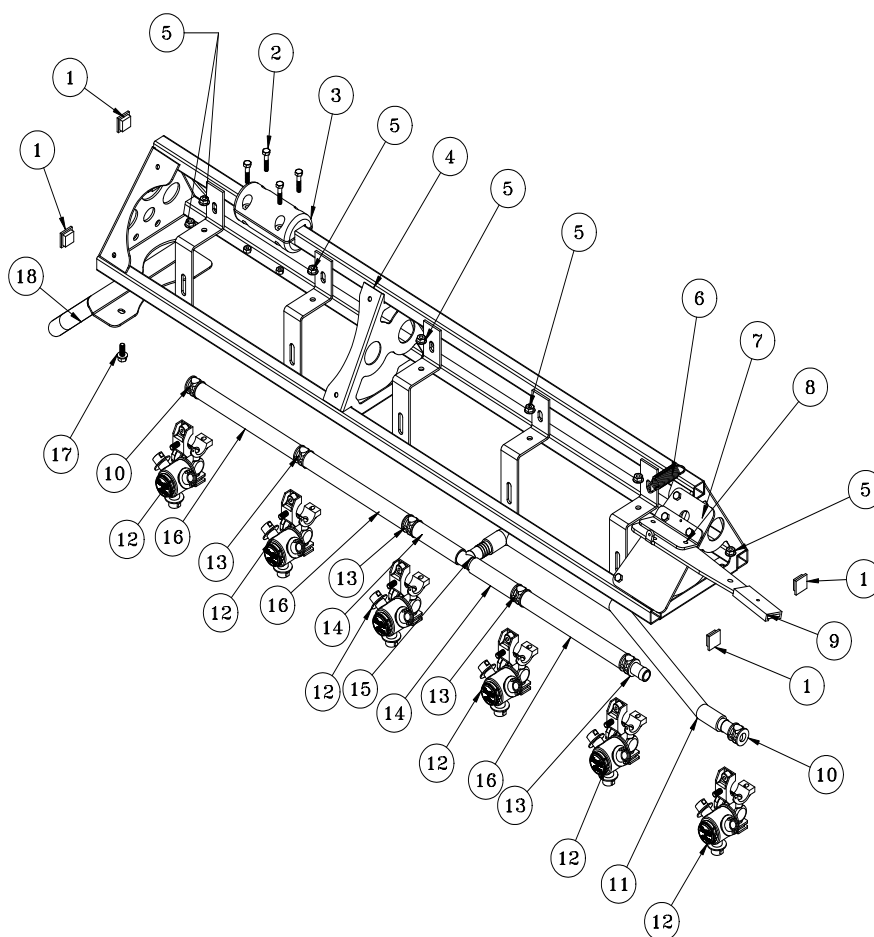



REF#	PART#	DESCRIPTION	QUANTITY
1	30-258	1" Ribbed Plug	5
2	HB-14-20-125	Bolt, $\frac{1}{4}$ - 20 x $1\frac{1}{4}$	4
	HNFL-14-20	Lock Nut, $\frac{1}{4}$ - 20	4
3	17-573	Guide Block Set	1
4	17-557	LH Boom Arm	1
5	HNFL-516-18	Flange Lock Nut, $\frac{5}{16}$ -18	6
	HB-516-18-075	Bolt, $\frac{5}{16}$ -18 x $\frac{3}{4}$	6
6	11-050	Spring	1
7	17-559	Break-Away Mount	1
8	17-560	Hinge Mount	1
9	17-562	LH Break-Away Arm	1
	8946-3.5	Plastic Wear Strip	1
	HRS-316-050	Steel Rivet, $\frac{3}{16}$ x $\frac{1}{2}$	1
10	18-417	Single Barb	2
11	9032-28	$\frac{3}{4}$ " Black Hose x 28"	1
	18-040	Hose Clamp	2
12	33-506	Nozzle Body (see nozzle drawing)	6
13	18-416	Double Barb	4
14	9032-4	$\frac{3}{4}$ " Black Hose x 4"	2
	18-040	Hose Clamp	4
15	18-415	$\frac{3}{4}$ " T Hose Barb	1
16	9032-9	$\frac{3}{4}$ " Black Hose x 9"	3
	18-040	Hose Clamp	6
17	HBFL-516-18-075	Flange Bolt, $\frac{5}{16}$ - 18 x $\frac{3}{4}$	4
	HNFL-516-18	Flange Lock Nut, $\frac{5}{16}$ - 18	4
18	17-541	Boom End Guard	1

RIGHT BOOM ASSEMBLED

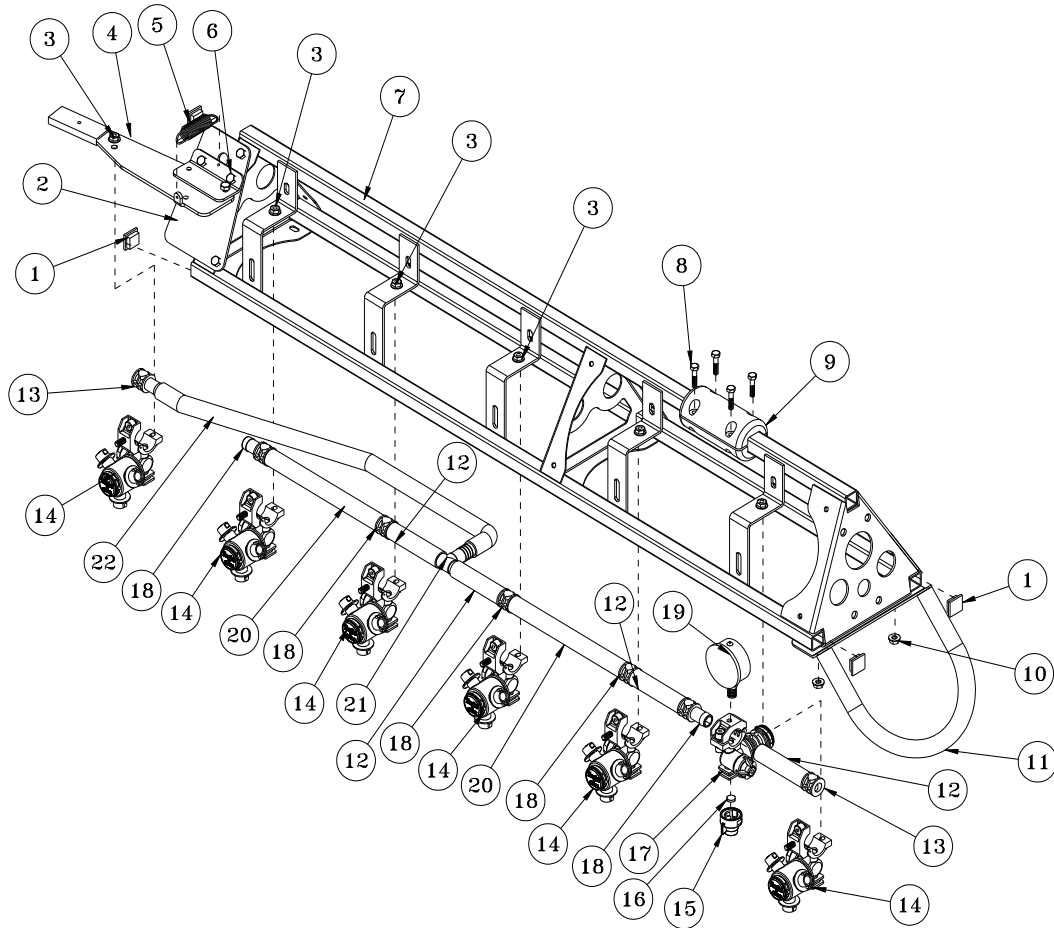


REF#	PART#	DESCRIPTION	QUANTITY
1	30-258	1" Ribbed Plug	5
2	17-559	Break-Away Mount	1
3	HNFL-516-18	Flange Lock Nut, $\frac{5}{16}$ -18	6
	HB-516-18-075	Bolt, $\frac{5}{16}$ -18 x $\frac{3}{4}$	6
4	17-561	RH Break-Away Arm	1
	8946-3.5	Plastic Wear Strip	1
	HRS-316-050	Steel Rivet, $\frac{3}{16}$ x $\frac{1}{2}$	1
5	11-050	Spring	1
6	17-560	Hinge Mount	1
7	17-558	RH Boom Arm	1
8	HB-14-20-125	Bolt, $\frac{1}{4}$ - 20 x $1\frac{1}{4}$	4
	HNFL-14-20	Lock Nut, $\frac{1}{4}$ - 20	4
9	17-573	Guide Block Set	1
10	HBFL-516-18-075	Flange Bolt, $\frac{5}{16}$ - 18 x $\frac{3}{4}$	4
	HNFL-516-18	Flange Lock Nut, $\frac{5}{16}$ - 18	4
11	17-541	Boom End Guard	1
12	9032-4	$\frac{3}{4}$ " Black Hose x 4"	4
	18-040	Hose Clamp	8
13	18-417	Single Barb	2
14	33-506	Nozzle Body (see nozzle drawing)	6
15	16-921	Cap	1
16	16-800	Seal	1
17	17-602	Body	1
18	18-416	Double Barb	5
19	16-281	Gauge	1
20	9032-9	$\frac{3}{4}$ " Black Hose x 9"	2
	18-040	Hose Clamp	4
21	18-415	$\frac{3}{4}$ " T Hose Barb	1
22	9032-28	$\frac{3}{4}$ " Black Hose x 28"	1
	18-040	Hose Clamp	2

BOOM LOCK ASSEMBLY

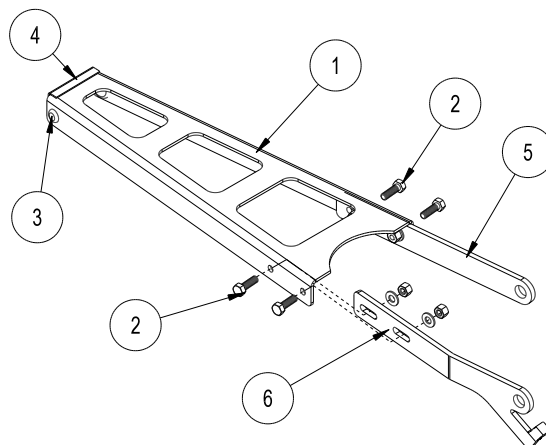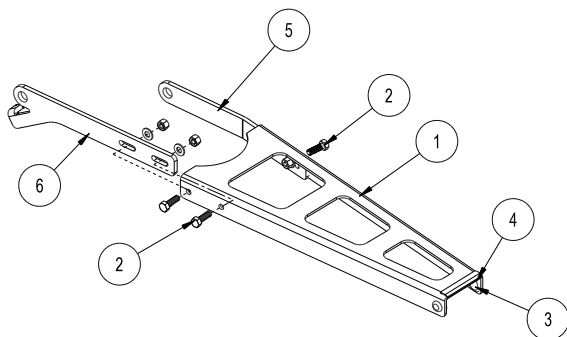


REF#	PART#	DESCRIPTION	QUANTITY
1	17-587	Boom Lock	1
2	HB-516-18-100	Bolt, $\frac{5}{16}$ -18 x 1	4
	HW-516	Flat Washer, $\frac{5}{16}$	2
	HNTL-516-18	Lock Nut, $\frac{5}{16}$ - 18	4
3	42-116	Rubber Insert	2
4	8803-2.75	Trim, black w/ lace	1
5	17-592	Lock Hinge, LH	1
	17-588	Lock Hinge, RH	1
6	17-589	Limit Hinge, RH	1
	17-593	Limit Hinge, LH	1

FRESH WATER AND CLEAN-LOAD MOUNT DRAWING

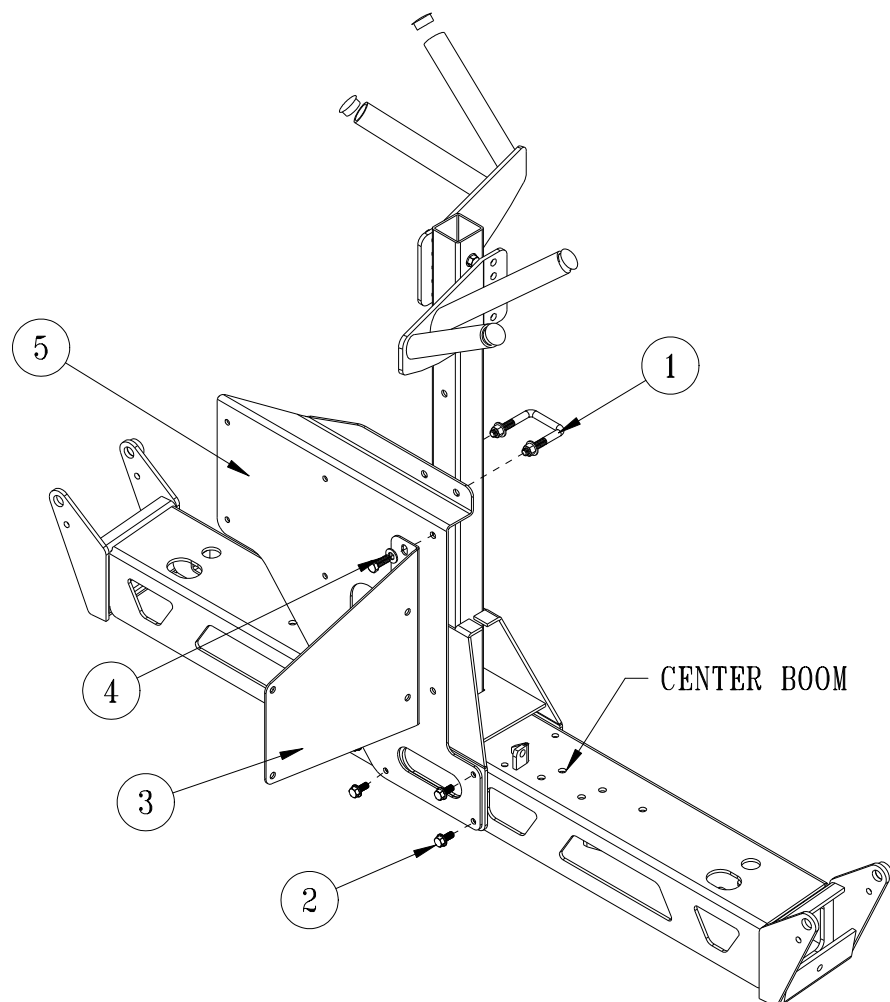


REF#	PART#	DESCRIPTION	QUANTITY
1	17-537	Square U-bolt	1
2	HB-516-18-100	Bolt, $\frac{5}{16}$ - 18 x 1	8
	HW-516	Washer, $\frac{5}{16}$	8
	HNFL-516-18	Flange Lock Nut, $\frac{5}{16}$ - 18	8
3	17-636	Fresh Water Mount	1
4	HB-38-16-100	Bolt, $\frac{3}{8}$ - 16 x 1	2
	HNFL-38-16	Flange Lock Nut, $\frac{3}{8}$ - 16	2
	HW-38	Washer, $\frac{3}{8}$	2
5	17-635	Clean Load Mount	1
	8803-13	Black Trim, 13"	1

BOOM NEST ASSEMBLED

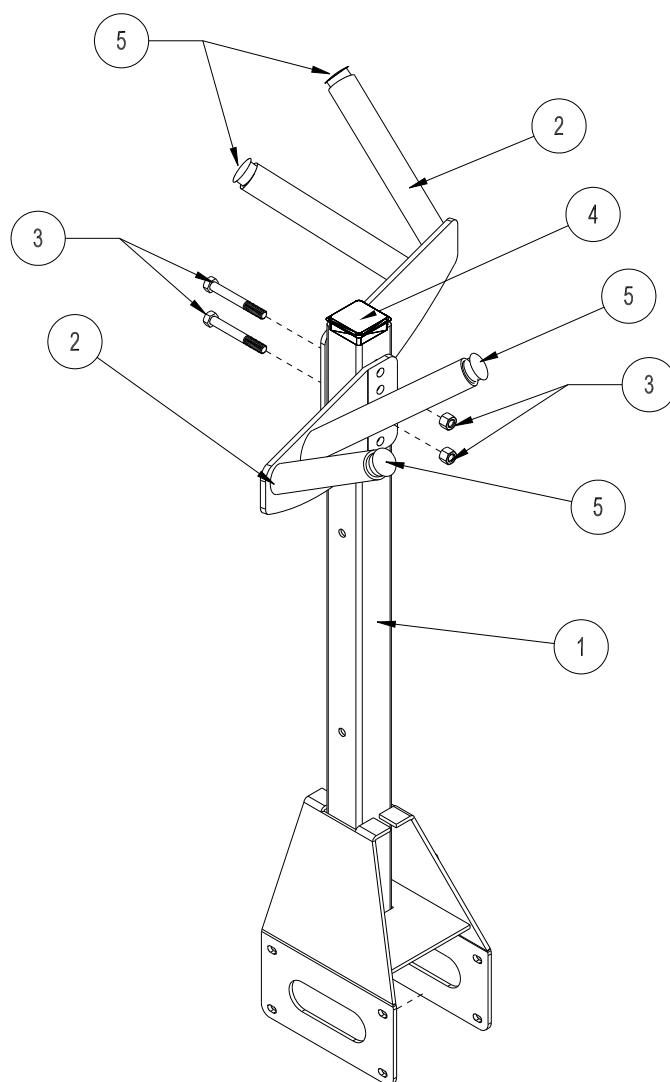


REF#	PART#	DESCRIPTION	QUANTITY
1	17-578	V-Boom Nest Post	1
2	17-617	Boom Nest	2
3	HB-38-16-350	Bolt, $\frac{3}{8}$ - 16 x $3\frac{1}{2}$	2
	HNTL-38-16	Lock Nut, $\frac{3}{8}$ - 16	2
4	18-297	Cap Plug	1
5	17-619	ROUND PUSH PLUG	4

2 HINGE ASSEMBLIES PER BOOM

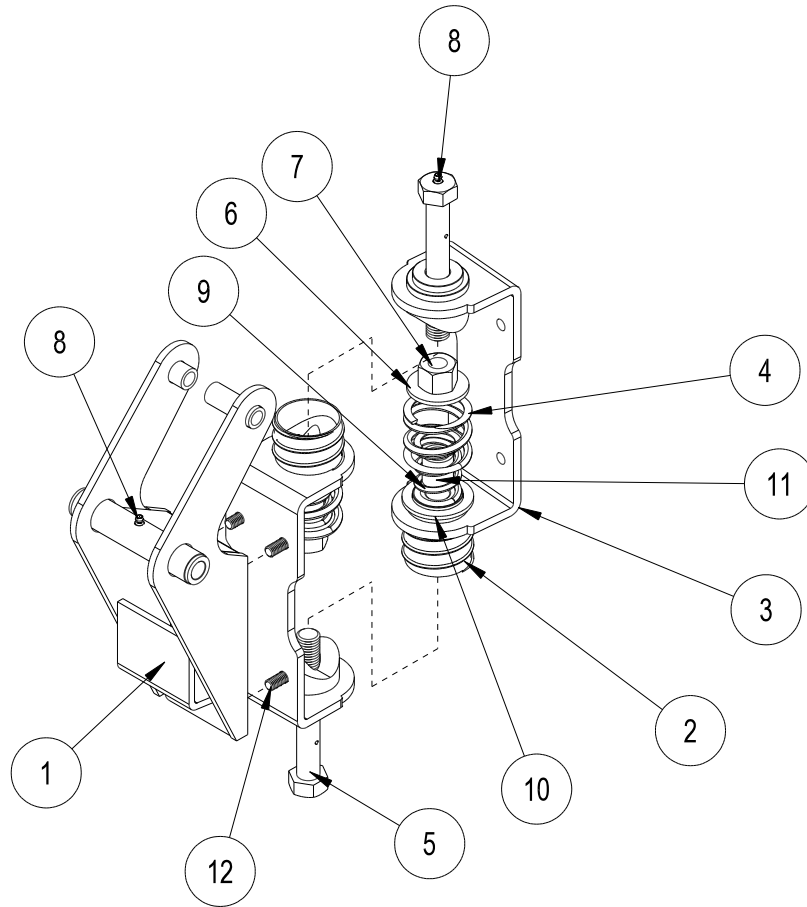


REF#	PART#	DESCRIPTION	QUANTITY
1	30-185	Arm Pivot Hinge	1
2	9026-2	Rubber Duct Hose x 2"	2
3	17-527	Boom Hinge	1
4	17-539	Compression Spring	2
5	17-540	Tapped Bolt	2
6	HW-34	Washer $\frac{3}{4}$ "	2
7	HNCL-34-10	Center Lock Nut $\frac{3}{4}$ " - 10	2
8	HG-14-28-180	Grease Zerk	3
9	17-591	Compression Spring	2
10	17-599	Spring Shim	2
11	17-594	Spring Sleeve	2
12	HB-38-16-100	Bolt, $\frac{3}{8}$ " - 16 x 1	4
	HNFL-38-16	Flange Lock Nut, $\frac{3}{8}$ " - 16	4

HINGE LOCK AND CYLINDER ASSEMBLY

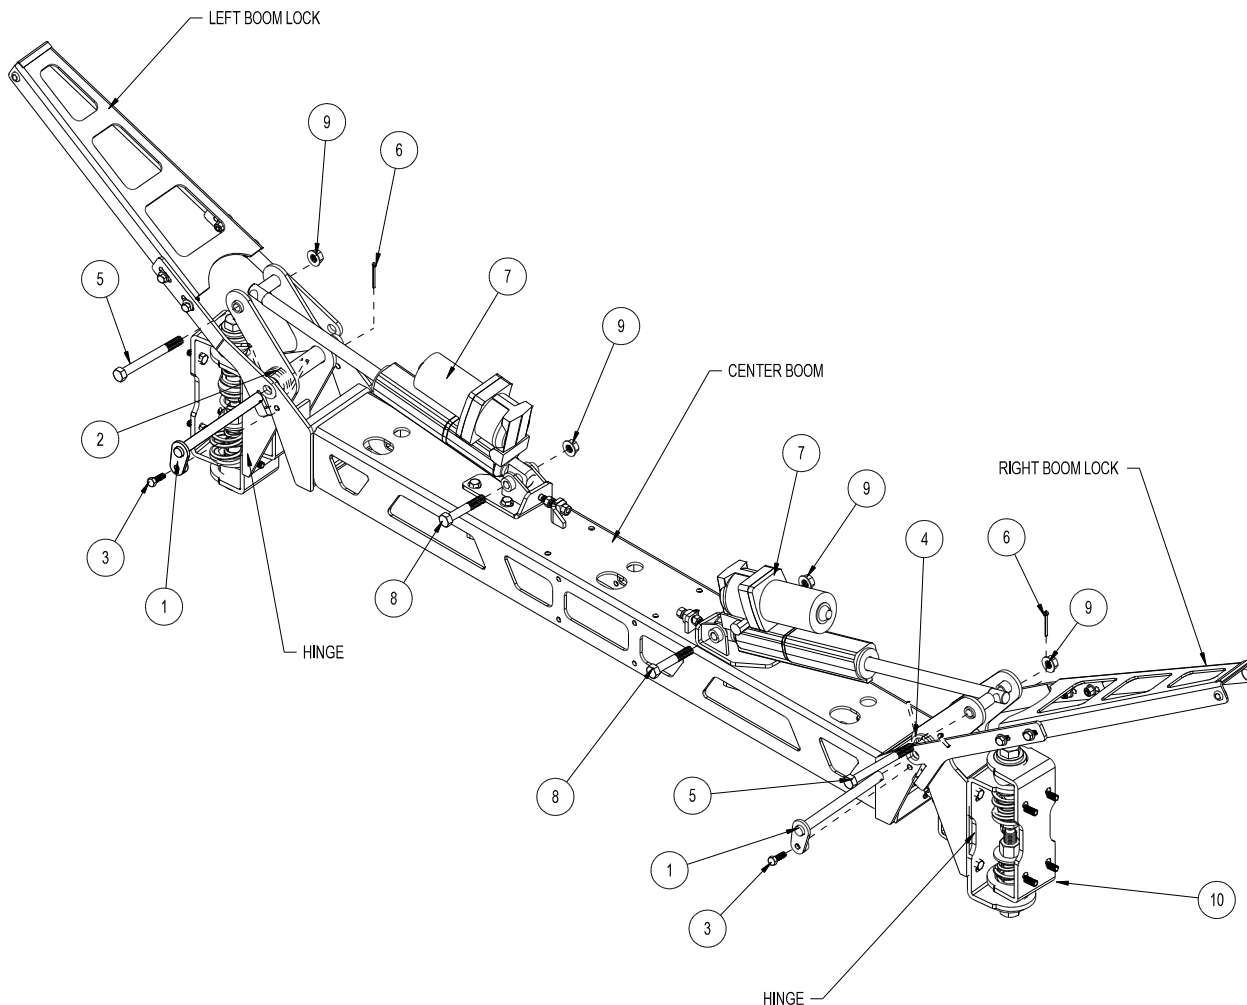

REF#	PART#	DESCRIPTION	QUANTITY
1	17-596	Hinge Pin w/Spacer	2
2	17-598	Torsion Spring, LH	1
3	HB-516-18-100	Bolt, $\frac{5}{16}$ - 18 x 1	2
	HNFL-516-18	Flange Lock Nut, $\frac{5}{16}$ - 18	2
4	17-597	Torsion Spring, RH	1
5	HB-12-13-500	Bolt, $\frac{1}{2}$ - 13 x 5	2
6	HP-18-100	Cotter Pin, $\frac{1}{8}$ x 1	2
7	30-214	KYB Actuator Complete	2
8	HB-12-13-300	Bolt, $\frac{1}{2}$ - 13 x 3	2
9	HNTL-12-13	Lock Nut, $\frac{1}{2}$ - 13	4
10	HB-38-16-100	Bolt, $\frac{3}{8}$ - 16 x 1	8
	HNFL-38-16	Flange Lock Nut, $\frac{3}{8}$ - 16	8

NOZZLE ASSEMBLY DRAWING

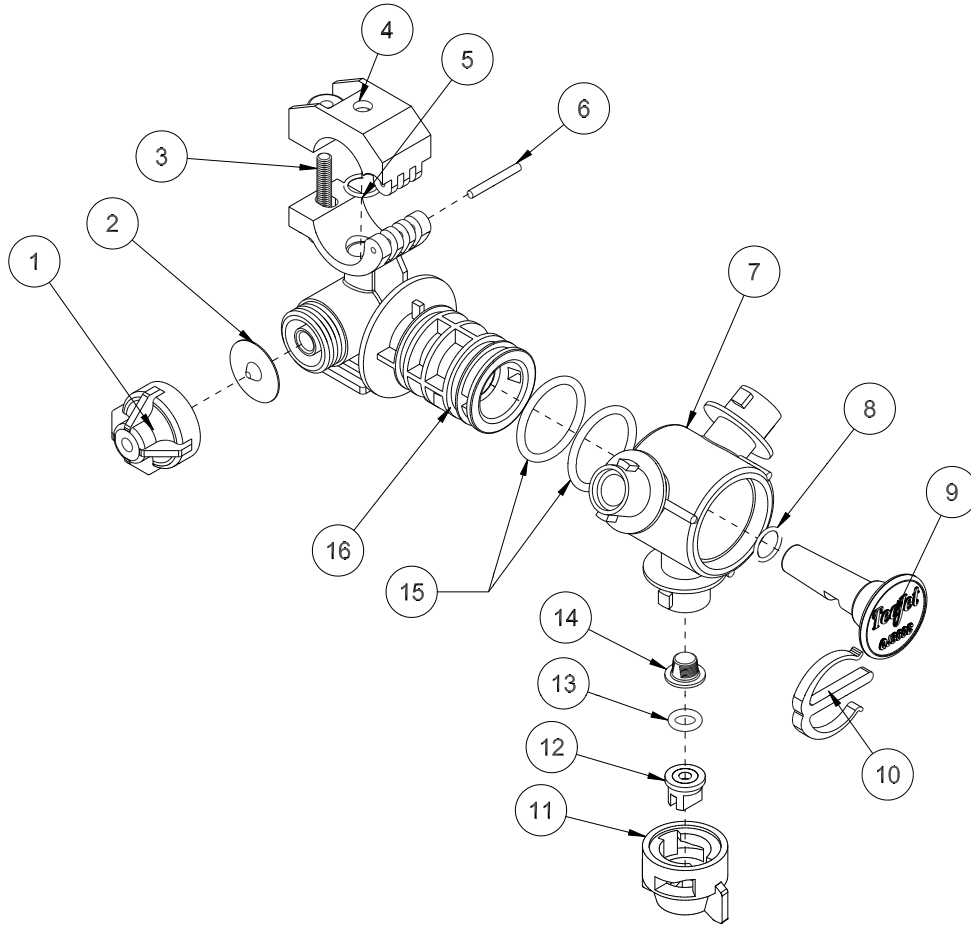


REF#	PART#	DESCRIPTION	QUANTITY
1*	16-988	Cap Assembly	1
2*	16-920-06	Diaphragm, EPDM	1
3*		Stainless Steel Screw	1
4*		Upper Clamp	1
5*	16-920-03	O-ring	1
6*		Pivot Pin, Stainless Steel	1
7		Turret, 3-Outlet, Nylon	1
8		O-ring, EPDM	1
9*		Plug	1
10*		E-clip	1
11	33-538	Cap - White	1
12	33-554	Nozzle Tip - White (XR11008-VS)	1
13	16-800	Viton Gasket	1
14	16-802	Strainer	1
15*		O-ring, Teflon	2
16*	33-506	Body Assembly (includes all * items)	1

Quantity is per nozzle body. For 20' booms multiply quantity by 12.

Quantity is per nozzle body. For 18' booms multiply quantity by 11.

Nozzles are located 20" (51 cm) apart on the right, left, and center tubes. Nozzles are 20" high off ground.

10-370 WATER FILL METER KIT - LITERS

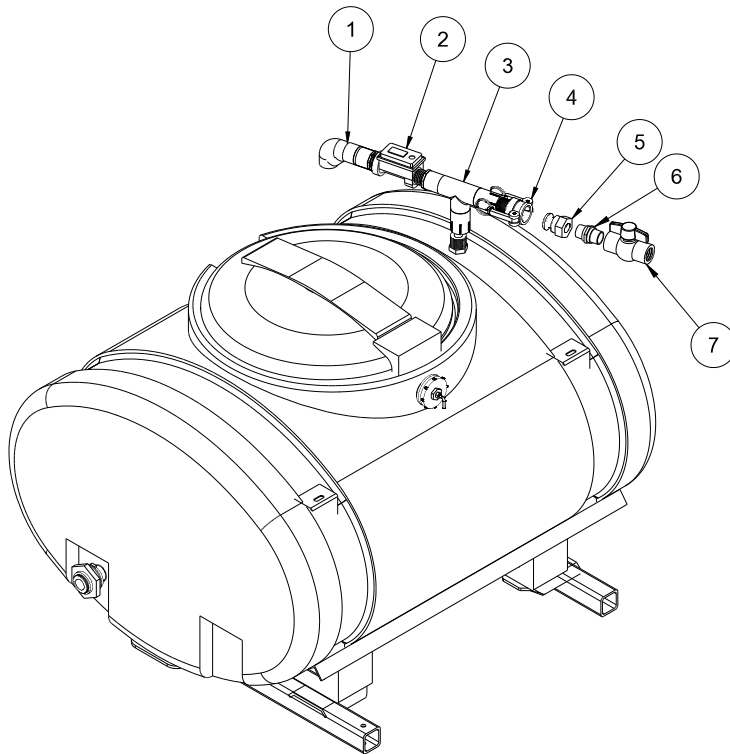

REF #	PART #	DESCRIPTION	QUANTITY
1	14-524	Filler Outlet	1
2	14-514	Water Meter - Gallons	1
	14-527	Water Meter - Liters	1
3	10-364	Filler Inlet	1
4	16-962	Quick Coupler (already on machine)	1
5	16-961	Quick Coupler (already on machine)	1
6	16-851	1" Nipple	1
7	18-448	1" Ball Valve	1


1. Thoroughly flush the service line upstream of the meter to remove dirt and debris.
2. Set meter in-line.
3. Make sure the water flow follows the arrow cast on the meter body.
4. The DLJ Meter is for use **only** with **COLD WATER** up to 122°F (50°C)
5. Slowly open any upstream valves to prevent damage to the meter.

Gallons to Cubic feet Conversion :

Multiply gallons reading by 0.1337 to get cubic feet.

There are 7.48052 gallons per cubic foot.


16-906 ELECTRIC HOSE REEL DRAWING

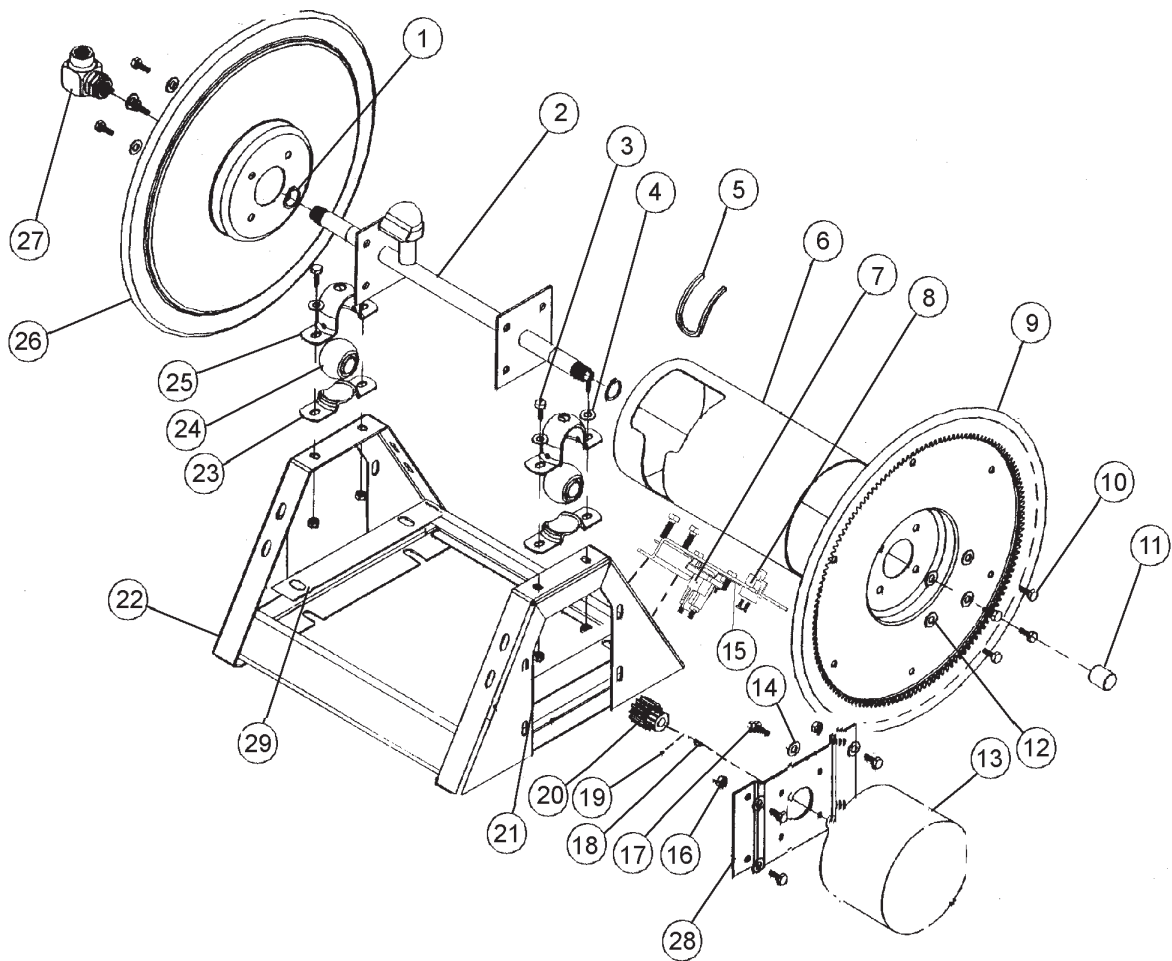

16-906 ELECTRIC HOSE REEL PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	16-906-25	Retaining Ring	2
2	16-906-22	Axle Assembly	1
3	HB-38-16-100	Bolt $\frac{3}{8}$ - 16 x 1	4
4	HW-38	Washer $\frac{3}{8}$	4
5	16-906-27	Trim, Drum Edge	1
6	16-906-21	Drum Center	1
7	13-750	Solenoid	1
	HB-14-20-075	Bolt $\frac{1}{4}$ - 20 x $\frac{3}{4}$	2
	HWL-14	Lockwasher $\frac{1}{4}$	2
	HN-14-20	Nut $\frac{1}{4}$ - 20	2
8	33-251	Switch	1
9	16-906-19	Disc and Gear Assembly	1
10	HB-516-18-075	Bolt $\frac{5}{16}$ - 18 x $\frac{3}{4}$	8
11	16-906-26	Pipe Cap $\frac{3}{4}$	1
12	HWL-516	Lockwasher $\frac{5}{16}$	8
13	16-906-15	Motor 12VDC	1
14	HW-516	Washer $\frac{5}{16}$	4
15	33-252	Switch and Solenoid Brkt	1
	HB-516-18-100	Bolt $\frac{5}{16}$ - 18 x 1	2
	HW-516	Washer $\frac{5}{16}$	2
	HWL-516	Lockwasher $\frac{5}{16}$	2
	HN-516-18	Nut $\frac{5}{16}$ - 18	2
16	HNTL-516-18	Lock Nut $\frac{5}{16}$ - 18	4
17	HB-516-18-100	Bolt $\frac{5}{16}$ - 18 x 1	4
18	16-906-17	Key	1
19		Set Screw	2
20	16-906-29	Pinion	1
21	HNTL-38-16	Lock Nut $\frac{3}{8}$ - 16	4
22	16-906-18	Frame Assembly	1
23	16-906-08	Mounting Pillow Block (Bottom)	2
24	16-906-24	Bearing	2
25	16-906-07	Mounting Pillow Block (Top)	2
26	16-906-20	Disc 17 $\frac{1}{2}$	1
27	16-906-23	Swivel Assembly $\frac{3}{4}$	1
	16-906-30	Seal Kit (For 16-906-23)	1
28	16-906-28	Bracket 12VDC	1
	16-982	Electric Hose Reel (only)	1


16-129 MANUAL HOSE REEL DRAWING

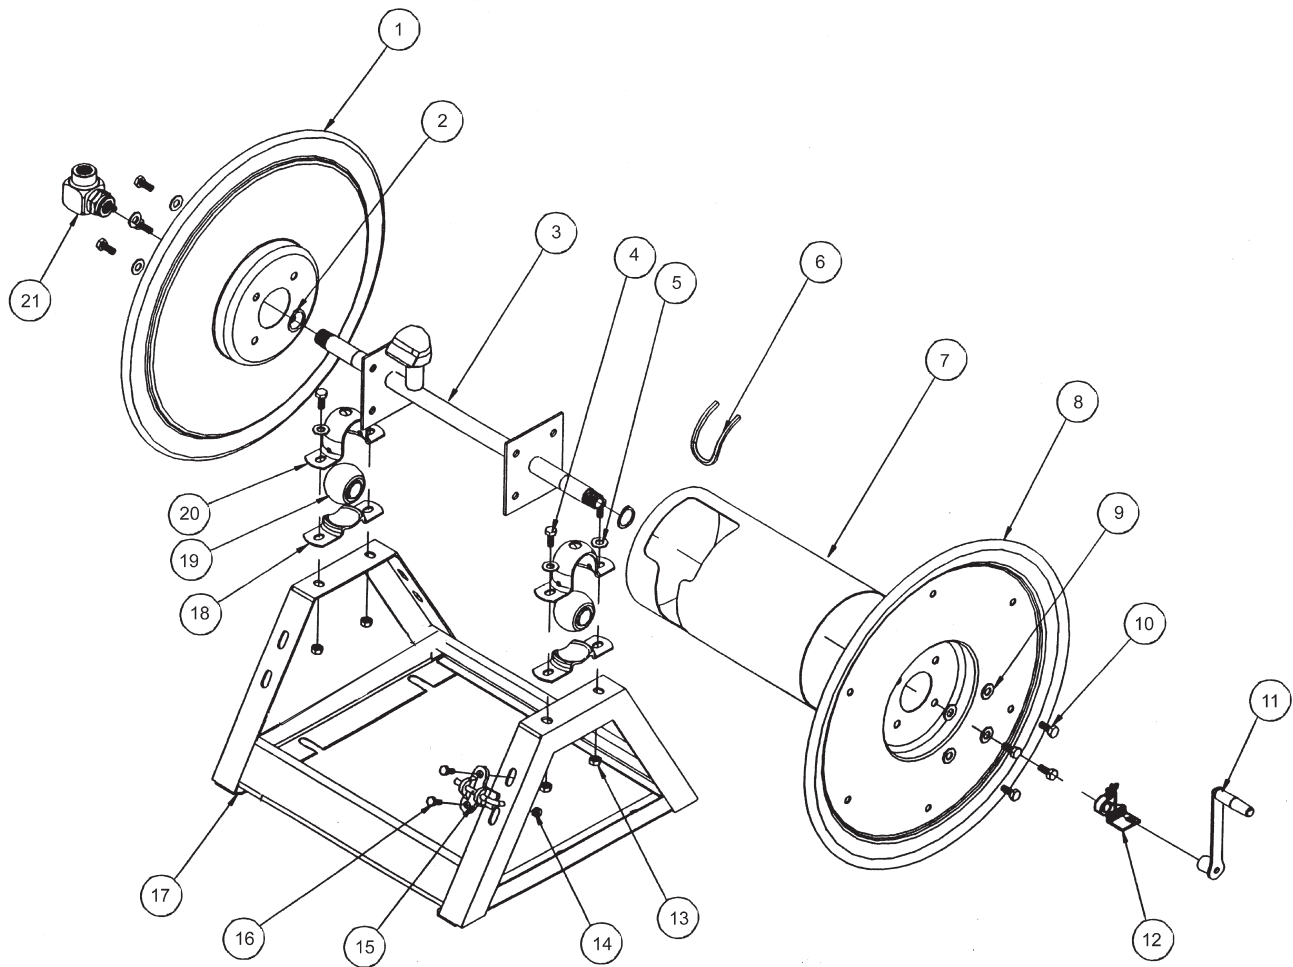

16-129 MANUAL HOSE REEL PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	16-129-11	Disc 17 $\frac{1}{2}$	1
2	16-906-25	Retaining Ring	2
3	16-906-22	Axle Assembly $\frac{3}{4}$	1
4	HB-38-16-100	Bolt $\frac{3}{8}$ - 16 x 1	4
5	HW-38	Washer $\frac{3}{8}$	4
6	16-906-27	Trim, Drum Edge	1
7	16-906-21	Drum Center	1
8	16-906-20	Disc 17 $\frac{1}{2}$, Crank Side	1
9	HWL-516	Lockwasher $\frac{5}{16}$	8
10	HB-516-18-075	Bolt $\frac{5}{16}$ - 18 x $\frac{3}{4}$	8
11	16-129-09	Crank Assembly $\frac{3}{4}$	1
12	16-129-10	Brake Assembly $\frac{3}{4}$	1
13	HNTL-38-16	Lock Nut $\frac{3}{8}$ - 16	4
14	HNTL-516-18	Lock Nut $\frac{5}{16}$ - 18	2
15	16-129-08	Lock Pin Assembly	1
16	HB-516-18-075	Bolt $\frac{5}{16}$ - 18 x $\frac{3}{4}$	2
	HW-516	Washer $\frac{5}{16}$	2
17	16-129-07	Frame Assembly	1
18	16-906-08	Mounting Pillow Block (Bottom)	2
19	16-906-24	Bearing	2
20	16-906-07	Mounting Pillow Block (Top)	2
21	16-906-23	Swivel Assembly $\frac{3}{4}$	1
	16-906-30	Seal Kit (For 16-906-23)	1


10-422 HOSE REEL

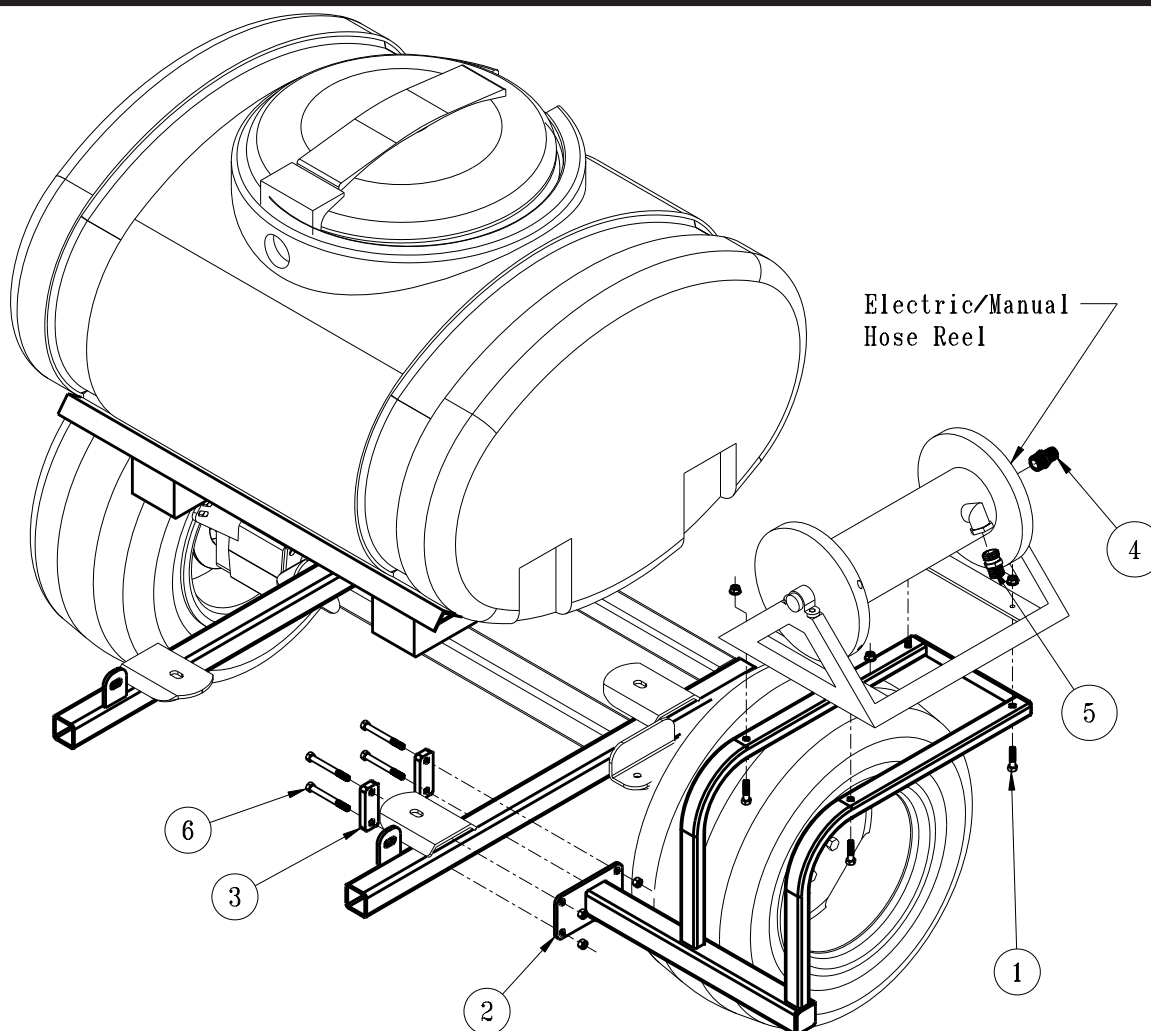

REF#	PART#	DESCRIPTION	QUANTITY
1	HB-516-18-150	Bolt $\frac{5}{16}$ - 18 x $1\frac{1}{2}$	4
	HNTL-516-18	Lock Nut $\frac{5}{16}$ - 18	4
2	10-423	Hose Reel Mount	1
3	17-537	Square U-bolt	2
4	18-249	Barb Fitting	1
5	16-295	Hose e Fitting	1

1. Wear protective clothing when draining the tank and taking apart the lines.
2. Drain tank and spray system in a safe and approved method insuring that no chemical or water remain in tank as you will be taking apart lines.
3. Remove key from ignition, set park brake and block wheels.
4. Install hose reel mount on the left side of the machine in front of the rear wheel. Mount arms pointing to the rear of the machine.
5. Use the u-bolts to secure the mount to the machine.
6. Put hose reel on hose reel bracket with fitting to the rear of machine. Use four bolts $\frac{5}{16}$ - 18 x $1\frac{1}{2}$ and four $\frac{5}{16}$ - 18 lock nuts to hold in place. Tighten bolts.
7. Put 18-249 barb fitting into side of hose reel. Place 16-295 Fitting into center of hose reel. Run 55" hose from the 18-249- to the 15-749 hose barb.

HOSE REEL PLUMBING FOR 1008

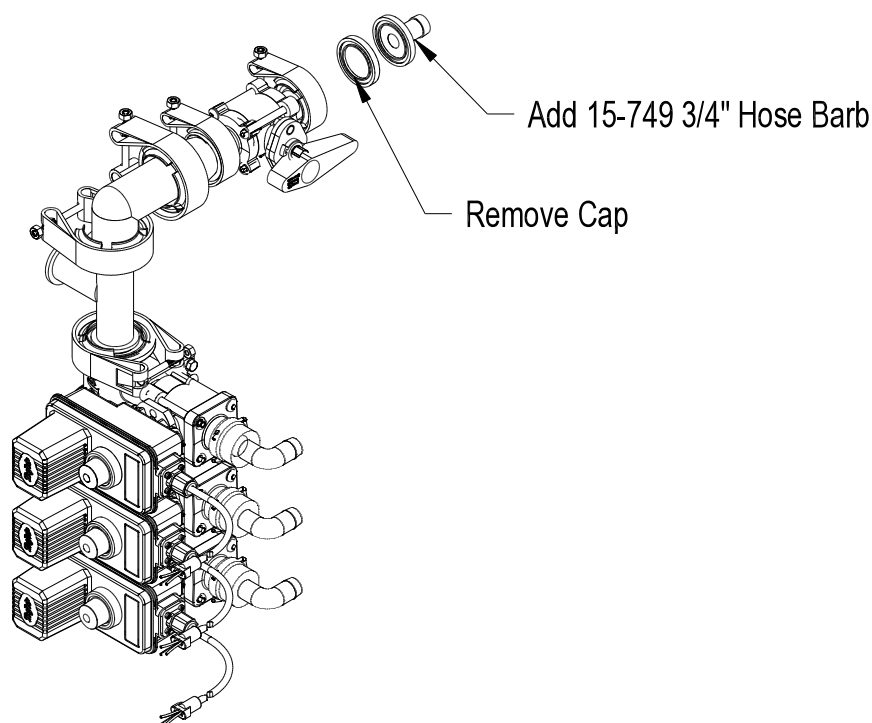

HOSE REEL ADJUSTMENTS

OPERATIONAL CHECK:


1. Pull hose off drum at least one full revolution. A clicking noise should be heard from locking mechanism.
2. Let the hose retract.
3. Pull the hose off until the first click is heard. Drum should lock when the hose tension is removed.
4. Continue pulling the hose, no more than one revolution, until no clicking is heard. Hose should rewind when tension is removed.

HOSE REPLACEMENT PROCEDURE:

1. Facing swivel, turn the hose drum clockwise until all of the hose is removed from the drum and the drum is held by locking mechanism. Make sure spring is locked.
2. Remove hose clamps and disconnect hose from swivel. Remove old hose.
3. Insert new hose through roller guide, connect to swivel and reinstall hose clamps. Use spring guard over hose to protect the hose from being cut by the drum.
4. Remove check ball from old hose and install on replacement hose.
5. Carefully, keeping the tension on the hose, pull the hose to release the locking mechanism. Let the hose wind on the drum.

Use Dielectric Grease On All Electrical Connections

ELECTRIC HOSE REEL WIRING DIAGRAM

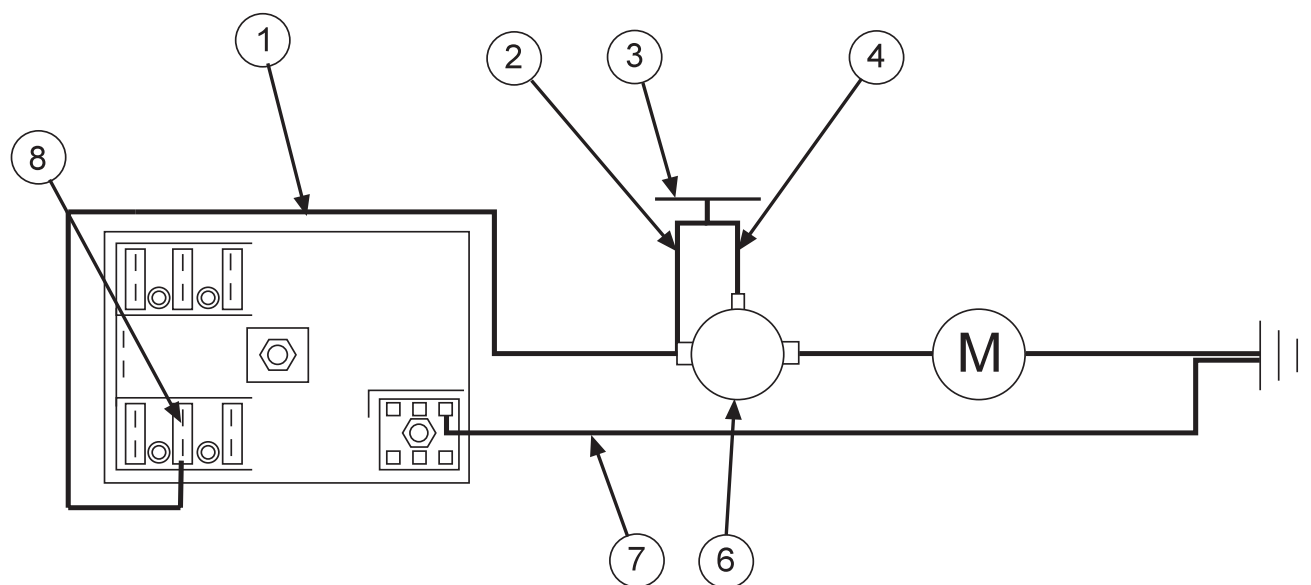

REF#	PART#	DESCRIPTION	QUANTITY
	8843-132	Flex guard $\frac{3}{8}$ ID	1
1	8919-144	10GA Red Wire 144"	1
	8901	Slide-On Connector	1
2	16-979	Wire, Switch to Solenoid Hot Terminal	1
3	33-251	Push Button Switch	1
4	16-978	Wire, Switch to Solenoid Start Terminal	1
6	12-015	Solenoid	1

SOLENOID TERMINALS

	HN -516-24	$\frac{5}{16}$ - 24 Hex Nut	2
	HN -10-32	10 - 32 Hex Nut	1
7	8931-144	10GA White Wire 144"	1
	8901	Slide-On Connector	1
8	33-273	Auto Blade Type Fuse 30Amp	1


CONNECTION INSTRUCTIONS

Route wire harness along side of tank and over to fuse block taking care to stay clear of moving parts or hot engine components. Cut off excess wire and strip back $\frac{3}{8}$ ". Place one 8963 heat shrink ($\frac{1}{4} \times 1\frac{1}{4}$ ") on each wire before crimping 8901 slide on connectors to the red and white wires. Connect the two wires to the fuse block first the red to the (+) positive and the white to the (-) negative. Put the 33-273 auto blade type fuse (30 amp) into fuse block.

⚠ WARNING

Make certain you are connecting positive (+) to positive; negative (-) to negative while attaching power leads. If you do not observe polarity, damage will result to electrical components.

10-653 FRESH WATER WASH TANK PARTS LIST

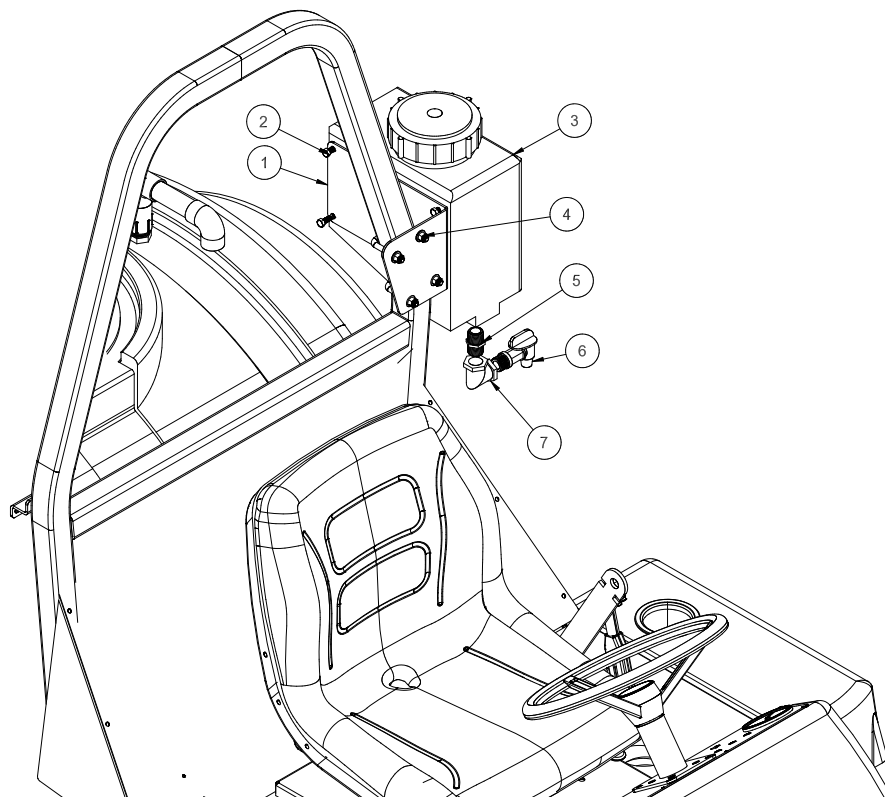

REF#	PART#	DESCRIPTION	QUANTITY
1	10-652	Mount Plate	1
2	HB-516-18-075	Bolt $\frac{5}{16}$ - 18 x $\frac{3}{4}$	4
	HWL-516	Lockwasher $\frac{5}{16}$	4
	HW-516	Washer $\frac{5}{16}$	4
3	10-234	Wash Tank	1
4	17-537	Square U-Bolt	2
5	16-158	Close Nipple	1
6	16-151	Elbow	1
7	16-960	Spigot	1


1. Fresh Water Wash Tank mounts on the left side ROPs.
2. Mount the wash tank (Ref 3) onto the mount bracket (Ref 1) using four $\frac{5}{16}$ x $\frac{3}{4}$ bolts, washers and lock-washers (Ref 2). Tighten.
3. Install the nipple (Ref 5), elbow (Ref 6) and spigot (Ref 7) into the bottom of wash tank (Ref 1). Use thread tape on all threads.
4. Mount the tank assembly to the left side ROPs with u-bolts (Ref 4). Tighten.
5. Rinse tank with clear water and check for leaks around fittings.



WARNING


This tank is for fresh clear water ONLY. Do not put chemicals in this tank.

10-740 FOAM MARKER TANK MOUNT

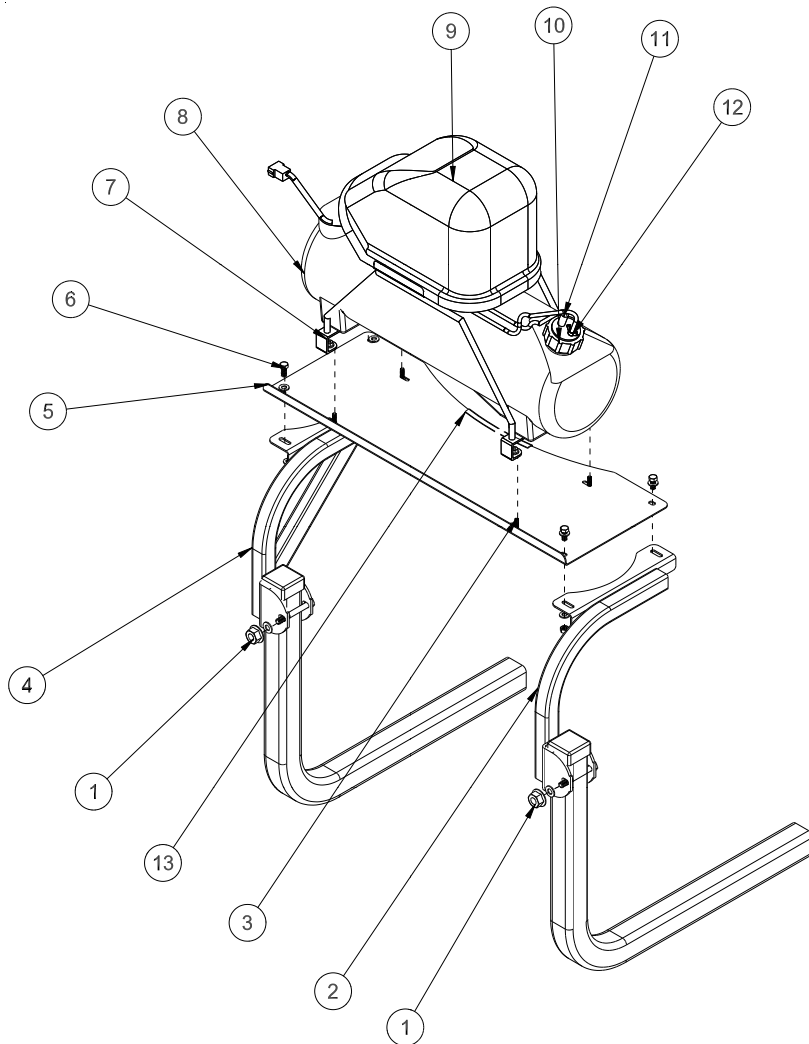

REF#	PART#	DESCRIPTION	QUANTITY
1	HNTL-38-16	Lock Nut, $\frac{3}{8}$ - 16	2
	HW-38	Flat Washer, $\frac{3}{8}$	4
	HB-38-16-300	Bolt, $\frac{3}{8}$ - 16 x 3	2
2	20-723	RH Bracket	1
3	HB-14-20-075	Hex Bolt, $\frac{1}{4}$ - 20 x $\frac{3}{4}$	4
	HNFL-14-20	Flange Lock Nut, $\frac{1}{4}$ - 20	4
4	20-726	LH Bracket	1
5	10-645	Foamer Plate	1
6	HB-516-18-075	Bolt, $\frac{5}{16}$ - 18 x $\frac{3}{4}$	4
	HW-516	Flat Washer, $\frac{5}{16}$	4
	HNFL-516-18	Flange Whiz Nut, $\frac{5}{16}$ - 18	4
7*	14-291-04	Tank Bracket	2
8*	14-291-02	Foamer Tank	1
9*	14-291-03	Compressor Only	1
	14-291-01	Black Cover	1
10*	14-284-02	Cap Assembly	1
11*		Clear Tube	1
12*		Blue Tube	1
13	8803-6	Black Trim	1
*	14-291	Foamer (includes parts 7-13)	1

10-740 FOAM MARKER CONTROL PANEL

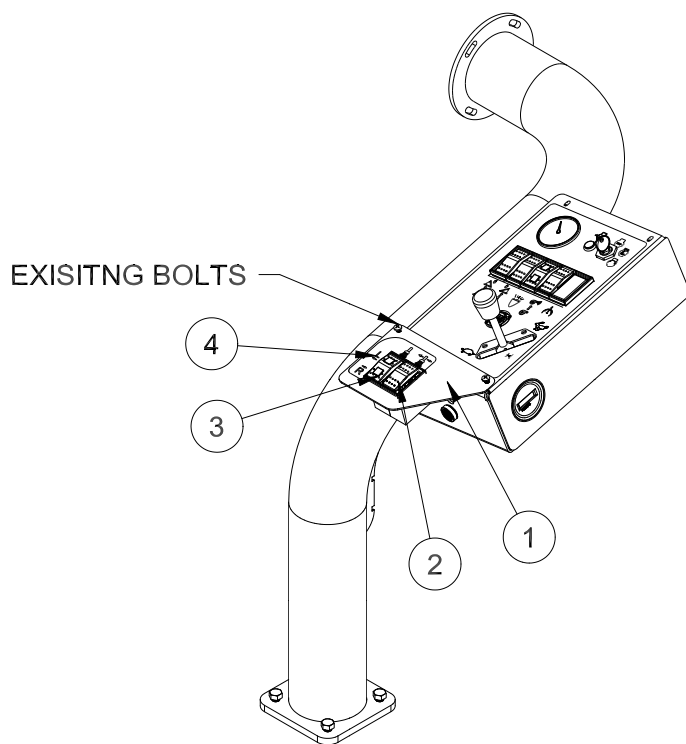

REF#	PART#	DESCRIPTION	QUANTITY
1	10-739	Switch Mount Plate	1
	15-725	Panel Mount End	2
2	15-782	Switch, Unlit	1
	15-727	Rocker, No Light	1
3	15-918	Switch, 2 Red LED	1
	15-917	Rocker, 2 Red Lenses	1
4	30-374	Decal, Foamer	1

⚠ WARNING


Safety: Before working on machine stop engine, set park brake, remove key from ignition and block wheels. Disconnect negative (-) battery terminal.

1. Place decal(Ref 4) on Switch mount palte. Place panel mount ends in mount palte.
2. Mount switches (Ref 2 & 3) to switch mount plate (Ref 1)as shown above. Mount the switch mount plate(Ref 1) on the side control panel using exixting bolts.

Tank Mount Drawing

3. Position the right and left hand mount brackets(Ref 2 and 4) on the boom tubes facing the front of the machine, using two $\frac{5}{16}$ x 3 bolts. Install the foamer plate (Ref 5) on the right and left bracket with curve towards poly spray tank.
4. Place the piece of trim (Ref 13) on the foamer bracket to prevent rubbing of hoses for a cleanload system.
5. Place foamer unit onto mount plate, with cap facing to the right side of machine. Using $\frac{1}{4}$ bolts and flange nuts, bolt foam marker to mount plate. The left rear mount of the foamer will bolt through the mount plate and brace. Tighten all hardware.
6. Make sure all bolts are tightened.

FOAM MARKER WIRING

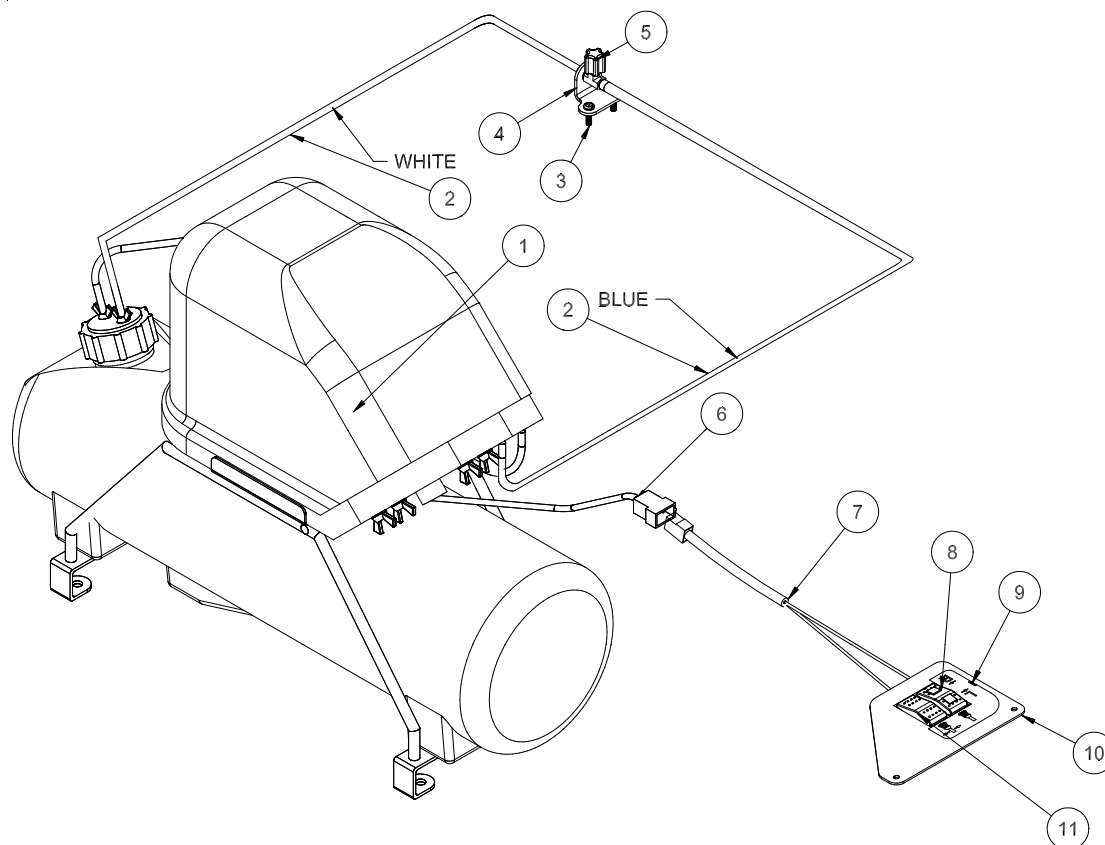

REF#	PART#	DESCRIPTION	QUANTITY
1	14-291-03	Compressor	1
2	15-507	Tubing -Blue and white	1
3	HSM-10-32-075	Machine Screw, #10-32 x 3/4	2
	HNFL-10-32	Flange Whiz-loc Nut, #10-32	2
4	20-769	Mount Bracket	1
5	14-699	Malle Coupler	1
	14-291-09	Blue FLy Nut	1
	14-702	Red Washer	1
6	15-504-04	Foam Marker Wiring Harness	1
7	32-574	Foamer Wire Harness	1
8	15-918	Switch, 2 Red LED	1
	15-917	Rocker, 2 Red Lenses	1
9	30-374	Decal, Foamer	1
10	10-739	Switch Mount Plate	1
11	15-782	Switch, Unlit	1
	15-727	Rocker, No Light	1

INSTALLATION


1. Connect the compressor wire harness (Ref 6) to the switches using the wire harness (Ref 7).
2. Use dielectric grease on all electrical connections. Route the wire harness to the battery and out of the way of any heat or moving parts. Use nylon ties as needed. Connect the wire harness to the battery. Red to positive(+), black to negative(-).

HOSES



Being careful not to cut the tubing, cut the over-sleeve back approximately 2" (5 cm) to expose blue and clear tubing. Remove blue wing nut from top connector of foam nozzle and slide it on the blue tube with the threads facing toward end of tube. Slide blue tube all the way over the top of the small tube on foam nozzle. Slide wing nut back to the threads and hand tighten. Follow the same steps for the clear tube and tube nut.

Route the tubing along underside of main frame using tie downs as necessary.

Install opposite ends of air-liquid tubes to compressor, again cutting back the oversleeve approximately 2" (5 cm) and inserting blue and clear tubes for the left boom section into the tubing connectors on the right side of compressor as far as possible. Follow the same steps for the right boom tubing. Notice the right boom is inserted into left side of compressor. To release tubing from compressor, hold black ring around tubing, and pull tube out.

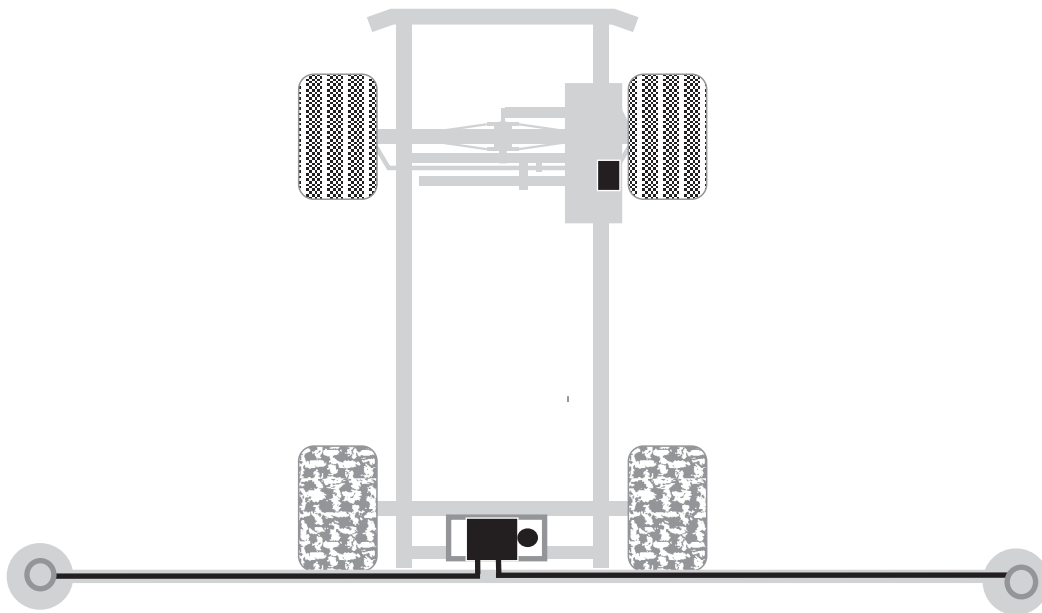

FOAMER NOZZLE MOUNT & HOSE GUARD MOUNT DRAWING

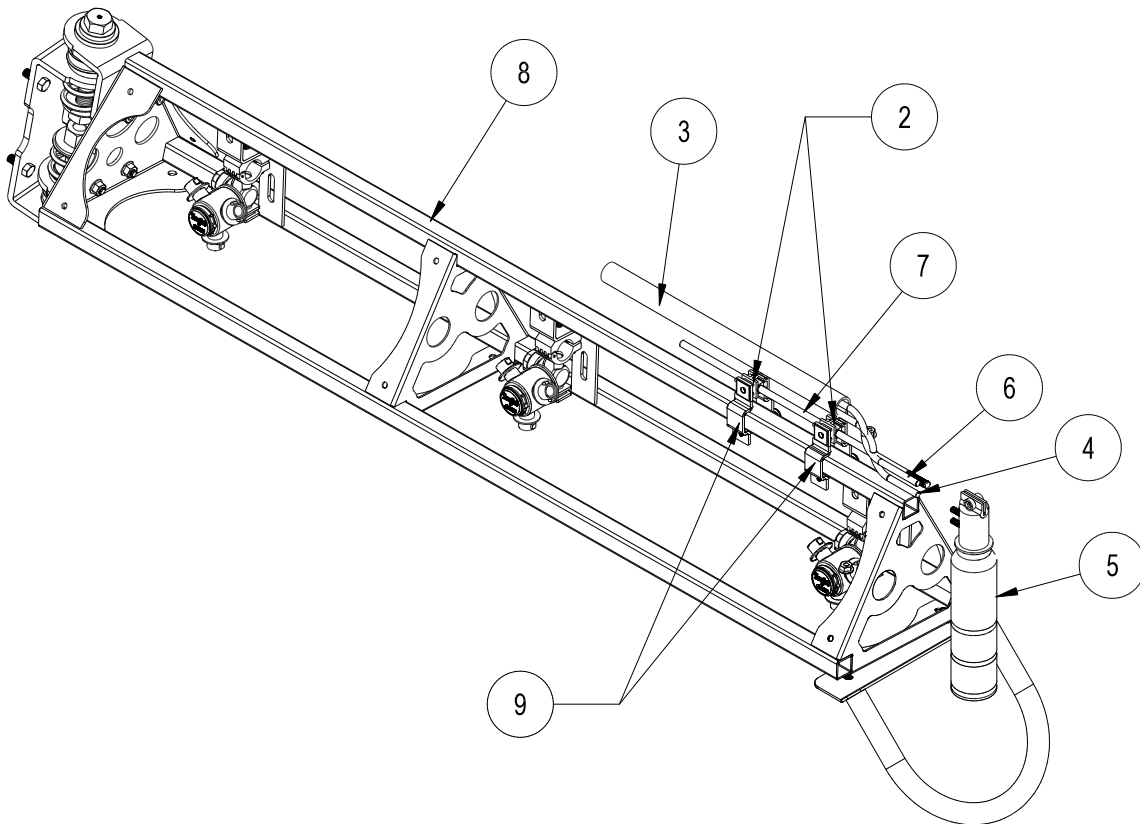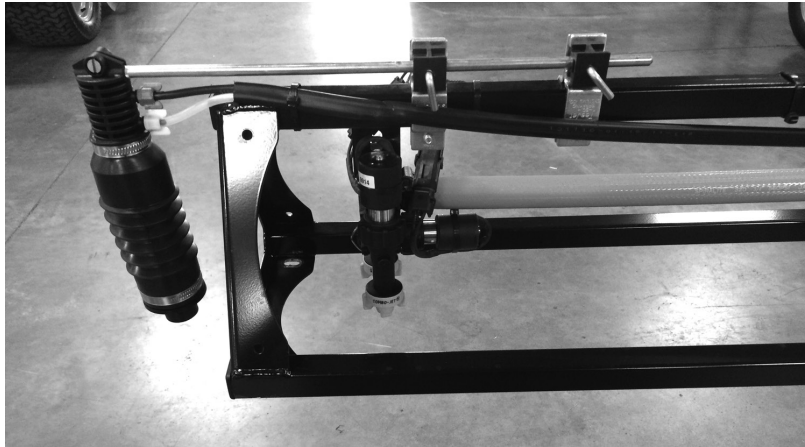


10-378 FOAM MARKER PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
REF#	PART#	DESCRIPTION	QUANTITY
2	16-987	Foam Nozzle Mounting Kit	1 per boom
3	15-507	Foamer Tubing	2
4		Clear Tubing	
5	15-511	Foam Nozzle	2
6		Blue Tubing	
7	15-510-01	Nozzle Mounting Rod	2
8		Boom	
9	16-795	Square Clamp	4

INSTALLATION INSTRUCTIONS

1. Slide hose clamp onto drop tube of foam nozzle and attach restrictor bell.
2. Place splined end of Nozzle mounting rod (Ref 7) into top of foam nozzle (Ref 5). Tighten screw.
3. Slide two foam nozzle mounts (Ref 2) onto the rod. Place square clamps (Ref 9) on foam nozzle mounts and mount the square clamps to the boom (Ref 8). Adjust foam nozzle mounts and clamps so nozzle assembly will clear end of boom. Tighten foam nozzle mounts and square clamps to prevent side to side movement. Do the same to the other side.
4. Being careful not to cut the tubing (Ref 3), cut the over-sleeve back approximately 2" (5 cm) to expose blue (Ref 6) and clear tubing (Ref 4).
5. Remove blue wing nut from top connector of foam nozzle and slide it on the blue tube with the threads facing toward end of tube. Slide blue tube all the way over the top of the small tube on foam nozzle. Slide wing nut back to the threads and hand tighten. Follow the same steps for the clear tube and tube nut.
6. Route the tubing along underside of main frame using tie downs as necessary.
7. Install opposite ends of air-liquid tubes to compressor, again cutting back the over-sleeve approximately 2" (5 cm) and inserting blue and clear tubes for the left boom section into the tubing connectors on the right side of compressor as far as possible.
8. Follow the same steps for the right boom tubing. Notice the right boom is inserted into left side of compressor. To release tubing from compressor, hold black ring around tubing, and pull tube out.
9. Hose's must be routed along the side of the boom square tubing.
10. Mark 6 inches in from inside edge of foamer nozzle mounting bracket on square boom tubing.
11. Cut cable and strip casing, allowing enough length to connect to fuse block.
12. Strip and connect slide on connectors to each wire and use the heat shrink.
13. Connect black negative (-) wire to the ground and connect red wire to the positive (+).
14. Insert 10 amp fuse into slot which red wire was attached to.


14-291 FOAMER REPLACEMENT PARTS

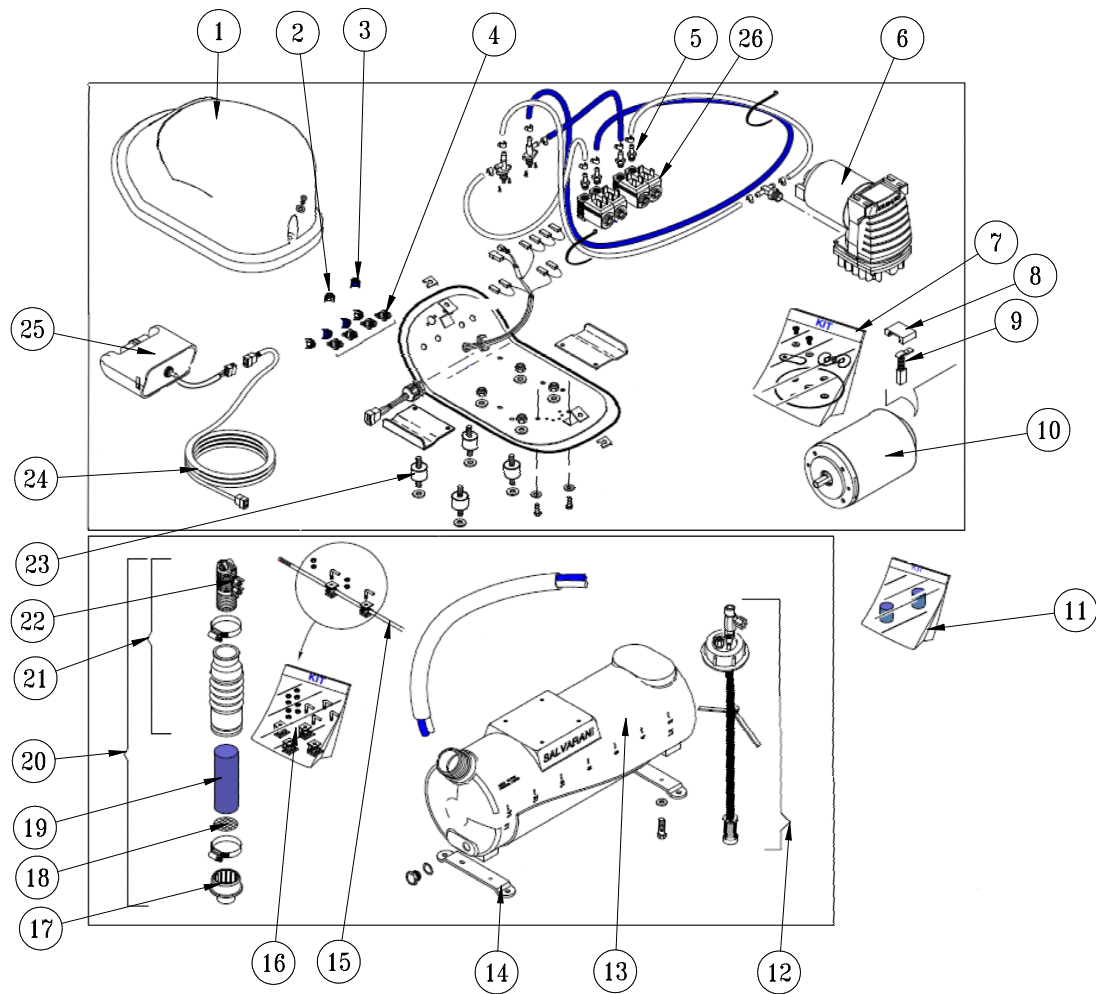

14-291 FOAMER REPLACEMENT PARTS

REF#	PART#	DESCRIPTION	QUANTITY
1	14-291-01	Black Cover	1
2	14-291-08	White Fly Nut	1
3	14-291-09	Blue Fly Nut	1
4	14-284-10	Tubing Connector	1
5	14-291-17	M6 Tubing Connector	1
6	14-536	Compressor Complete	1
7	14-291-11	Diaphragm Replacement Kit	1
8	15-505-08	Brush Retainer	1
9	15-505-06	Brush	1
10	15-505-07	12V Electric Motor	1
11	15-511-02	Foam Sponge	1
12	14-284-02	Cap Assembly	1
13	14-291-02	Foamer Tank	1
14	14-291-04	Tank Brackets	2
15	15-510-01	Nozzle Mounting Rod	2
16	16-987	Foam Nozzle Mounting Kit	1
17	14-284-09	Foam Nozzle Reducer	2
18	15-511-09	Stainless Steel Screen	2
19	15-511-08	Long Foam Sponge	2
20	15-511	Foam Nozzle	2
21	15-511-07	Foam Nozzle Assembly	1
22	15-511-01	Foam Nozzle Sub Assembly	1
23	14-291-15	Shock Absorber	4
24	14-284-05	Extension Wire	1
25	14-291-05	Switch Box	1
	15-506-02	Switch	1

30-006 FRESH WATER WASH TANK DRAWING

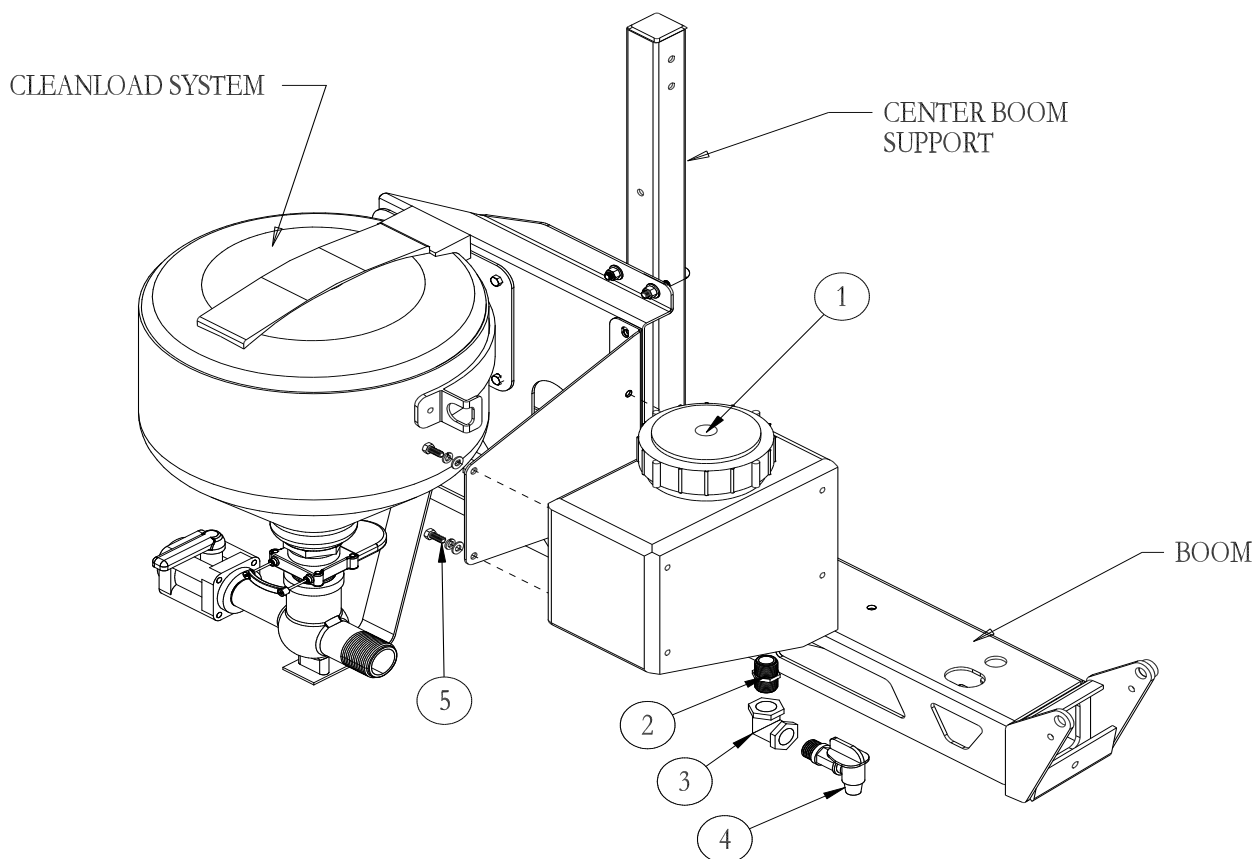

REF#	PART#	DESCRIPTION	QUANTITY
1	10-234	Wash Tank	1
2	16-158	Close Nipple	1
3	16-151	Elbow	1
4	16-960	Spigot	1
5	HB-516-18-075	Bolt $\frac{5}{16}$ - 18 x $\frac{3}{4}$	4
	HWL-516	Lockwasher $\frac{5}{16}$	4
	HW-516	Washer $\frac{5}{16}$	4

1. Fresh Water Wash Tank mounts on the rear of all the machines.
2. The Bracket is already attached to the Super Boom center boom post.
3. Install the nipple (Ref 2), elbow (Ref 3) and spigot (Ref 4) into the bottom of wash tank (Ref 1). Use thread tape on all threads.
4. Mount the tank onto the mount bracket using four $\frac{5}{16}$ x $\frac{3}{4}$ bolts, washers and lockwashers. Tighten.
5. Rinse tank with clear water and check for leaks around fittings.



WARNING

This tank is for fresh clear water ONLY. Do not put chemicals in this tank.

10-417 CHEMICAL CLEAN-LOAD® OPERATING INSTRUCTIONS

STARTUP

1. All Clean-load valves must be closed prior to starting: inlet ball valve, knife valve and hopper rinse ball valve.
2. Open lid to check for foreign objects which may hinder performance or contaminate the system.
3. Close and lock lid by turning cover clockwise.
4. Divert pump flow to Clean-load inlet line. A pressure of 30 PSI minimum and 150 PSI maximum must be used. Highest pressures increase education rate and available wand suction.
5. Turn inlet ball valve on (yellow handle).
6. Open knife valve, located on the bottom of hopper, by pushing handle in (red handle).
7. Unlock and open lid slowly by turning cover counterclockwise.

LOADING LIQUID OR POWDERED CHEMICAL INTO HOPPER

8. Pour required amount of chemical into hopper. Avoid splashing liquids or powdered chemicals outside of hopper.
9. Rinse empty chemical containers if applicable. Place container opening over container rinse valve and press down. This will activate the rinse valve and rinse container.
10. Rinse Clean-load hopper. Close and lock lid by turning cover clockwise. Release the safety locking band on the hopper rinse ball valve and turn on for 20 seconds. Close ball valve and return locking band to locked position.
11. Open lid and inspect for chemical residue. Repeat step 10 as necessary.
12. Close knife valve by pulling red handle out towards you. Turn inlet (yellow handle) off.

LOADING LIQUID AND/OR POWDERED CHEMICAL WITH SUCTION LANCE

Note: Lance suction is dependent upon eductor pressure and flow. For best results, use highest pressure available up to 150 PSI maximum.


8. Insert lance body with o-ring into eductor until the o-ring is sealed.
9. Use the free end of the lance to pierce bag or container to vacuum powdered or liquid chemical.
10. Rinse lance. Place lance end into a clean container of water to rinse lance assembly.
11. Remove lance body from eductor and drain any remaining fluid into hopper.
12. Close knife valve (red handle). Turn inlet valve (yellow handle) off.

SHUTDOWN

1. Ensure that:
 - All valves are closed. Be sure to close knife valve first. (Close by pulling red handle out towards you.)
 - Chemical residue has been cleaned.
 - Hopper lid is closed and locked by turning cover clockwise.
2. Divert pump flow back to normal operation.


Symptom	Corrective Action
Low education rate	Check pump pressure and flow. Cleanload Eductor performance is based on flow and pressure to the system. Note requirements for high education rates. Increase outlet hose size back to tank.
Plugged or clogged bottle rinse nozzle	Disassemble rotary portion of nozzle from lower valve assembly and back flush until nozzle ports are clear of debris.
Plugged or clogged tank rinse nozzle	Disassemble rotary portion of nozzle from NPT hose barb and back flush until nozzle ports are clear of debris. Remove screen and flush with water to clear away foreign material.
Fitting leaks	Check for cracks in fitting. Replace fitting if necessary. Disassemble and add more joint seal in compound if leak occurs on threads.

10-417 CHEMICAL CLEAN-LOAD®

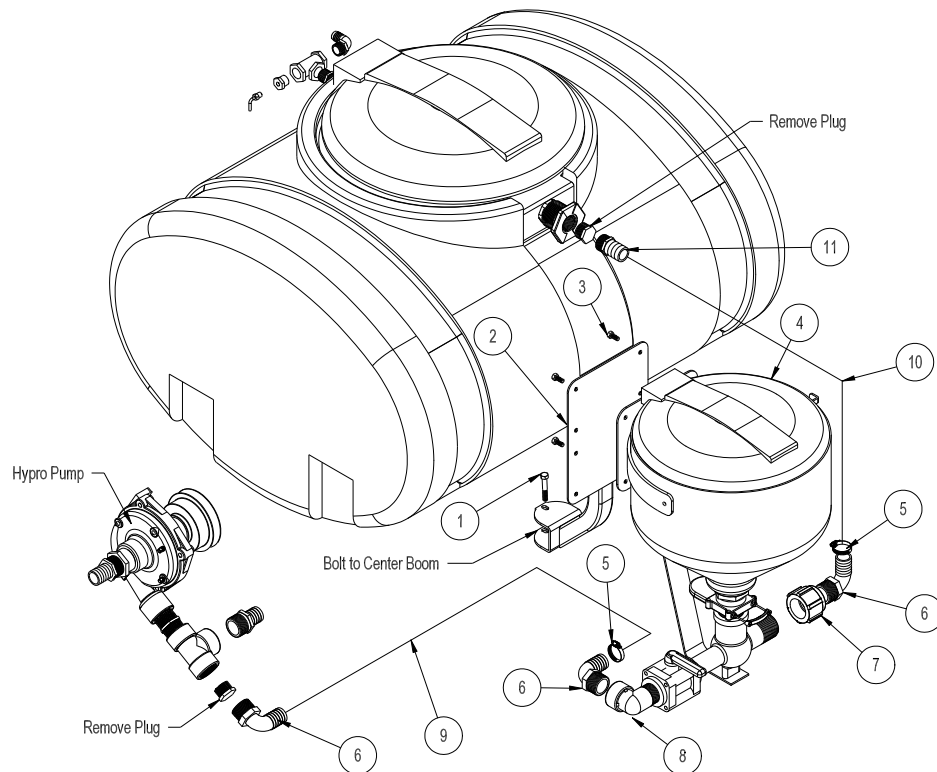

CLEAN LOAD FRESHWATER MOUNT ON 17-550/17-525 BOOMS


When placing a 17-525/17-550 Heavy Boom on the Sprayer you will have to relocate the Chemical Clean-load System and the Fresh Water tank. There is a mount provided for you, please see in the illustration.

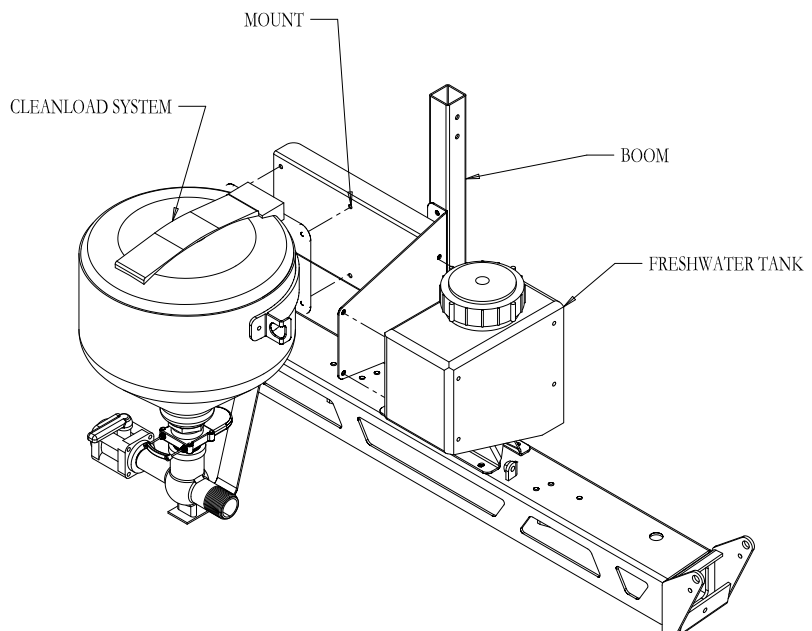


10-417 CHEMICAL CLEAN-LOAD® PART LIST

REF#	PART #	DESCRIPTION	QUANTITY
1	HB-38-16-300	Bolt $\frac{3}{8}$ -16 x 3	1
	HNTL-38-16	Flange Lock Nut $\frac{3}{8}$ -16	1
2	15-816	Mount Bracket	1
3	HBFL-516-18-075	Flange Bolt $\frac{5}{16}$ -18 x $\frac{3}{4}$	4
	HNFL-516-18	Flange Lock Nut $\frac{5}{16}$ -18	4
4	15-620	Clean-load Eductor	1
5	18-116	Hose Clamps	4
6	16-156	90° Hose Barb	3
7	18-391	Reducer Coupling	1
8	16-972	Elbow	1
9	8897-80	Hose to Tee by Valve	1
10	8897-35	Hose to fitting on Back of Tank	1
11	16-159	Tank Fitting	1

1. Make sure all chemicals have been flushed out of spray system, as you will be disconnecting fittings from the pump. Remember to use threaded tape on all new fitting connections.
2. Remove the $1\frac{1}{4}$ " plug from the tee on the outlet side of the pump and install one Hose barb (16-156). Then tighten so it points to the left side of the machine.
3. Install mounting brackets onto left side of center boom between boom pivot and vertical boom support. Secure with $\frac{3}{8}$ x 3 bolt, flat washer (top and bottom) and lock nut.
4. Bolt Clean-load assembly onto mounting bracket using four flange bolts $\frac{5}{16}$ -18 x $\frac{3}{4}$ and flange nuts. Install 90° hose barb (16-156) into inlet side of Clean-load (valve with yellow handle) then tighten so it points forward and down.
5. Install one reducer coupling (18-391) and one 90° Hose Barb (16-156) onto the outlet side of Clean-load. Tighten so hose barb points forward and up.
6. Remove plug from top rear center of spray tank and discard. Install one hose barb (16-159) into tank fitting and tighten.
7. Route 80" hose from the 90° hose barb on spray pump to the inlet side of the Clean-load and secure with hose clamps (18-116).
8. Route 35" hose from 90° hose barb on outlet side on Clean-load to the hose barb on the top rear of the tank.
9. Make sure all hardware, fittings, and clamps are tight. Add about 25 gallons of water to the spray tank. Start Sprayer and circulate water through system and check for leaks.
10. Be sure to read start up and shutdown instructions for Clean-load assembly before using it with chemicals. When working with chemicals always wear protective clothing, goggles and gloves.

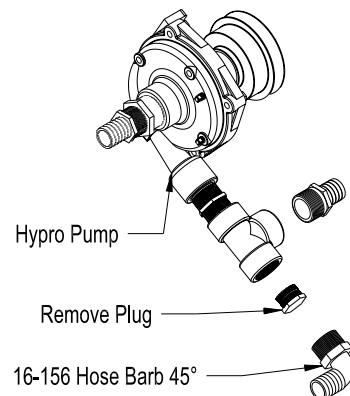


15-620 CHEMICAL CLEAN-LOAD® DRAWING

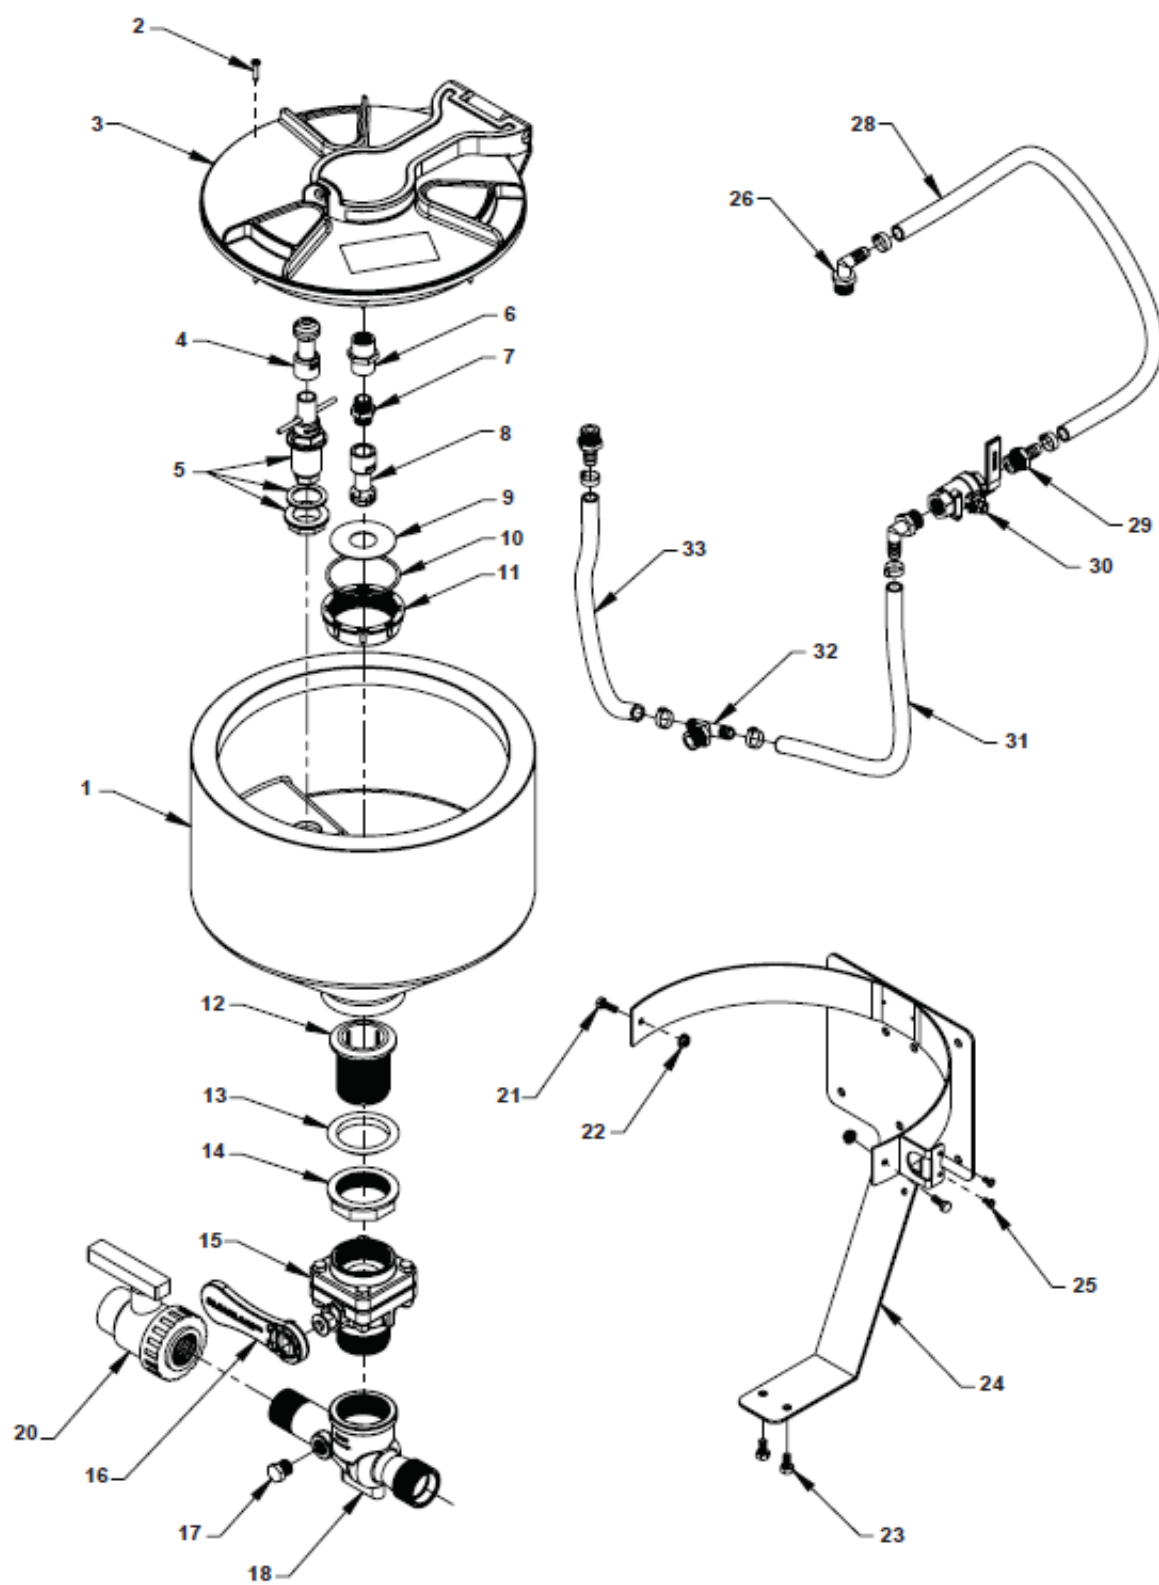

15-620 CHEMICAL CLEAN-LOAD® PARTS LIST

REF#	PART#	DESCRIPTION	QUANTITY
1	15-620-21	Tank	1
2		Screw, #6 x 1"	8
3	15-620-02	Tank Lid	1
4	15-620-22	ProClean Container Nozzle	1
5	15-620-23	ProClean Push Valve Assembly	1
	15-620-19	Tank Rinse	1
	15-620-20	Gasket, 1"	1
6		1/2 x 1/2 FNPT Coupler	1
7		1/2 x 1/2 Thread Nipple	1
8		ProClean Tank Wash Nozzle	1
9		Splash Retainer	1
10		O-ring Breather	1
11		Nut, Breather	1
12	15-620-18	Drain Head, 2"	1
13	15-620-17	Gasket: 2", Tapered	1
14	15-620-16	Locking Ring, 2"	1
15	15-620-12	Ball Valve	1
	15-620-15	Gasket: 2" BSP	1
16	15-620-13	Handle, Clean-load	1
17		1/2 MNPT PP Hex Plug	1
18	15-620-04	Clean-load Eductor	1
20	15-620-14	Ball Valve, 1 1/4" Single Union	1
21		Screw	2
22		Flange Nut	2
23		Hex Head Screw	2
24	15-620-01	Frame, Back Mount	1
25		Phillips Head Screw	2
26	15-620-11	Elbow 1/2"	2
28	15-620-08	Hose, Tank Rinse, 1/2" EPDM	1
29	15-620-09	HB, 1/2 MNPT x 1/2 HB	2
30	15-620-10	Valve, SS Tank Rinse	1
31	15-620-06	Hose, Valve Feeder, 1/2" EPDM	1
32	15-620-05	HB Tee, 1/2 MNPT to 1/2 HB	1
33	15-620-07	Hose, Bottle Rinse, 1/2" EPDM	1

15-835 TANK RINSING DEVICE

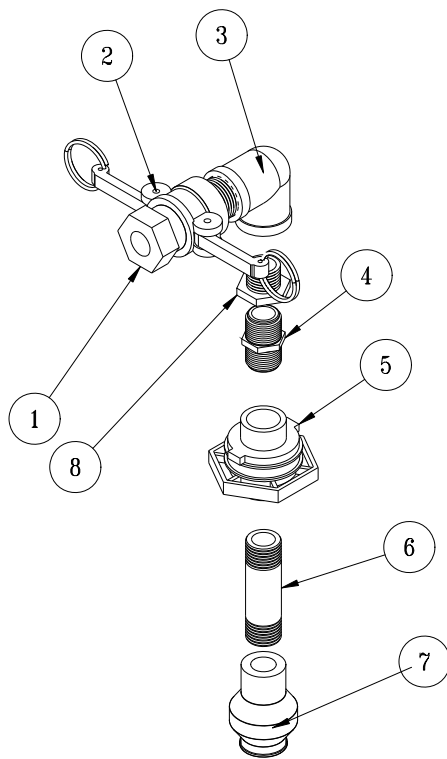


REF#	PART#	DESCRIPTION	QUANTITY
1	16-961	1" Adapter	1
2	16-962	1" Coupler	1
3	16-864	1" FTP Elbow	1
4	16-158	Close Nipple	1
5	16-150	Double Thread Fitting	1
6	16-172	4" Nipple	1
7	15-834	Tank Rinsing Nozzle	1
8	16-163	Reducer Bushing	1

Drill 1-3/4" hole 5" from outside edge of cover.

Install Tank Rinsing kit as shown, with the Double Thread Fitting (Ref 5) going into the cover.


Basket Must be removed During Use.

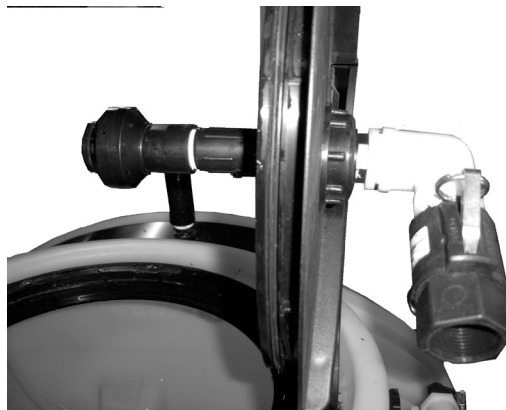

DECAL LIST

This is a list of decals located on the Spray Star 1000. Part number, description and location will help in reordering a decals.

A	10-367	Decal, Spray Star 1000	Right and Left Tank Sides
B	25-356	Decal, Tire Pressure 20psi	All Wheels
C	25-352	Decal, Bypass Valve	Hang Tag on pump
D	25-298	Decal, Warning Hot	Tailpipe Guard
D	25-286	Decal, Crush Pinch	Hood - Back Edge, Both Sides
			RH Control Panel
E	15-719	Decal, Speed Control	LH Control Panel
	27-093	Decal, Oil Level	LH Control Panel
F	25-370	Decal, 88 dba	LH Front Panel
	15-463	Decal, Spray Pump	LH Front Panel
G	15-672	Decal, Dash Panel	Dash Board
H	25-373	Decal, Smithco	Front Nose Cone
I	27-077	Decal, Smithco	Steering Wheel
J	10-414	Decal, Control Panel	RH Control Panel
K	25-277	Decal, Battery Warning	Seat Panel
L	14-803	Decal, Clean Agitation Screen	Line Strainer

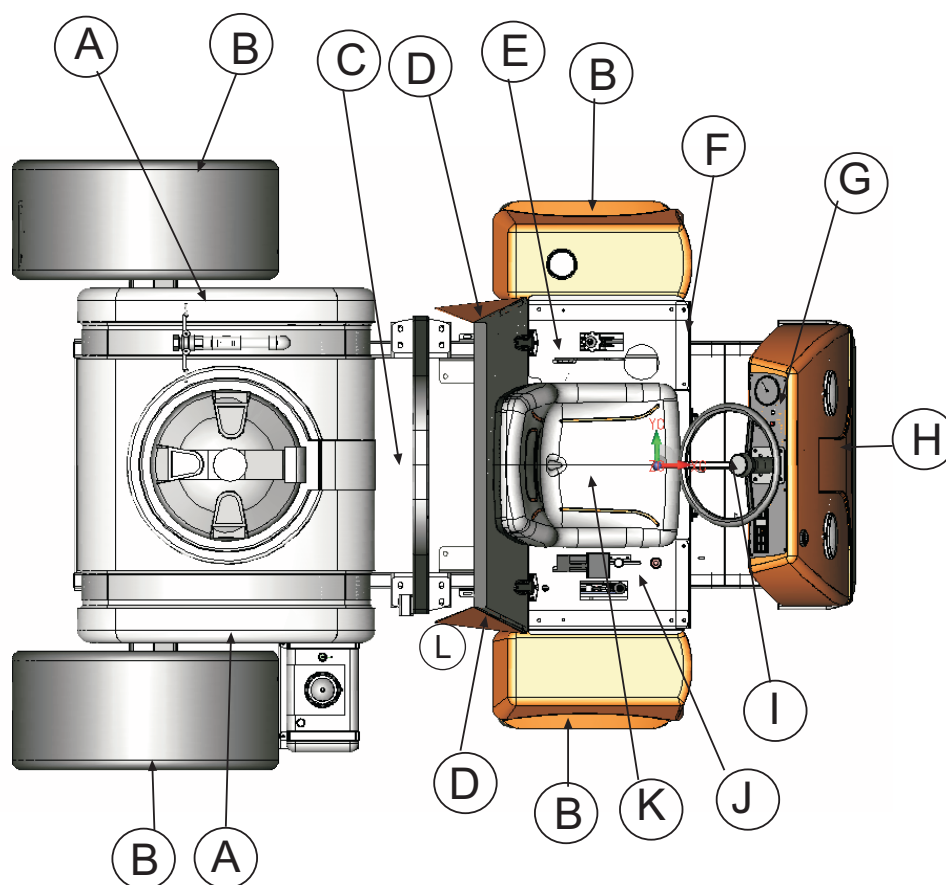

QUICK REFERENCE REPLACEMENT PARTS

REPLACEMENT FILTERS

23-031	Hydraulic Oil Filter Element 25 Micron	
10-575-04	Engine Oil Filter	Briggs# 492932
10-575-02	Air Filter	Briggs# 692519
10-575-03	Air Filter Pre-Cleaner	Briggs# 692520
50-403	In-Line Fuel Filter	

REPLACEMENT BELTS

42-359	Belt (engine to hydrostat pump)
15-704	Belt (engine to Hypro® Pump)

SEAL KITS

15-301	Orbital
15-301-01	Repair Kit
77-263	Hydraulic Cylinder
14-530	Seal Kit
10-510	Wheel Motor
14-080	Seal Kit
45-373	DDC20 Piston Pump
45-373-01	Overhaul Kit
16-998	Hypro® Pump
16-967	Silicone - Carbon Seal Kit

FLUIDS

Engine Oil	SAE 10W-40 API Service SJ or higher Motor Oil
Hydraulic Fluid	SAE 10W-40 API Service SJ or higher Motor Oil

OTHER PARTS

13-488	Key Switch
76-310	Key Set
14-532	Hinged Cover On Tank with Gasket
16-953-01	Gasket For Cover
16-169	Strainer Basket
15-818	#75 Fitting O-ring
15-817	#50 Fitting O-ring
Spark Plugs	Champion type RC12YC (Gap 0.030 inch (.76 mm))

The Smithco Commercial Products Two-Year Limited Warranty

Smithco, Inc. (Smithco) warrants your 2016 or newer Smithco Commercial Product ("Product") purchased after October 1, 2016 to be free from defects in materials or workmanship for the period of time listed below. Where a warrantable condition exists, Smithco will repair the Product at no cost to you including diagnosis, labor (at the Smithco standard labor rate, subject to the Smithco flat rate schedule), and parts.

Warranty Duration is:

- (1) Two years, 1500 operational hours* from the date of delivery to the original purchaser or Five years from the date of original manufacturer of the product, whichever occurs first. (*Products equipped with hour meter).
- (2) Products used in rental situations are covered for 90 days from date of delivery to original user/renter.

Owner Responsibilities:

As the Product owner, you are responsible for required maintenance and adjustments stated in your Owner's Manual. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim. **You are particularly responsible to train all present and future operators of this product on the safe operation of this product at your location.**

Instructions for Obtaining Warranty Service:

You are responsible for notifying the Authorized Smithco Products Distributor from whom you purchased the Product as soon as you believe a warrantable condition exists and not later than 30 days from discovery of the condition.

If you need help locating an Authorized Smithco Distributor, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Smithco Product Support Department
200 West Poplar Ave.
Cameron, Wisconsin 54822
Telephone: 800-891-9435 E-Mail: ProductSupport@Smithco.com

Maintenance Parts:

Parts scheduled for replacement as required maintenance ("Maintenance Parts"), are warranted for the period of time up to the scheduled replacement time for that part.

Items/Conditions Not Covered:

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. The items/conditions listed below are not covered by this warranty:



Product failures which result from the use of non-Smithco replacement parts, or from installation and use of add-on, modified, or unapproved accessories are not covered.



Product failures which result from failure to perform required maintenance and/or adjustments are not covered.



Product failures that result from operating the Product in an abusive, negligent or reckless manner are not covered.



This warranty does not apply to parts subject to consumption through use, unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to: blades, tines, teeth, scarifiers, rakes, plates, wear plates, castor wheels, tires, batteries, filters, belts, nozzles, etc.



This warranty does not apply to failures caused by outside influence. Items considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved coolants, lubricants, additives, or chemicals, etc.



This warranty does not apply to normal "wear and tear" items. Normal "Wear and Tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.



Smithco may require the return of failed parts or components in order to determine the validity of any warranty claim.



Smithco will not be obligated to replace components of other manufacturers if inspection by the original component manufacturer indicates that failure was due to normal wear and tear, expected consumption through use or improper care or service.

Other Legal Disclaimers:

The above remedy for product defects through repair or replacement by an authorized Smithco distributor or dealer is the purchaser's sole remedy for any defect. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

THERE ARE NO OTHER EXPRESS WARRANTIES OTHER THAN THOSE SET FORTH ABOVE. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE LIMITED WARRANTIES CONTAINED HEREIN.

Some states may not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

THE SMITHCO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT, INCLUDING ANY COST OR EXPENSE OF PROVIDING A SUBSTITUTE PRODUCT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states may not allow the exclusion of indirect, incidental or consequential damages, so the above exclusion may not apply to you.

Smithco neither assumes, nor authorizes any person to assume for it, any other liability in connection with the sale or use of this product.

